


COMPOUND SEMICONDUCTOR

Three-Fives and Silicon Heterostructures

March 2003 Volume 9 Number 2

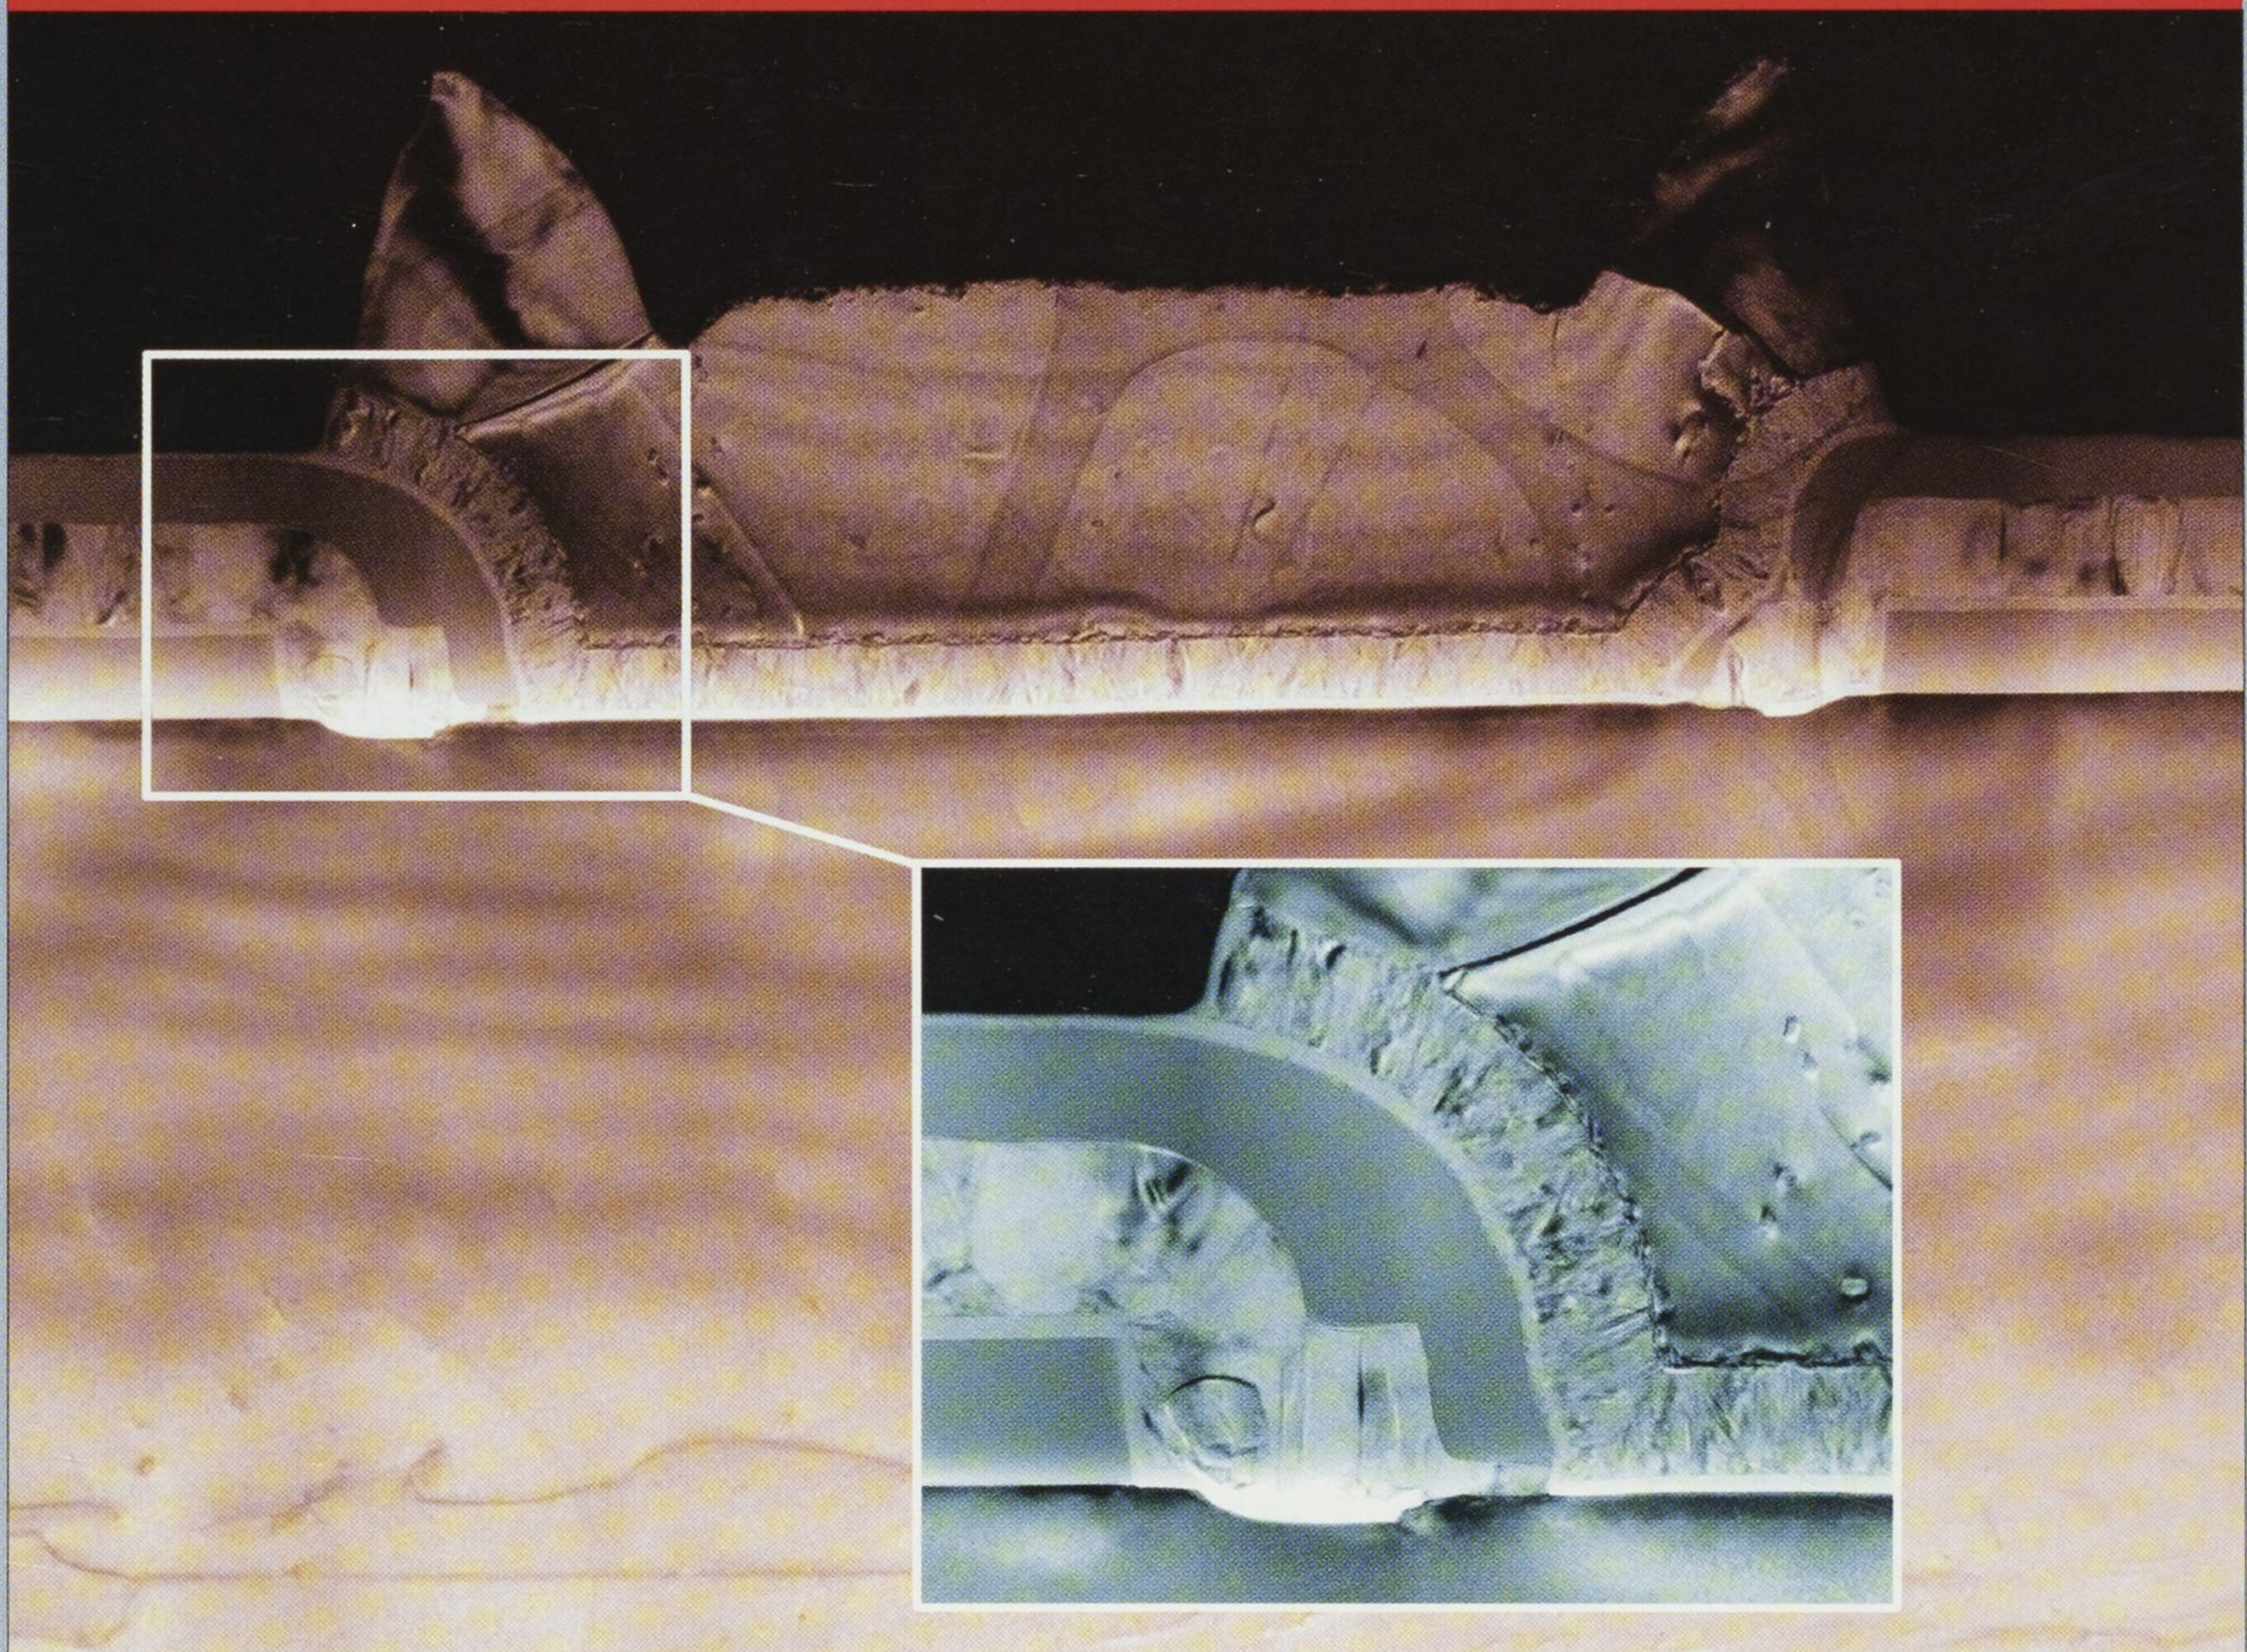

CHARACTERIZATION
Material secrets revealed by
FIB, PL and STEM techniques

ALSO INSIDE

**More consolidation
in opto components**


**Dow Corning buys
SiC maker Sterling**

**High-power lasers
and IR cameras**

There's no substitute for experience.




...seeing **is** believing

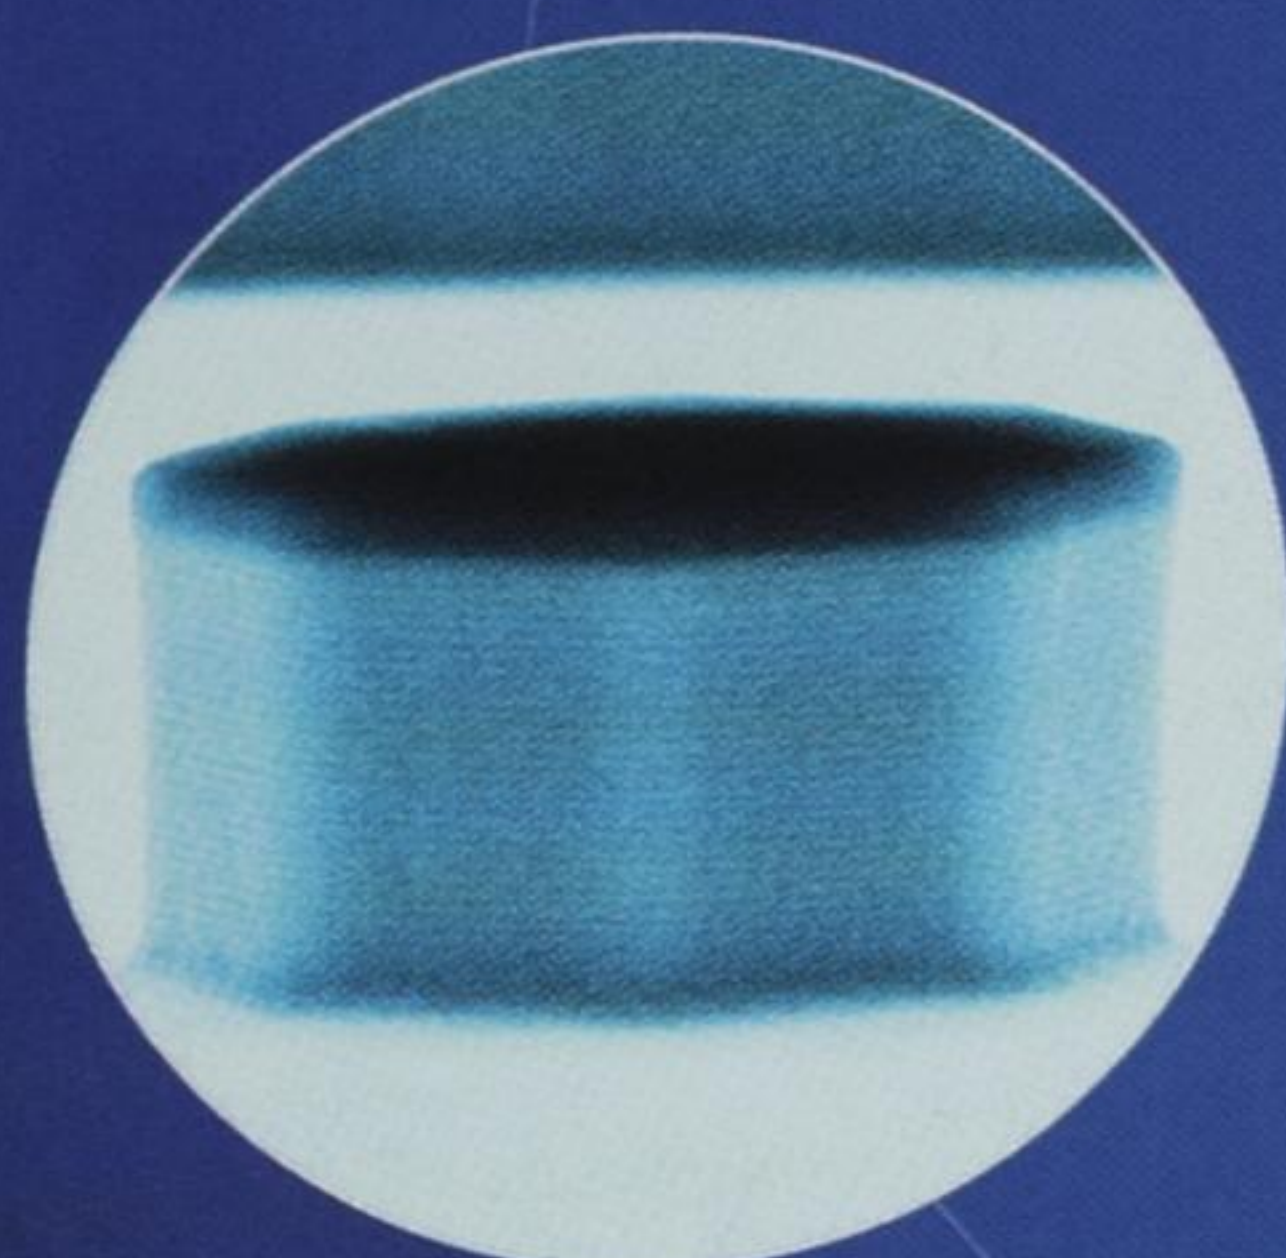


InP-based
VCSEL etch


*(Courtesy of Honeywell VCSEL
Optical Products)*

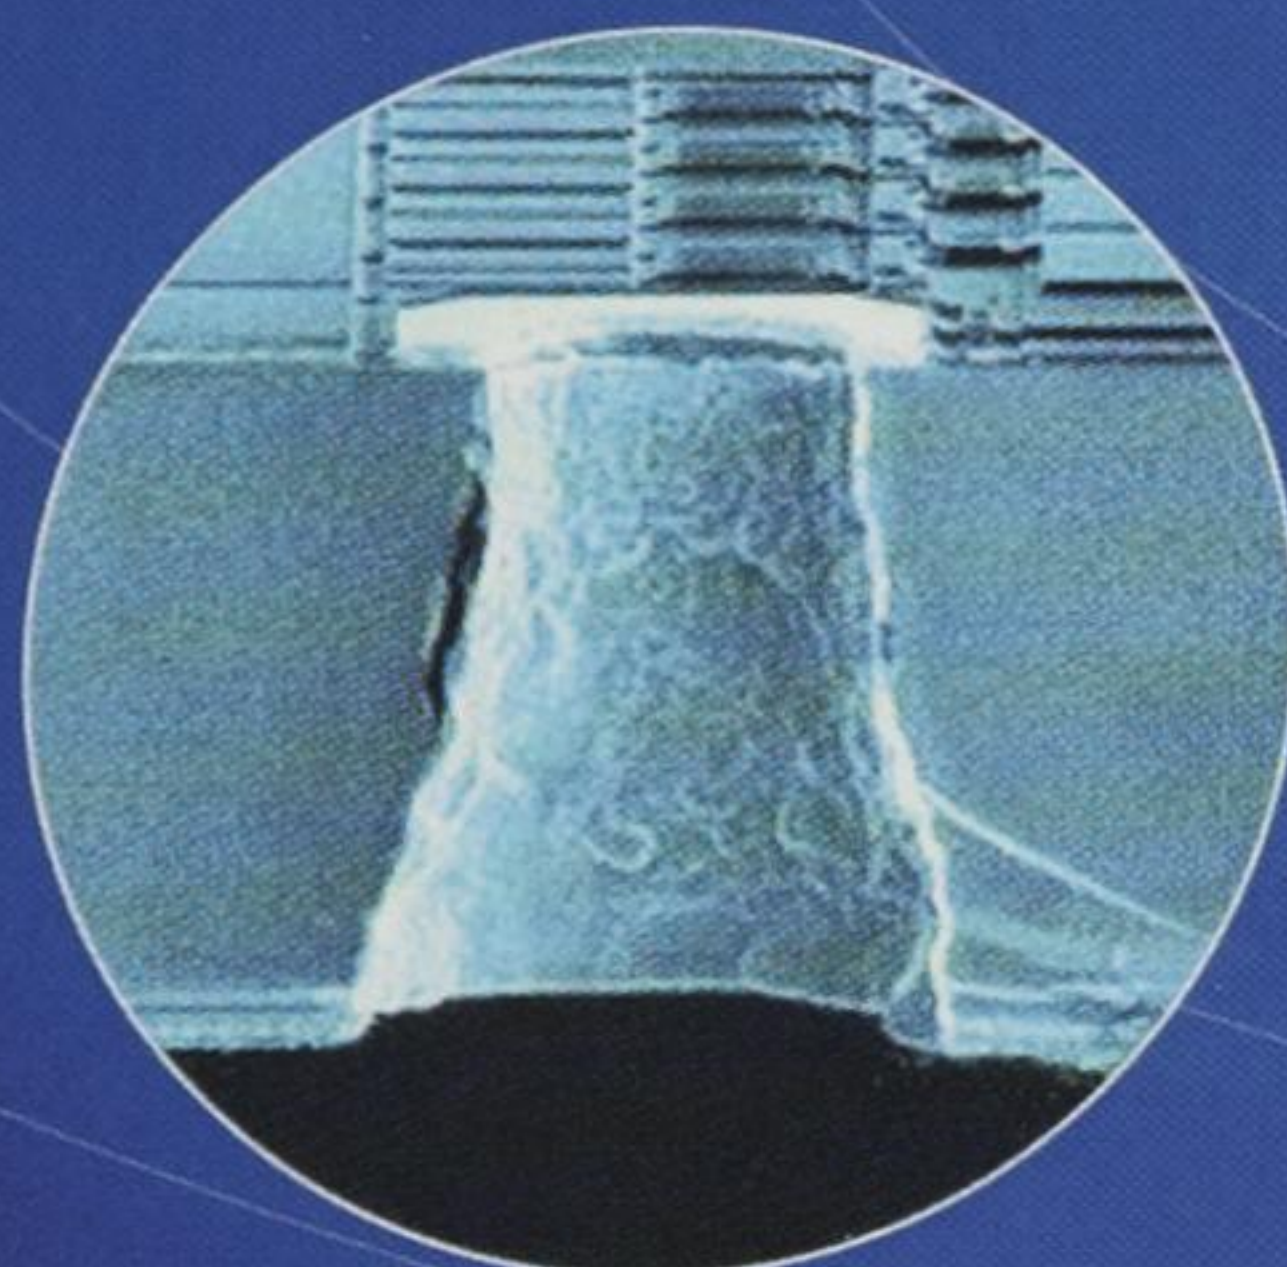

GaAs
via etch

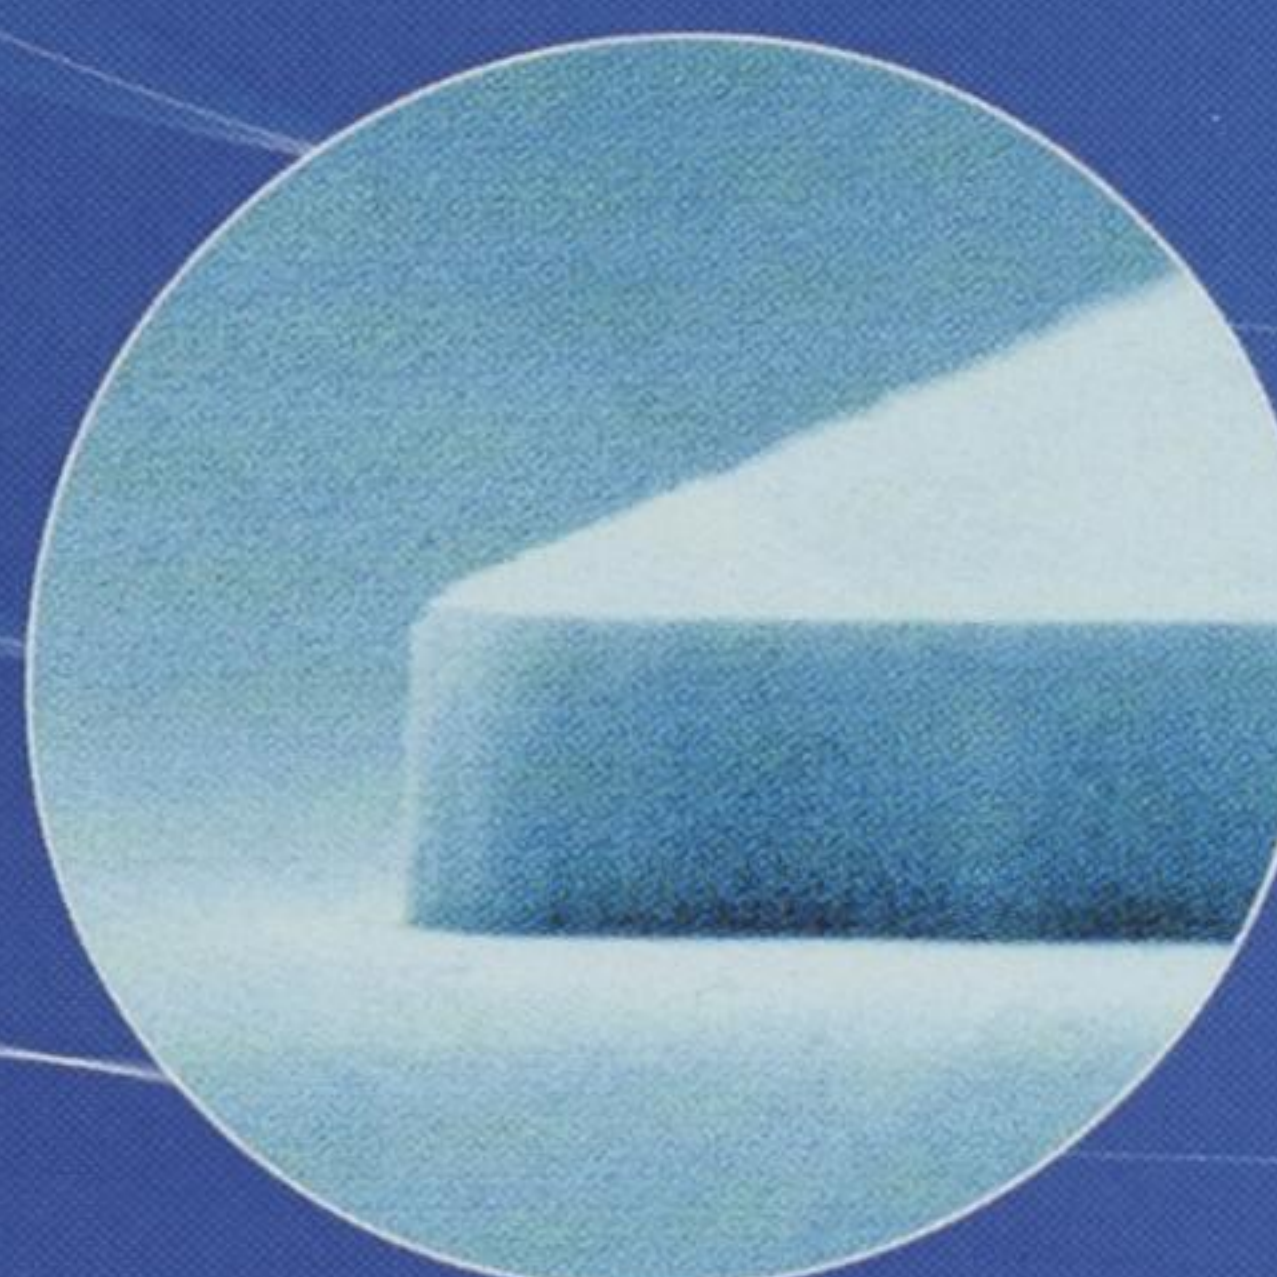

GaN
facet etch

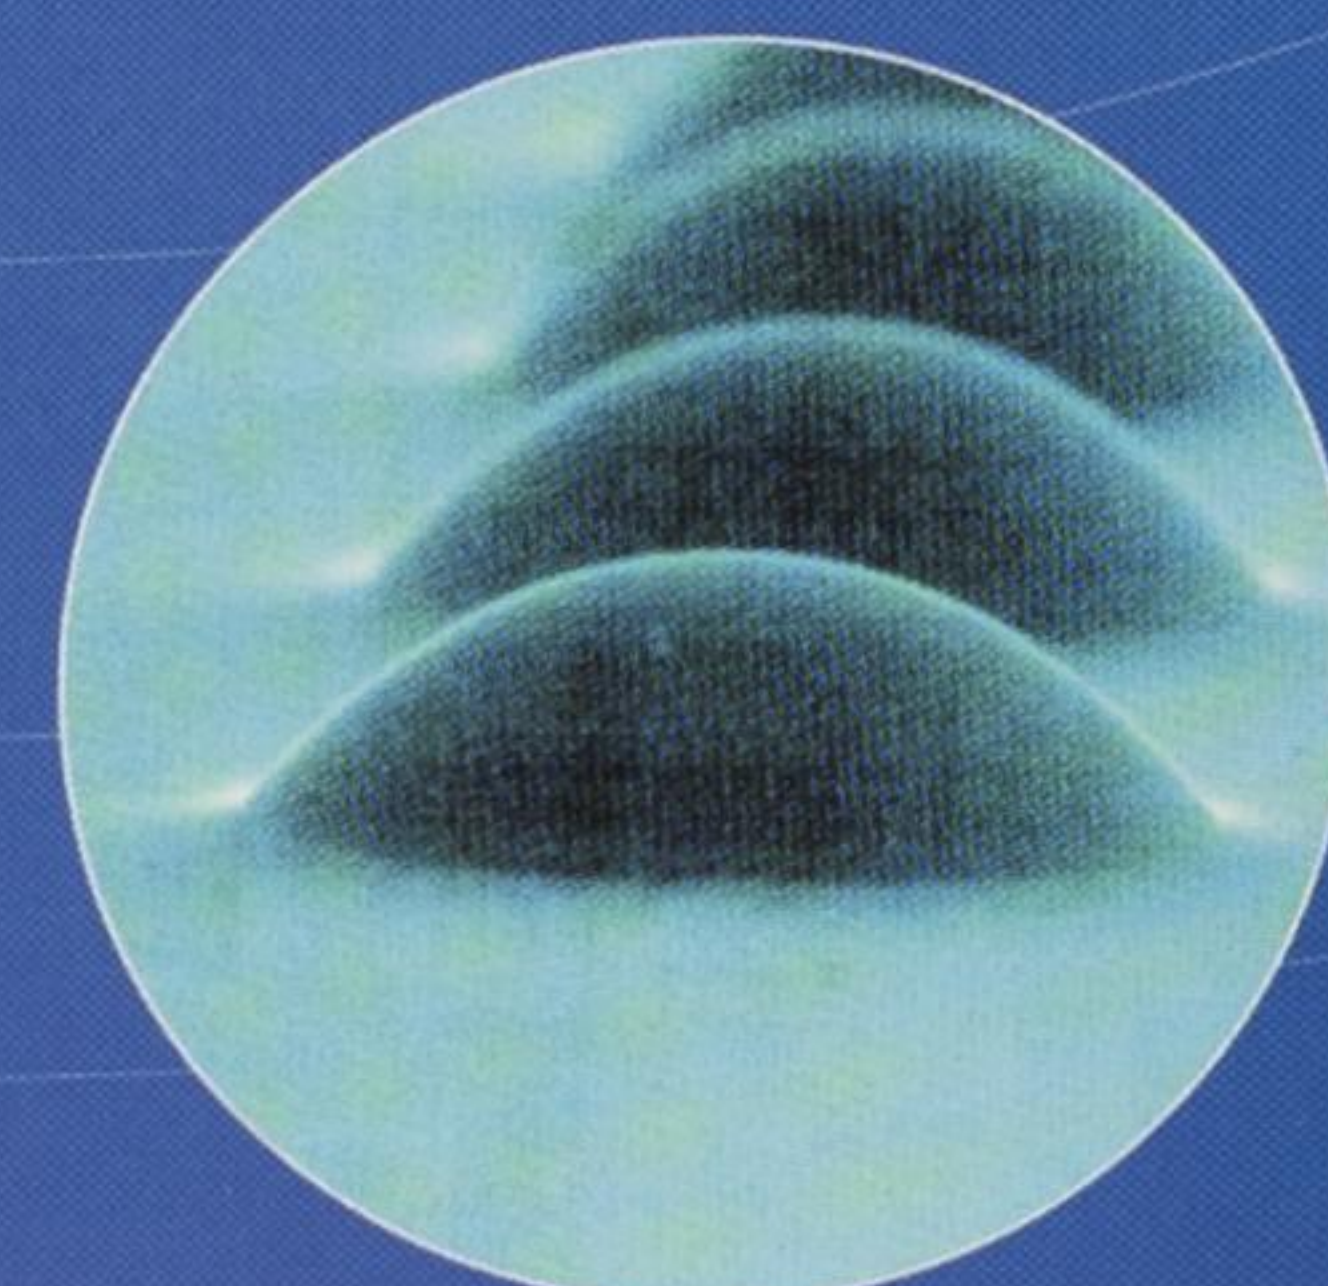

GaP
microlenses

Having supplied specialist plasma processing equipment to manufacturers in compound semiconductor markets for almost 20 years, we know how to develop cutting-edge etch and deposition processes to meet a customer's specific requirements. We also know how to achieve a smooth transfer of these characterized processes from R&D to production platforms when volumes ramp up.

Our customers realize that you don't accumulate this knowledge overnight, and in partnering with us, they recognize that there is no substitute for experience.

Contact your local STS office to understand how we can accelerate your development cycles and reduce your time to market.

STS...seeing IS believing

- Established processes for via holes, LASERs (including VCSELs) LEDs, lenses, waveguides and photonic devices
- Experience with a wide range of material systems
- Robust, reliable, production-proven equipment platforms
- Accurate process control for gate etching
- High throughput processes for through-wafer etching
- Smooth sidewalls for complex epitaxial structures

SEE US AT SEMICON EUROPA 2003 - BOOTH # A2.600

For details of your local STS representative and worldwide sales locations, please visit: www.stsystems.com

• Compound Semiconductor • MEMS • Photonics • Data Storage

Surface Technology Systems plc - Imperial Park, Newport, NP10 8UJ UK.
Tel:+44 1633 652400 Fax:+44 1633 652405 Email:enquiries@stsystems.co.uk




SURFACE TECHNOLOGY SYSTEMS


COMPOUND SEMICONDUCTOR

Three-Fives and Silicon Heterostructures


MARCH 2003 VOLUME 9 NUMBER 2

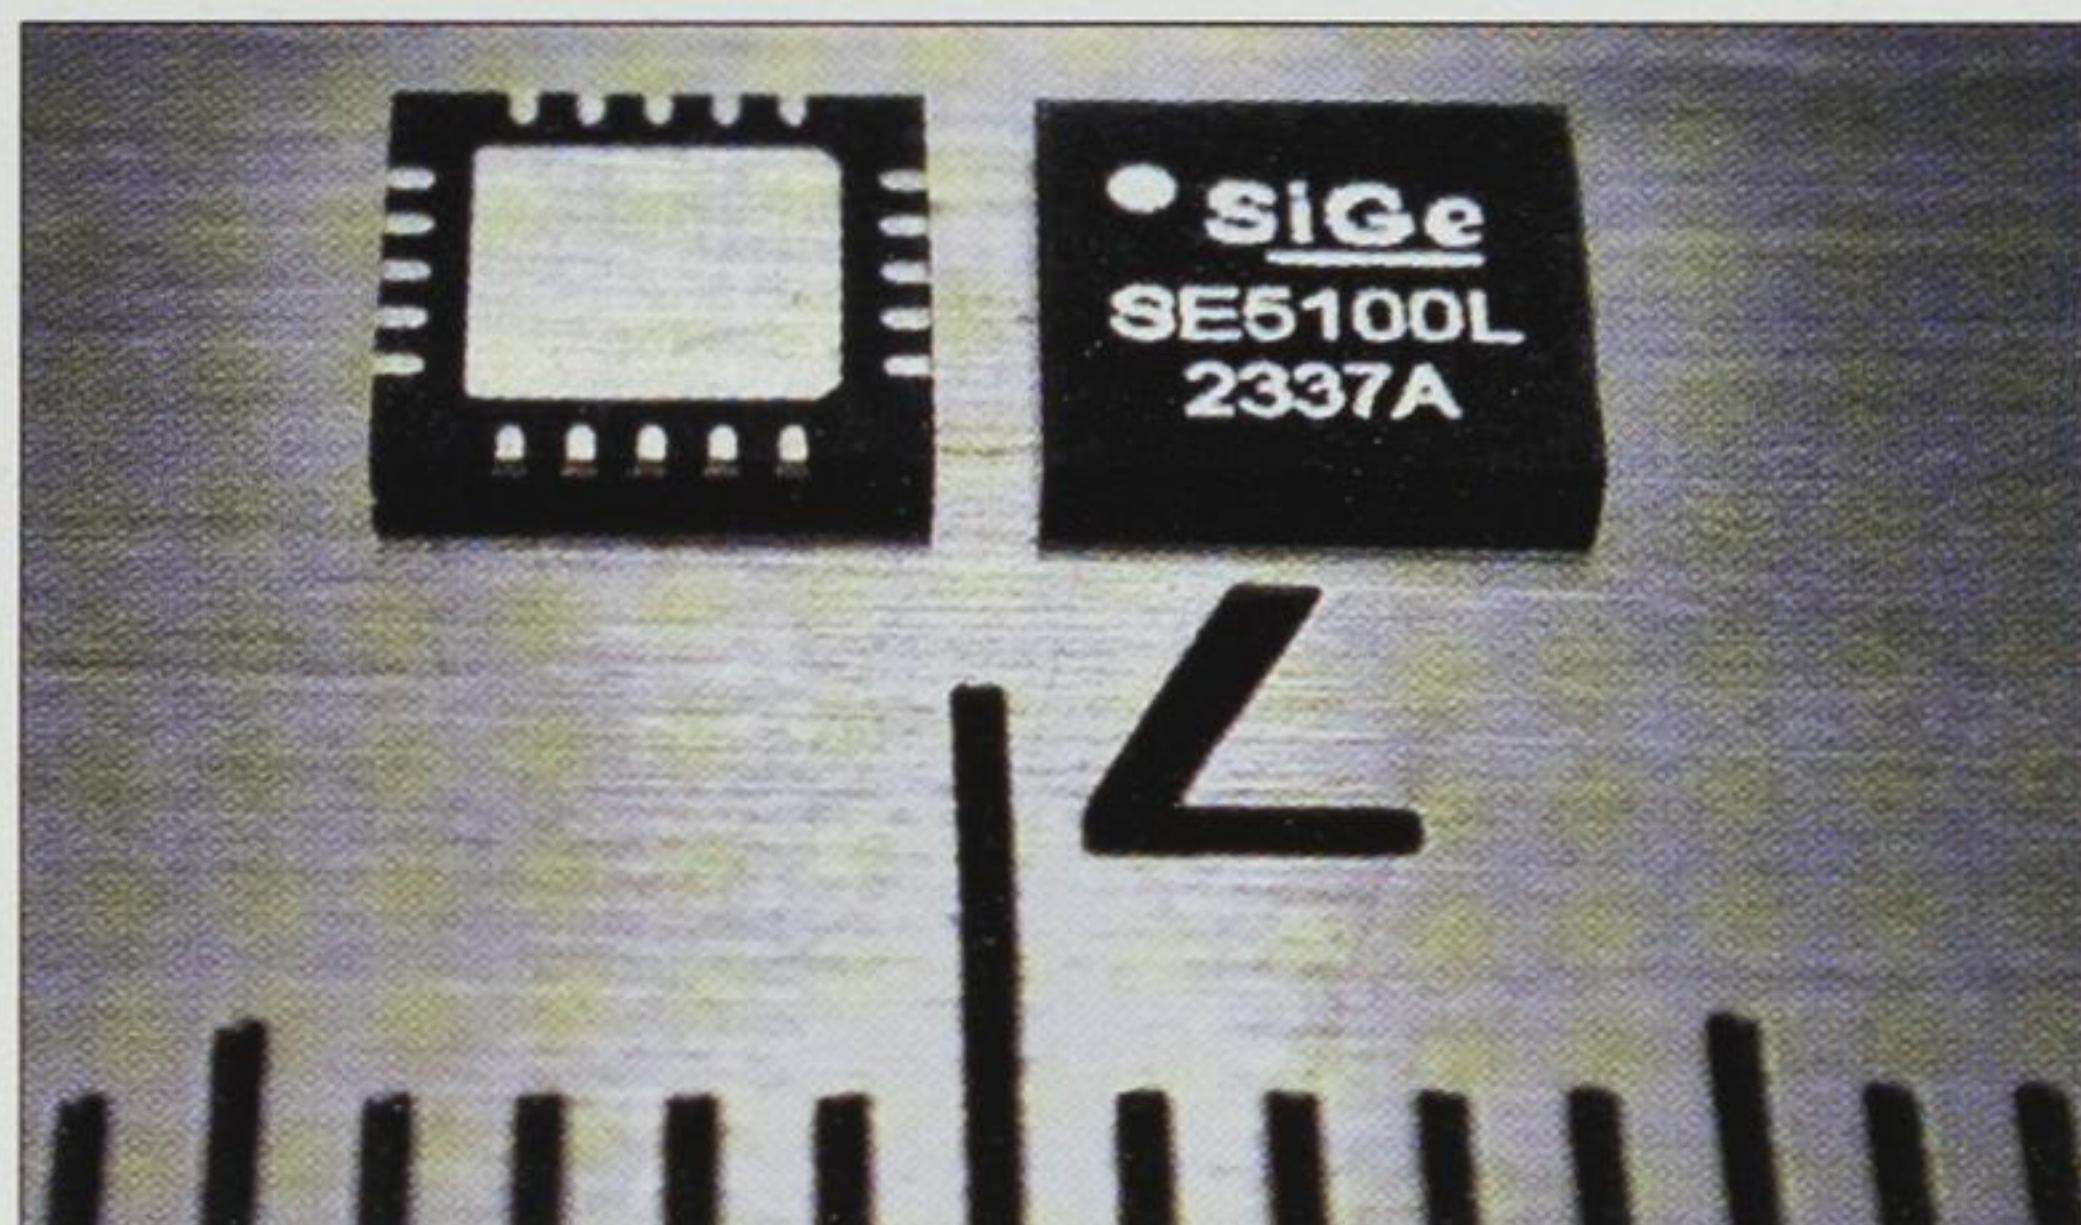

Will SiGe BiCMOS displace GaAs as the technology of choice in handset PAs? **p10**

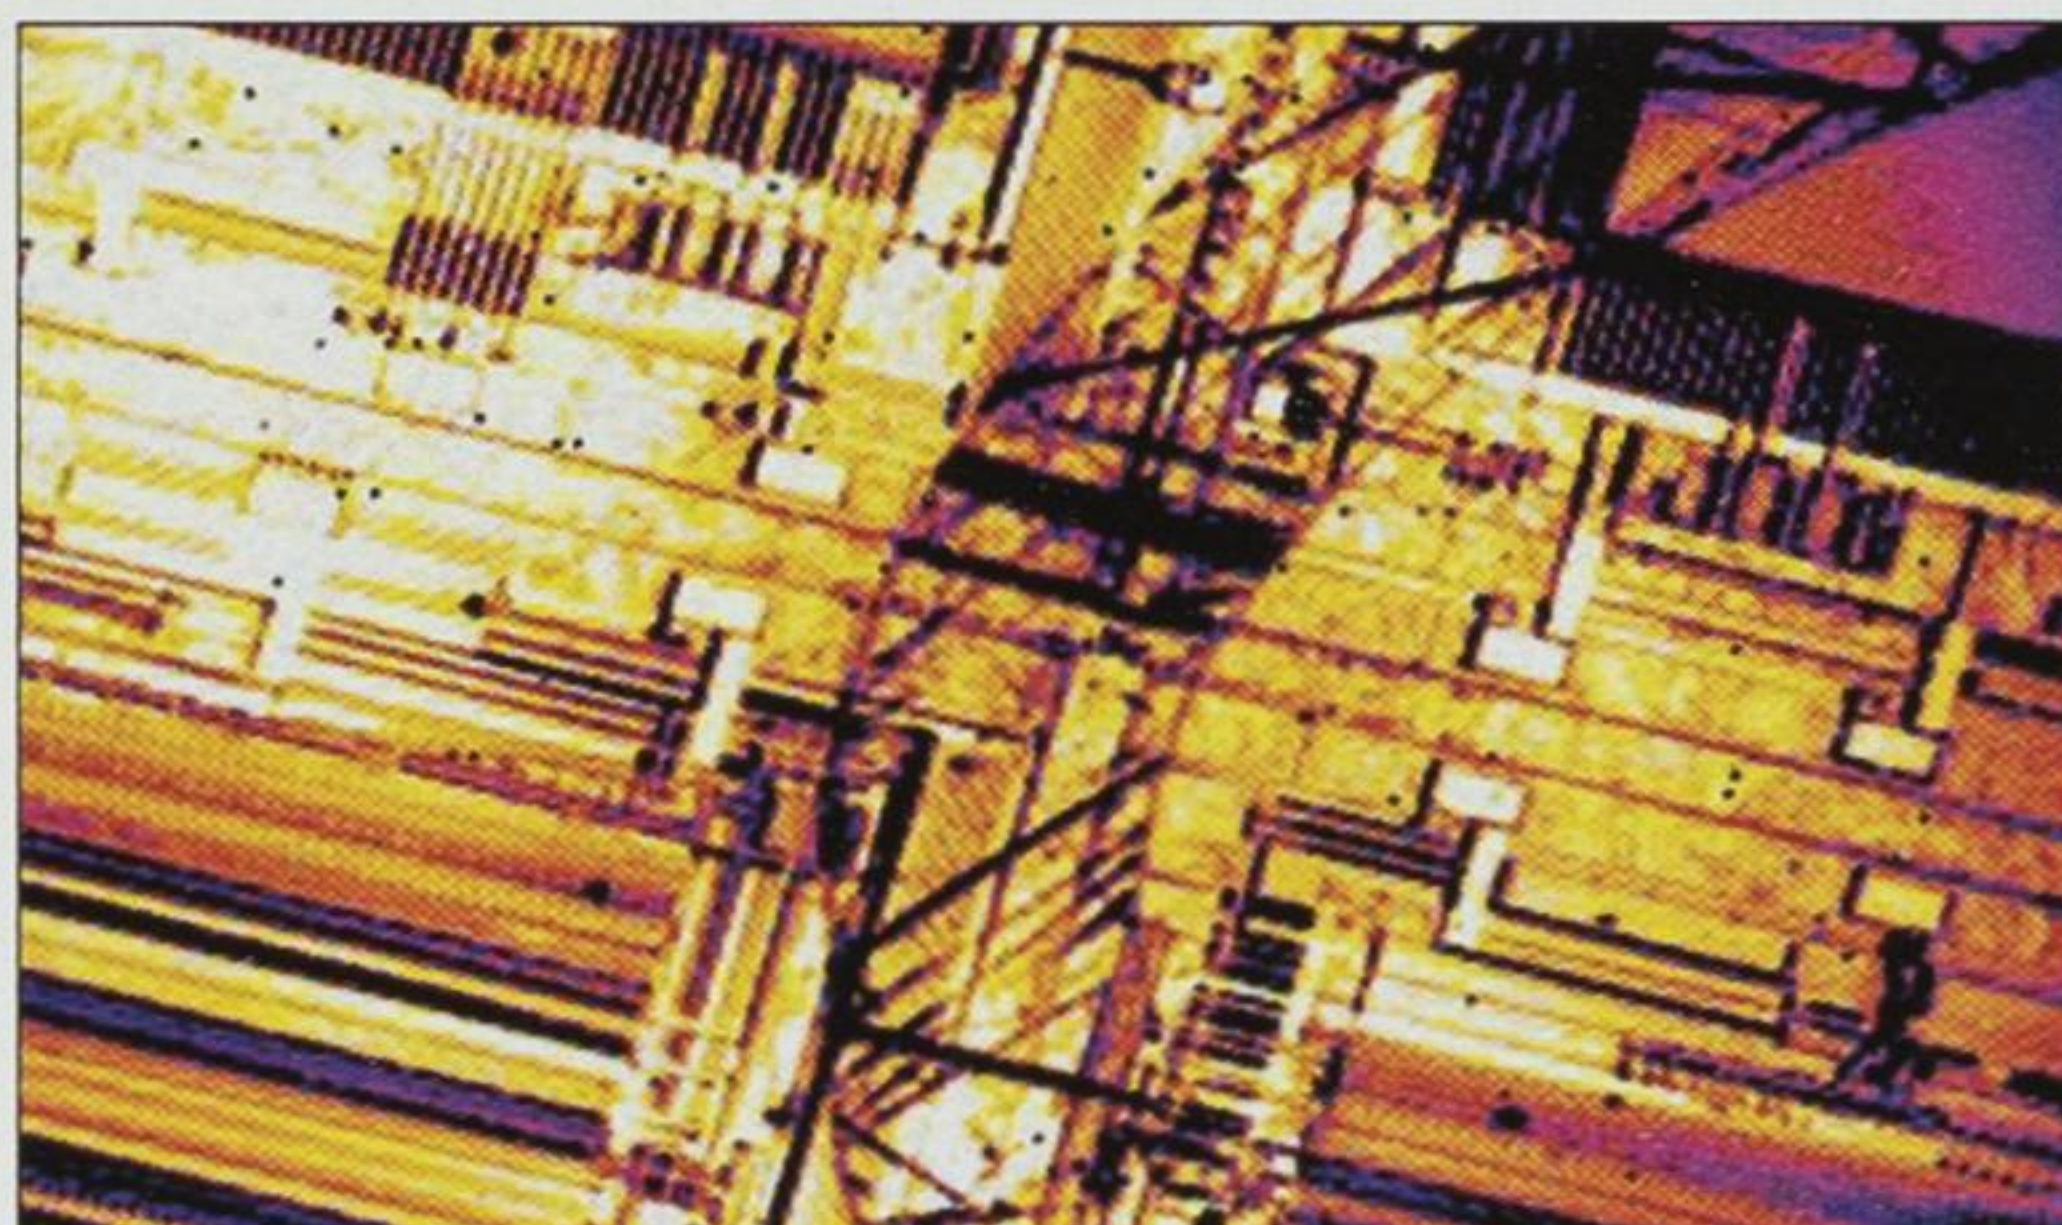

NIR imaging has a variety of applications including CMOS IC wafer inspection **p49**

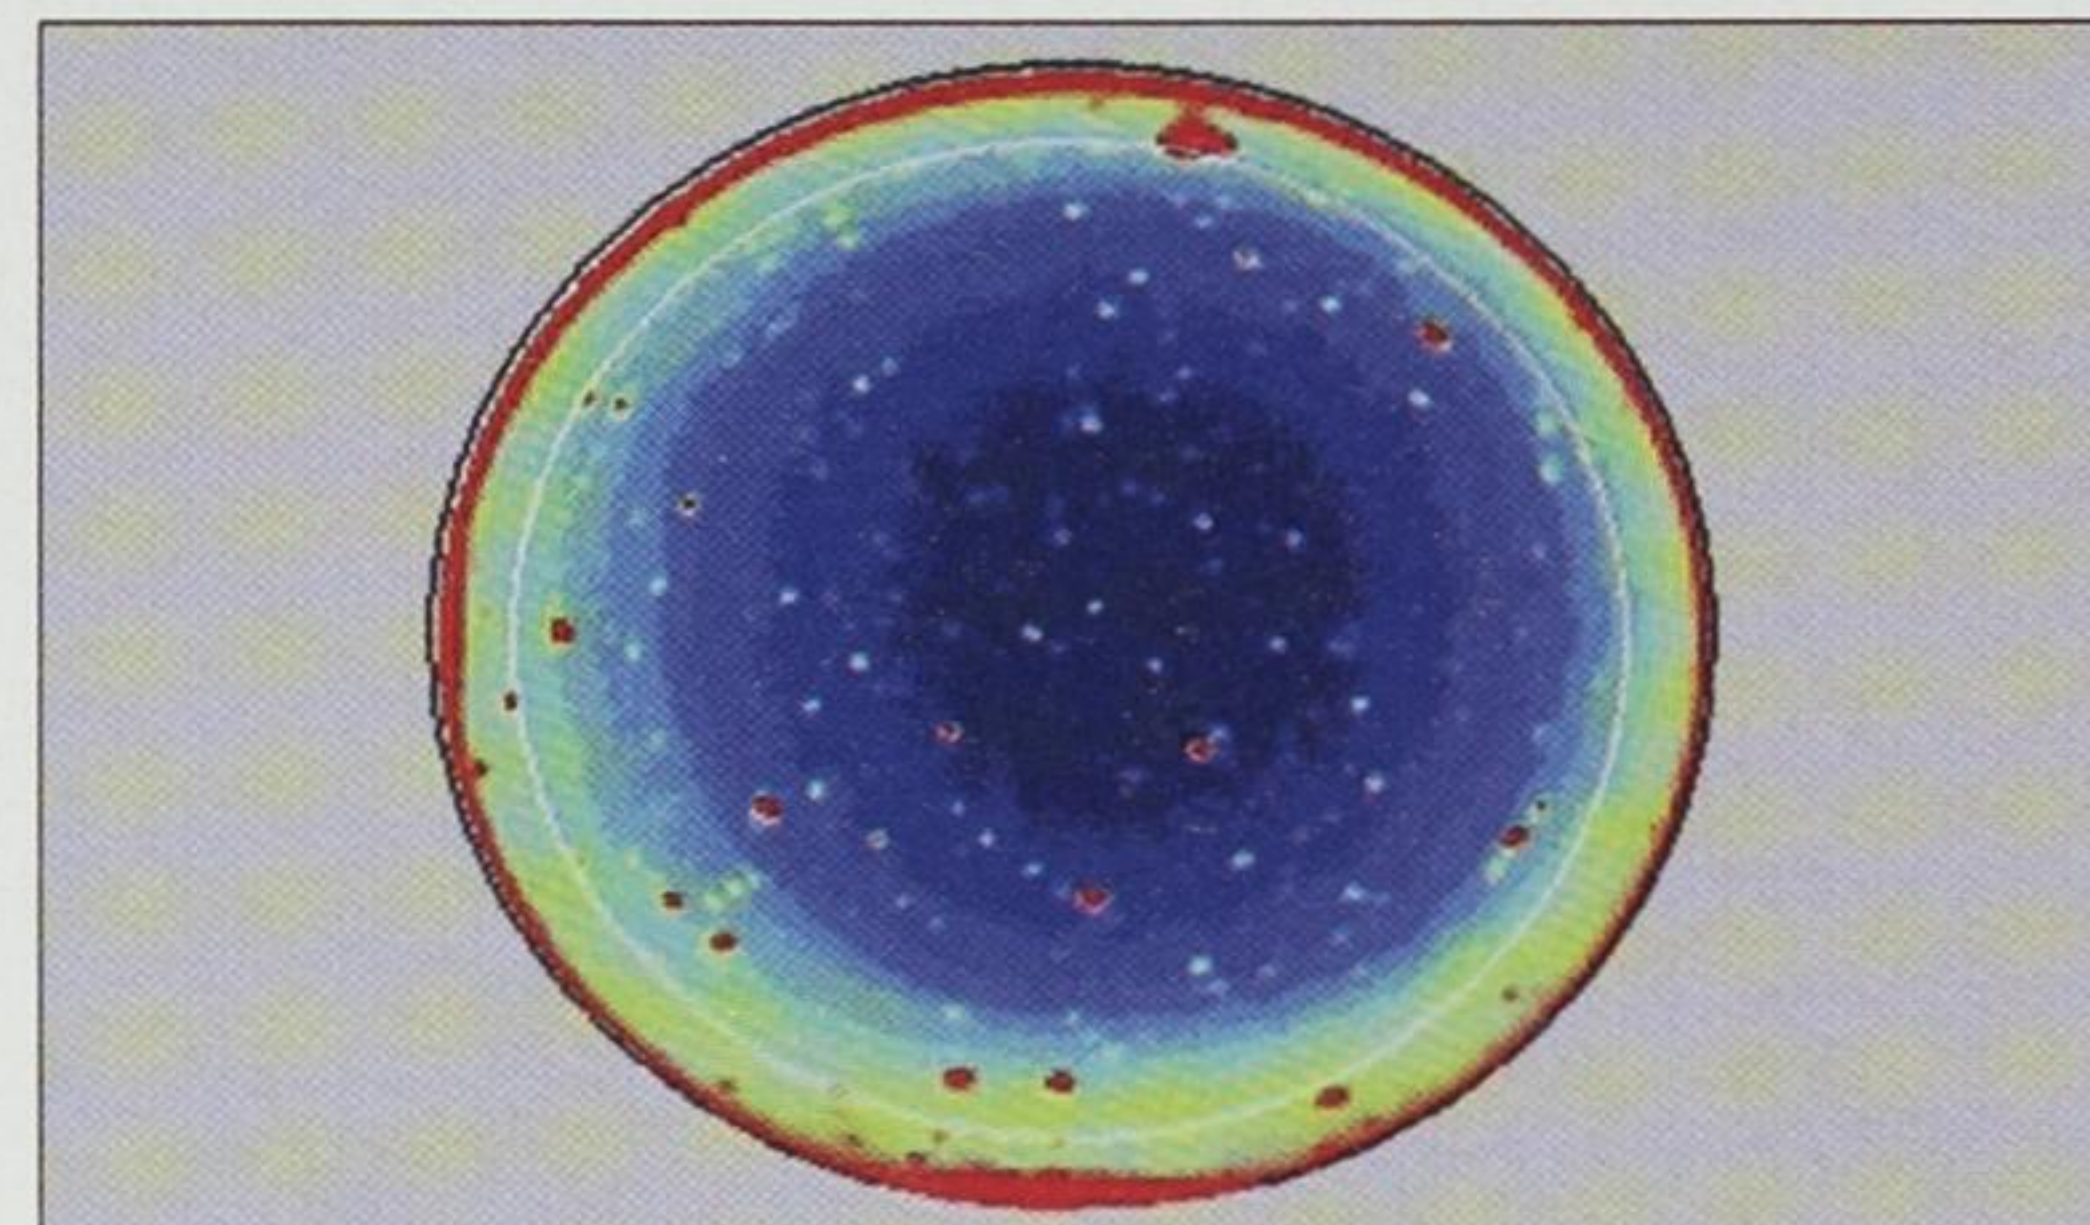

Using a 266 nm pulsed laser is improving PL for wide-bandgap materials analysis **p27**

NEWS

- 5** **Headline News** Optical component consolidation continues...Dow Corning purchases Sterling Semiconductor
- 9** **GaAs News** RFMD and Intel announce wireless compatibility...Skyworks launches dime-sized handset radio system
- 10** **Silicon Compounds** GaAs under threat from SiGe PAs...Jazz and ASMC take SiGe BiCMOS to China
- 12** **News from Asia** GaAs and GaP wafer shipments on the rise
- 15** **Market News** GaAs and SiGe IC markets to grow at 22% per year...Critical consumables market to double in the next five years
- 17** **LED News** HB-LED market reaches \$1.8 billion...Sanyo unveils phone with OLED display
- 18** **Fiber News**
- 19** **Nitride News**
- 21** **Materials & Equipment**

FEATURES

- 41** **It's not all Si at Albany**
Albany Nanotech is rapidly expanding its silicon processing facilities, but less well known are its III-nitride activities, writes Jon Newey.
- 43** **AlGaInAs broad-area lasers exhibit outstanding reliability**
Low failure rates at high output power make broad-area AlGaInAs lasers suitable for many applications, write Victor Rossin and colleagues.

49 Near-IR focal plane arrays improve camera performance

The recent improvement in performance of InGaAs-based detectors and cameras has opened up a wide range of applications, says Austin Richards of Indigo Systems.

COVER STORY: CHARACTERIZATION

25 FIB process takes materials analysis into new realms

The novel integration of ion and electron beams into one tool with precision sample-handling abilities is providing a one-stop shop for many characterization needs, writes Lloyd Peto of FEI Company.

30 Using photoluminescence for characterizing wide-bandgap materials and devices

Using a pulsed short-wavelength laser improves the accuracy and usefulness of photoluminescence for characterizing wide-bandgap semiconductors, according to Colm Mac Mahon and colleagues.

37 STEM provides the answers to some difficult questions

STEM is helping to reveal information about interfaces and diffusion during device processing that is almost impossible to determine using other techniques, write Jia-Sheng Huang and Cathy Vartuli.

DEPARTMENTS

- Index 2** **Advertising Index 2**
- Research Review 23** **Product Showcase 54**
- Recruitment 55** **Portfolio 56**

On the cover: A TEM image from a strained Si MOSFET sample prepared by focused ion beam milling (image courtesy of QinetiQ Advanced Analytics) – see p25.

COMPOUND SEMICONDUCTOR

Three-Fives and Silicon Heterostructures

Editor Tim Whitaker
tim.whitaker@iop.org
Tel: +44 117 930 1233; Fax: +44 117 925 1942

Technology editor Jon Newey
jon.newey@iop.org
Tel: +44 117 930 1192

Managing editor Marie Meyer

Publisher Sarah Chilcott
sarah.chilcott@iop.org
Tel: +44 117 930 1020

Advertising manager Dan Huckle
dan.huckle@iop.org
Tel: +44 117 930 1032; Fax: +44 117 930 1178

Advertising sales executive Joanna Hook
joanna.hook@iop.org
Tel: +44 117 930 1033; Fax: +44 117 930 1178

Production Ruth Aspinall/Kerry Harding
Ad production Rachel Sermon/Joanne Scriven
Circulation Jackie King
Art director Andrew Giaquinto
Technical illustrator Alison Tovey
Publishing director Richard Roe

Subscriptions

Available free of charge to qualifying individuals working at compound semiconductor fabs and foundries. For further information visit compoundsemiconductor.net/subscribe. Subscriptions for individuals not meeting qualifying criteria: individual \$132 US/€142; library \$300 US/€335. Orders to Compound Semiconductor, WDIS, Units 12 & 13, Cranleigh Gardens Industrial Estate, Southall, Middlesex UB1 2DB, UK. Tel: +44 208 606 7516; Fax: +44 208 606 7303. General enquiries: compoundsemi@iop.org.



Editorial board

Colombo Bolognesi Simon Fraser University (Canada); **Steven DenBaars** University of California at Santa Barbara (USA); **Andrew Johnson** QinetiQ (UK); **Robert Metzger** Georgia Institute of Technology (USA); **Rodney Moss** Agilent Fiber Optic Components (UK); **Shuji Nakamura** University of California at Santa Barbara (USA); **Dwight Streit** TRW (USA); **Toby Strite** JDS Uniphase (Switzerland); **Jacob Tarn** Epistar (Taiwan); **Gary Tomkins** Nortel Networks (Canada); **Andreas Waag** University of Ulm (Germany); **Gary Wicks** University of Rochester (USA); **Peter Zory** University of Florida (USA)

©2003 IOP Publishing Ltd. All rights reserved.

US mailing information: *Compound Semiconductor* (ISSN 1096-598X) is published 11 times a year for \$95 by Institute of Physics Publishing, Dirac House, Temple Back, Bristol BS1 6BE, UK. Periodicals postage paid at Middlesex, NJ 08846. POSTMASTER: send address corrections to Compound Semiconductor, c/o PO Box 177, Middlesex, NJ 08846. US agent: Pronto Mailers Association Inc, 200 Wood Avenue, PO Box 177, Middlesex, NJ 08846.


Institute of Physics PUBLISHING

Organization Index

Accent Optical Technologies	30	Jazz Semiconductor	12
Aculight	18	JDS Uniphase	43, 56
Aeronex	21	Kline and Company	15
Agere	5, 37	Kopin	56
Agilent	56	Lockheed Martin	24
Aixtron	21, 56	Max Planck Inst.	23
Albany Nanotech	41	Microchem	21
Alcatel Optronics	6, 56	Northlight Optronics	5
Anadigics	9, 56	NTT	23
ASMC	12	OCP	6
Atmel	12	Optospeed	18
ATMI	56	Ortel	5
AXT	56	Philips	9
Bandwidth9	6	Photodigm	18
Bede	56	Picogiga	56
Bookham Technology	56	Rensselaer Polytech.	23
Celeritek	56	RF Micro Devices	9, 56
Cree	19, 56	Riber	56
Crystal IS	23	Sanyo	17
DARPA	41	Semi South	19
DCA	21	Sensor Electronic Technology	23
Dow Corning	6	SiGe Semiconductor	10
Emcore	5, 21, 56	Sirenza Microdevices	56
EMF	21	Skyworks Solutions	9, 56
Endwave	56	Sterling Semiconductor	6
Ericsson	5	Strategies Unlimited	15, 17
FEI	25	Surface Technology Systems	56
Filtronic	56	Tegal	56
General Electric	24, 41	Thomas Swan Scientific Equipment	21
Gore	5	Toshiba	12
Hitachi Cable	23	Trikon	56
IBM	10	TriQuint	9, 56
IC Insights	15	University of Newcastle	12
Indigo	49	University of S. Carolina	23
Intel	9	Veeco	56
Intense Photonics	18	Vitesse	56
IQE	56	WIN Semiconductors	9

Advertisers' Index

Accent Optical Technologies	30, 35	JPSA	17
Addon	27	Lake Shore Cryotronics	35
Air Products	7	LayTec	35
Aixtron	3	Matheson TriGas	42
AXT	13	Nitride Semiconductors	46
Bandwidth Semiconductor	19	Opto Taiwan exposition	47
Bruker AKS	35	PANalytical	34
Cascade Scientific Ltd	35	QinetiQ	15, 35
Crystal Systems	19	Raboutet	50
DCA Instruments	8	RF Micro Devices	55
Emcore	11	Riber	IBC
EMF	28, 29	Rubicon Technology	4
Epichem	16, 44	SAES Pure Gas	51
FEI Company	24, 35	Samco	14
Freiberger Compound Materials	14	Shipley Metalorganics	48
GaAs Mantech conference	52	Sintec	14
Gatan UK	35	Surface Technology Systems	IFC
III-V Reclaim	33	Thomas Swan Scientific Equipment	36
IPRM conference	53	Unaxis	22
IQE	20, 39	Veeco	OBC
Ismeca	40		

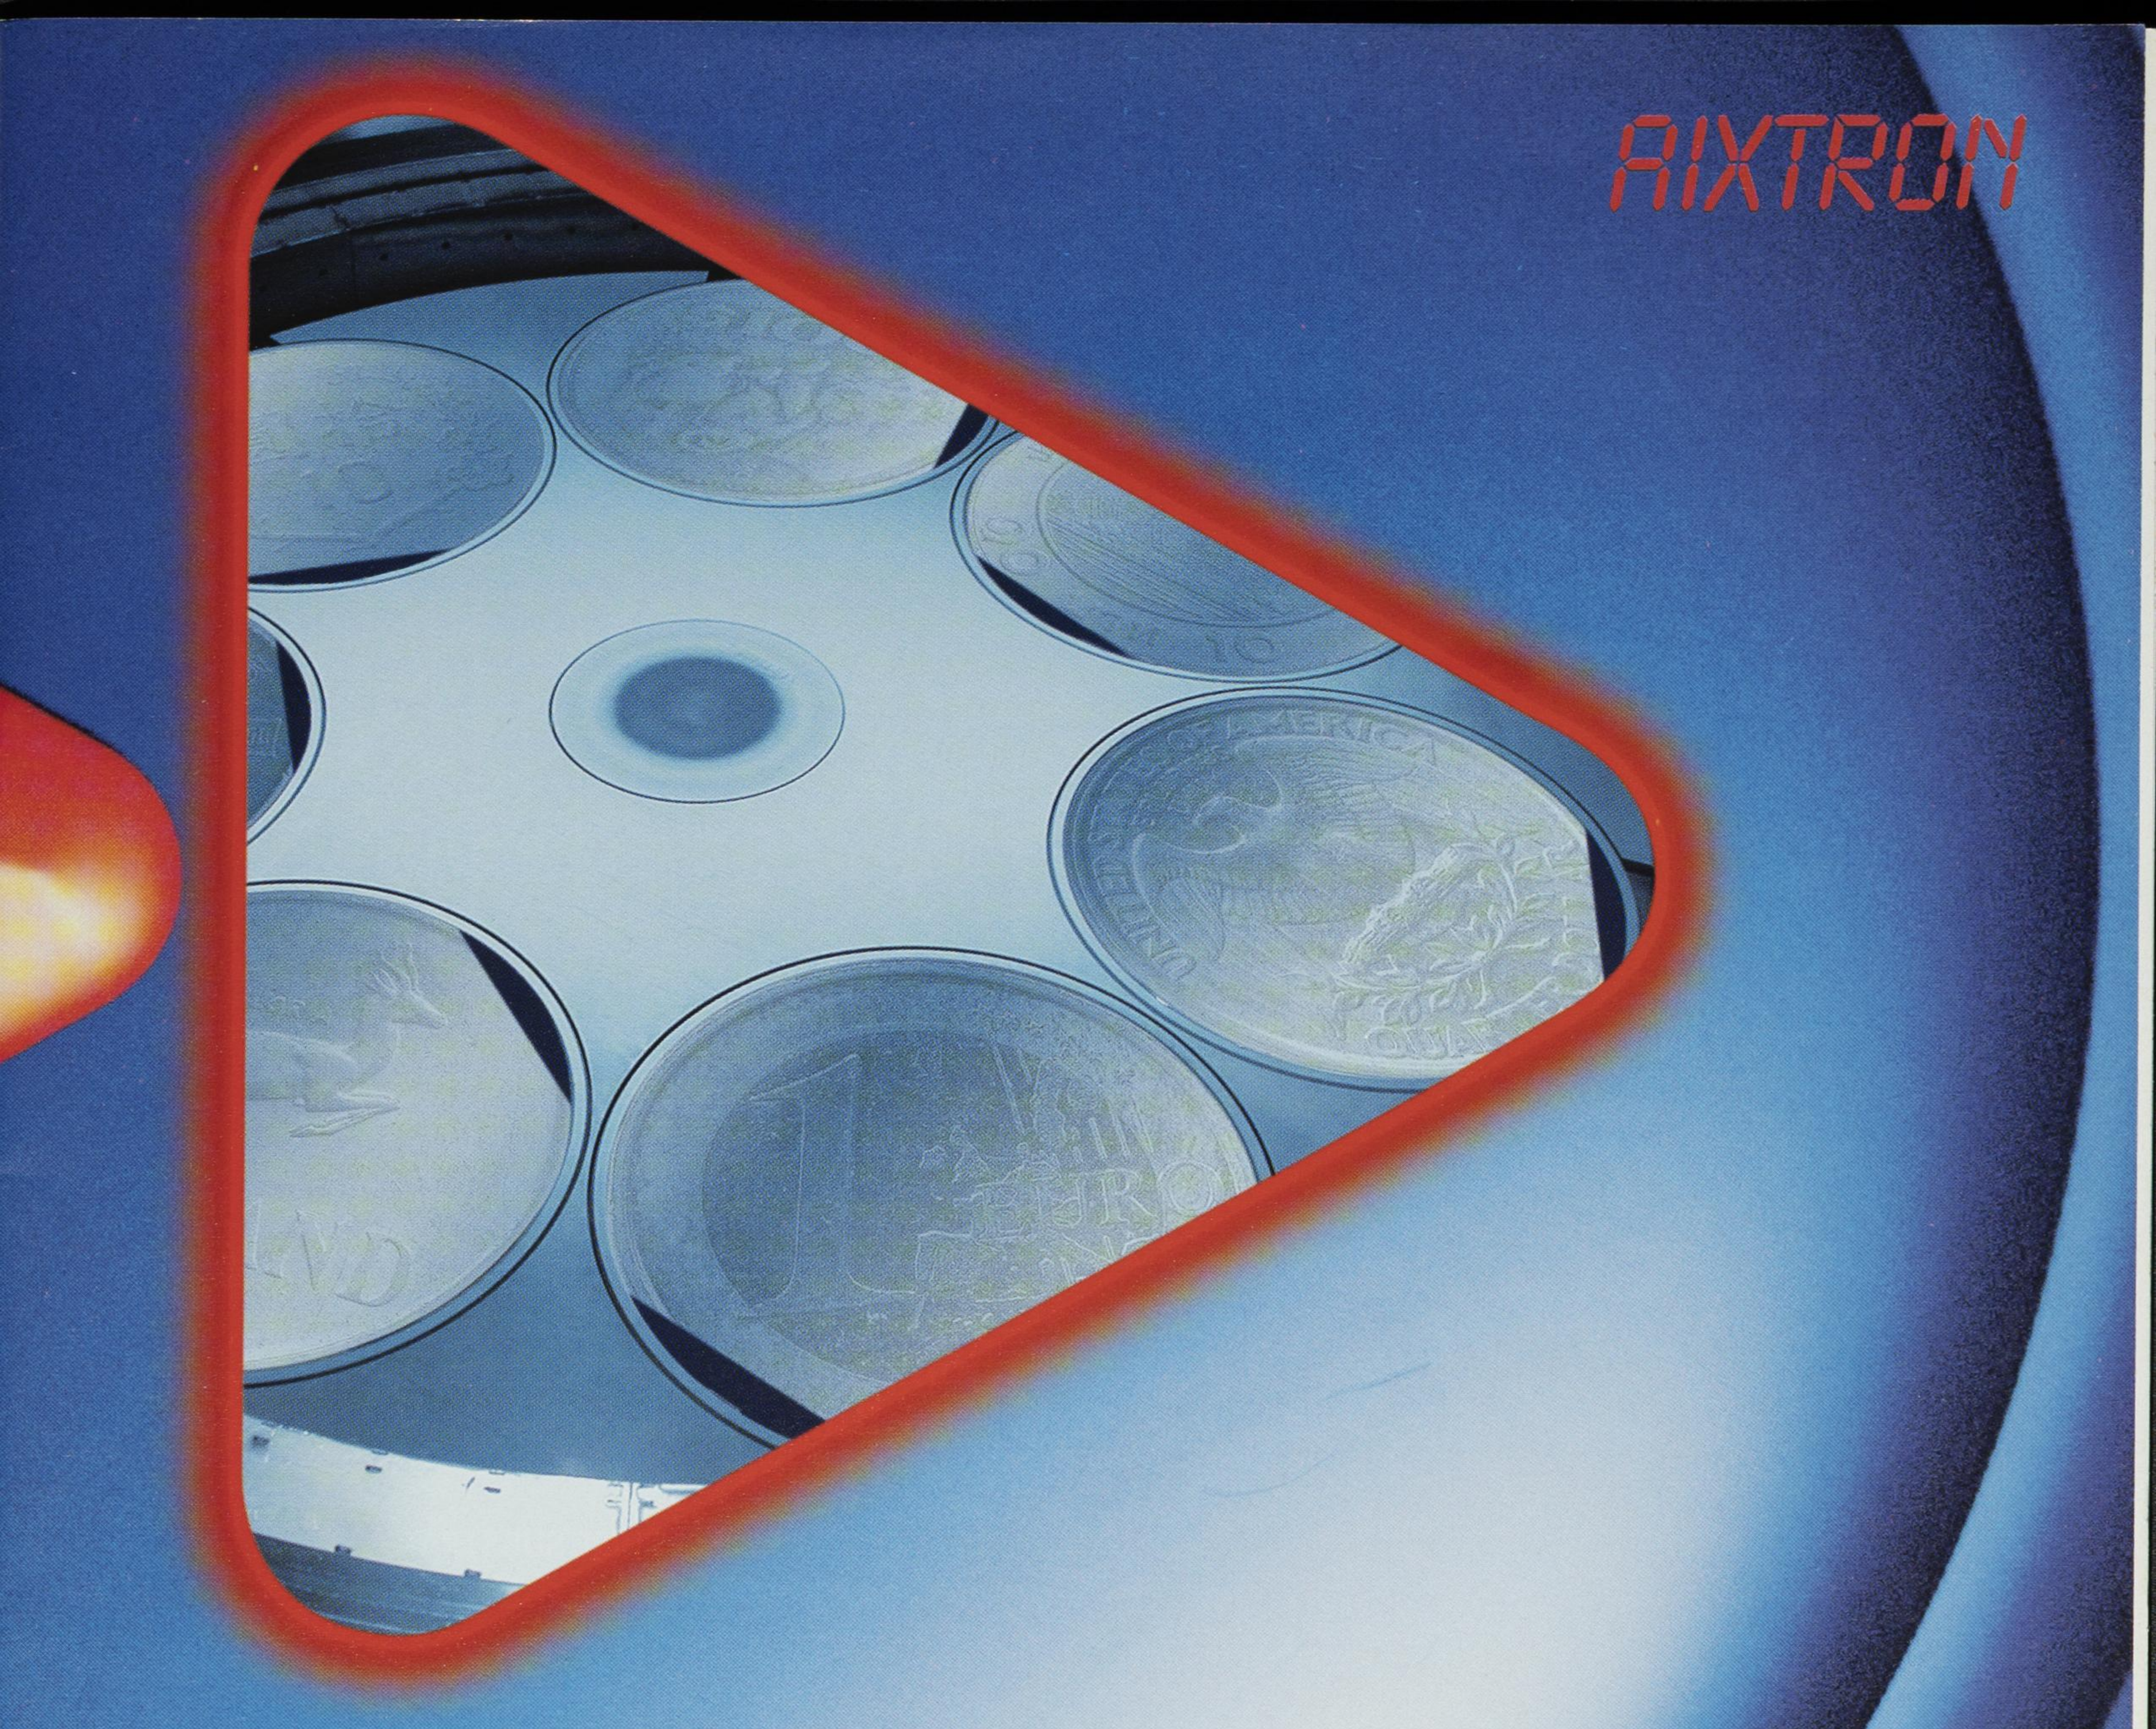

AIXTRON

TECHNOLOGY

PRODUCTIVITY

SERVICE

PURE PLAY

One of your best investments won't come from a banker.

Performance stems from productivity. And with your investment in AIXTRON technology, you get a top quality CVD production system. Leading technology that fits your individual requirements. The aim of our work with you is to get the best out of the wafer: qualitatively and economically. For us, productivity is at the heart of all we do, leaving you free to concentrate on competing with the best products. Call us! And count on us. After all, the best return on your investment is at stake.

push your



PERFORMANCE

AIXTRON AG · Kackertstraße 15-17 · D-52072 Aachen, Germany · www.aixtron.com

Making Your World Brighter™

We are a leading materials science solutions provider in research, manufacturing and marketing of high quality, large diameter, single-crystal sapphire and other advanced technology materials.

Our Chicago based growth, fabrication and polishing facilities provide the highest quality substrates with unparalleled service at the lowest price.

Maximize Brilliance and Yield In Your Blue LED and LD Processes

Rubicon's KYR-Plus SAPPHIRE SUBSTRATE
provides high transmission, very low EPD

With Rubicon's unique combination of Kyropoulos growth technology and state-of-the-art manufacturing and quality facilities you get the optimal basis for efficient blue LED and LD fab—greater brightness and higher yield.

- 2, 3, and 4 inch C-plane wafers in development and production quantities
- Precision offsets and other orientations available
- As cut and epi ready surfaces
- Flexible product specification
- Material Science Engineering services

www.rubitech.net

Rubicon Technology, Inc.
9931 Franklin Avenue
Franklin Park, IL 60131
Tel 847-295-7000
Fax 847-295-7555

Employment opportunities available



RUBICON
TECHNOLOGY

Change and consolidation continue in fiber-optic component industry

By Jon Newey and Tim Whitaker

The consolidation taking place within the fiber-optic components industry accelerated recently, with several companies being bought up by others keen to augment their existing product lines.

Although the telecom laser and transponder market is expected to grow by more than 30% in 2003 (see p15), there are still far too many component suppliers. "There is only business for a few key suppliers, plus some additional niche players," said Tom Hausken, Optical Communication Components Practice director at Strategies Unlimited. "The longer it takes to consolidate, the longer will be the pain. So far, there have been few consolidations or closures in this market segment, and many more are expected."

Agere, Ericsson and Gore have recently completed their plans to exit the optical component industry, joining Nortel, Marconi and ADC, while Alcatel may soon join them. Bandwidth9 is yet another start-up that appears to have given up the fight against the continuing recession in the fiber industry.

Ericsson sells optoelectronics unit

Swedish start-up company Northlight Optronics has bought Ericsson Optoelectronics, which designs and manufactures long-wavelength optical transmitters and receivers. The product range includes DFB-EA and DFB laser transmitters, and high-speed receivers operating at up to 10 Gbit/s. The deal is effective immediately, and Ericsson Optoelectronics' 48 employees will be transferred to the new company. The sale is part of Ericsson's ongoing drive to focus on its core business of providing systems and services for telecom operators. In June 2002, Ericsson sold its microelectronics business to Infineon for \$378 million.

Northlight Optronics was set up specifically with this acquisition in mind by three executives with experience in optical component companies. They include Robert Green, formerly VP of business development at Bookham Technology, who becomes Northlight's COO. Funding has come from the executives' own pockets as well as from venture capitalists. The value of the deal was not revealed, but Ericsson has taken a 9.9%



As change continues within the fiber-optic component industry, Ericsson has sold its optoelectronics business to Northlight Optronics, a start-up company based in Sweden.

stake in the company.

While many may question the wisdom of entering this market in the current climate, Green has some convincing reasons why the acquisition is a good prospect. "Ericsson Optoelectronics has a tremendous amount of experience in making III-V devices," he told *fibers.org* website. "That's significant, because compound semiconductor devices such as DFB lasers are extremely difficult to make with good yields and reproducible processes that run economically."

Because of Ericsson's past investment in manufacturing infrastructure and processes, Northlight can benefit from low operating costs, and says that it is starting from a financial position where the breakeven point is much lower than its competitors. "We believe we can rapidly increase our market share and make this a profitable business in a reasonably short amount of time," said Green.

Emcore buys former Ortel from Agere

Agere has completed its exit from optoelectronic device manufacturing with the sale of its West Coast optoelectronics segment to Emcore for \$25 million in cash. In October 2002, Agere sold the bulk of its optoelectronics business to TriQuint (*Compound Semiconductor* December 2002 p3).

The transaction includes assets, products, technology and intellectual property related to Agere's cable TV optical components, telecom access and satellite communications operations located in Alhambra and Irwindale, CA. The sale continues the recent pattern of large players in the fiber-optics industry selling off assets, which were built up or acquired at great cost during the boom period that ended two years ago. Agere's West Coast operation consisted primarily of the operations of Ortel Corporation, which Lucent Technologies acquired in April 2000 in a stock-based deal worth \$2.95 billion.

Emcore estimates this business will have revenue of between \$30 million and \$40 million for the year ending September 30, 2003. As part of the agreement, 215 of the 230 Agere employees will join Emcore. Agere was planning to exit the Irwindale facility by the end of March, consolidating its operation in Alhambra, and Emcore is to continue with that move. Emcore now leases the Alhambra site and operates it as Ortel, a division of Emcore.

The acquisition further expands Emcore's presence in the optical communications arena. The company already manufactures VCSEL and *pin* diode arrays, as well as parallel optical modules that incorporate the arrays. In December 2002, Emcore also bought>>

Alvesta, a developer of VCSEL-based parallel transceivers (*Compound Semiconductor* January/February 2003 p6).

Alcatel Optronics for sale?

Alcatel Optronics posted a net loss of €418.8 million (\$454.3 million) for the year ending December 31, 2002, on sales of €84.1 million. The figures were considerably worse than the €144.4 million loss on €470.4 million in sales for 2001. The news prompted Serge Tchuruk, chairman and CEO of parent company Alcatel, to indicate that the sale – or even closure – of the Optronics unit was now being considered as an option. On the back of Tchuruk's comments about a possible sale, Alcatel Optronics' shares leapt from \$4.25 to \$6.67 on February 4.

The restructuring program that was designed to cut costs at Alcatel Optronics is clearly failing to compete with its worsening sales figures. The company is predicting sales of only €7–8 million in the March 2003 quarter, compared with €10.6 million in the December 2002 quarter.

Bandwidth9 seeks a buyer

Bandwidth9, a manufacturer of VCSEL-based optical components and subsystems for metro networks, has announced that it will

substantially reduce its operations and product offering. It is now seeking a buyer, saying that it "intends to seek long-term opportunities to integrate its industry-leading VCSEL-based products with interested companies".

Poor market conditions are to blame for the decision. "Not unlike other tunable laser companies, Bandwidth9 has observed limited revenue potential for tunable transmitters in the foreseeable future," said Hatch Graham, CEO and chairman of Bandwidth9. Both ADC and Nortel recently closed their tunable laser operations. Bandwidth9's tunable device is a VCSEL with a movable MEMS mirror.

However, Graham says that the company is required to incur ongoing costs of nearly \$1 million per month to manufacture and deploy its products. "This economic discrepancy is not an attractive recipe for suitable investment return for our shareholders," he said. "Accordingly, we have taken measures to dramatically reduce operational costs, while seeking opportunities for success with strategic partners."

OCP acquires Gore's module business

OCP, a manufacturer of fiber-optic subsystems and modules for metropolitan, local and storage-area networks, has bolstered its VCSEL product portfolio with the purchase

of Gore Photonics, a subsidiary of W L Gore & Associates. Gore Photonics, a manufacturer of VCSEL-based parallel optical modules, was put up for sale in August 2002 as part of a plan by its parent company to concentrate efforts on its electrical interconnects business.

The acquisition is a further part of OCP's strategy to accelerate the introduction of VCSEL-based parallel optical modules. The addition of Gore's 850 nm VCSEL modules adds to the VCSEL technology that OCP gained through its purchase of Cielo Communications in October 2002 (*Compound Semiconductor* December 2002 p19). Furukawa Electric owns more than 60% of OCP's stock.

The purchase price was not disclosed, but includes all capital equipment, inventory and intellectual property associated with the Gore Photonics module development and manufacturing facility at Elkton, MD. OCP has hired the core technical team from Gore Photonics, and will continue to operate a development center in the Elkton/Newark area. OCP will continue to manufacture Gore's new parallel fiber optic modules including the nLighten 2300 product, a 12 × 2.7 Gbit/s module. However, Gore has retained the VCSEL chip technology and intellectual property assets that are part of the Gore Photonics operation in Lompoc, CA.

Dow Corning purchases Sterling Semiconductor

By Tim Whitaker

Dow Corning, the company best known for its silicone products, has acquired Sterling Semiconductor from Uniroyal Technology for \$11.2 million. Sterling, which manufactures SiC substrates and epiwafers, will now be known as Dow Corning Compound Semiconductor.

Dow Corning will hire 32 of Sterling's current employees, and will acquire the manufacturing and R&D assets of Sterling in Danbury, CT, and Tampa, FL. The latter facility, where most of Sterling's epiwafer manufacturing is carried out, is shared with LED maker Uniroyal Optoelectronics.

The sale of Sterling was approved by the US Bankruptcy Court in the District of Delaware as part of Uniroyal Technology's ongoing Chapter 11 proceedings, which are allowing the company to undergo a reorganization in order to resolve its financial problems. The Bankruptcy Court issued an order on December 20, 2002, approving bidding procedures for the sale of Sterling's assets.

After no competing bids were received, the sale to Dow Corning was approved, and became final on January 23, 2003.

Uniroyal acquired Sterling in April 2000 in a stock deal valued at around \$36 million, and has since invested heavily in the SiC wafer maker. In 2002, a proposed deal to sell Sterling to Belgian materials company Umicore fell through.

According to Uniroyal's 8-k filing, the sale enabled Sterling to pay its secured creditors and those creditors whose contracts were assumed by Dow Corning. The claims of Sterling's remaining creditors will be resolved through the company's Chapter 11 reorganization proceedings.

Dow Corning's decision to buy Sterling follows several years of development work with wide-bandgap materials, according to Jean-Marc Gilson, VP and general manager of the New Ventures Business of Dow Corning. "We've been actively working not only on SiC but also on free-standing GaN wafers through university-sponsored research

and in-house R&D," said Gilson. "Sterling is an excellent fit with our capabilities."

Dow Corning plans to establish itself as a supplier of SiC and GaN materials, addressing three key markets: high-brightness LEDs and solid-state lighting; high-power semiconductors; and blue lasers. The company is actively working on the transfer of government contracts awarded to Sterling, and hopes to have this complete in the next few months.

Now that Sterling is no longer constrained by Uniroyal's Chapter 11 proceedings, which affected its ability to purchase raw materials, for example, the company can return to full production. According to Gilson, Dow Corning's focus will be on establishing very strong credibility in the marketplace and being seen as a very reliable supplier. Although there are no immediate plans to pump additional funds into Sterling, Gilson says that Dow Corning "will make any investment necessary to sustain very high and aggressive penetration in the marketplace. We will do everything that's needed to be one of the key players."



When it comes to ultrapure gases, reliability doesn't just save money.

Dr. Rajiv Agarwal, George Ryals and Dr. Suhas Ketkar have developed proprietary analytical systems and test protocols to monitor that our ultrapure gases are consistently on spec. Their testing and our GASGUARD® delivery systems, control gas purity from plant to point of use.

Optoelectronic devices like traffic signals need to work without fail. Which is why you need to work with Air Products. We have the products and experts to help you optimize your III-V process. Our Solkatronic™ ultrapure gases include arsine, high purity ammonia, phosphine and hydrogen selenide. Our systems maintain strict control of purity and consistency.


So your films and the devices they control can set standards for reliability. Whether you're in LEDs, lasers, solar cells or other emerging technologies, visit our web site or call 610-706-6000. There's a lot riding on the gas you use. Don't take chances.

tell me more

www.airproducts.com/compound

Spintronics Research

Proven Technology for Demanding Materials

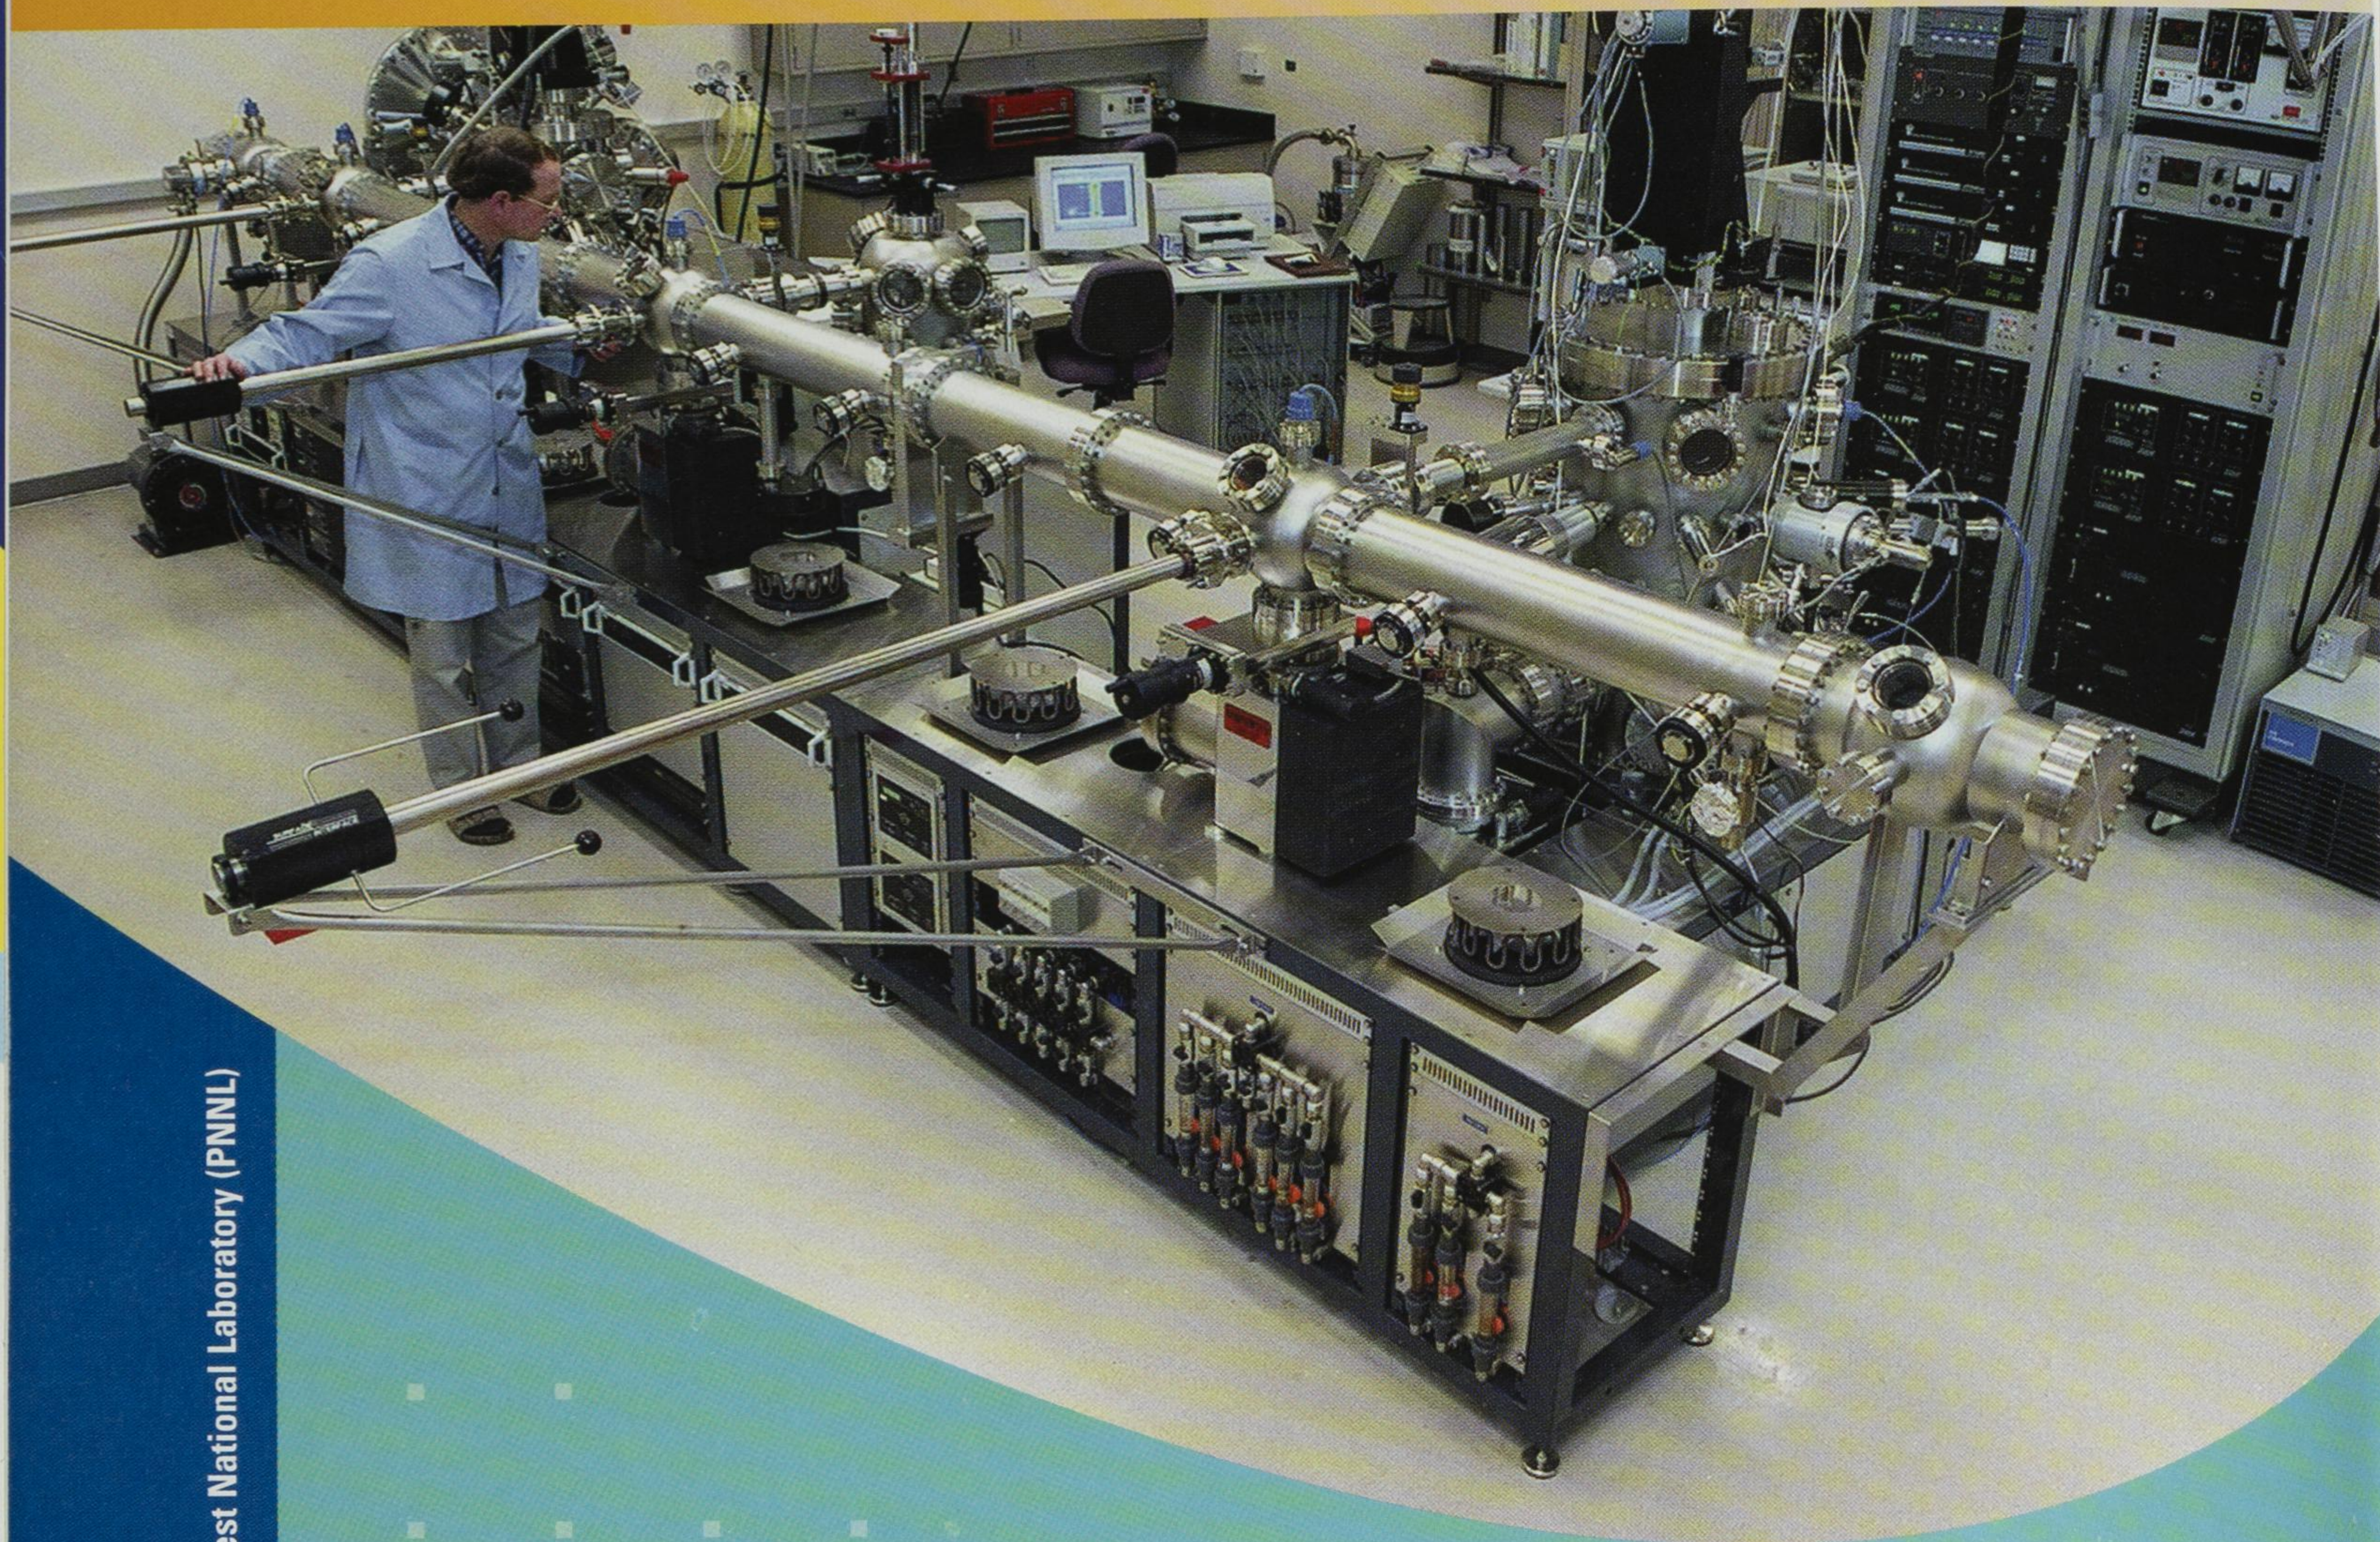

Courtesy: Dr. Scott Chambers, Pacific Northwest National Laboratory (PNNL)

From spintronics research to GMR device production DCA thin film deposition systems are leading the way forward. Through our expertise in Molecular Beam Epitaxy, UHV sputtering, Ion Beam and Pulsed Laser Deposition we can provide technology for the most demanding thin film processes. Whether it is for custom design R&D system or a turn-key production system DCA has the right solution.

For your nearest representative
please visit our web site at: www.dca.fi
or email us at: info@dca.fi

DCA
INSTRUMENTS

RFMD and Intel announce wireless compatibility

RF Micro Devices has announced that its quad-band Polaris radio is compatible with Intel's new PXA800F "wireless-Internet-on-a-chip" cellular processor, providing a total system solution for GSM/GPRS handsets that minimizes external components and power consumption while maximizing performance.

RFMD's Polaris Total Radio comprises a SiGe BiCMOS receiver, a CMOS mixed-signal processor and GaAs HBT-based PA module incorporating a CMOS control IC. It performs all major functions of the RF sec-

tion, including both transmit and receive, and gives handset manufacturers the benefits of reduced component count, flexible baseband interfaces and lower cost of implementation.


Intel's PXA800F cellular processor supports all key functions such as processing, flash memory and communications on a single 0.13 μm CMOS IC. Intel says that the chip will bring advanced functionality, longer battery life and more innovative designs to mainstream phones. The new chip marks Intel's first venture into the wireless handset market.

Skyworks launches dime-sized complete handset radio system

Skyworks Solutions has unveiled the world's first complete handset radio system that fits into a single, dime-sized package. The SKY74073 Single Package Radio (SPR) solution combines all of the radio circuitry required for GSM/GPRS 900/1800 handsets into a single compact package that is one-third of the size of alternative solutions created from discrete components.

Skyworks says that the radio system and packaging breakthrough saves handset designers significant space, cost and design-cycle time, while providing a roadmap for quad-band and 3G handsets in the future.

The SPR solution comprises an HBT-based PA and CMOS controller, PHEMT switches, a MESFET directional detector, SAW filters

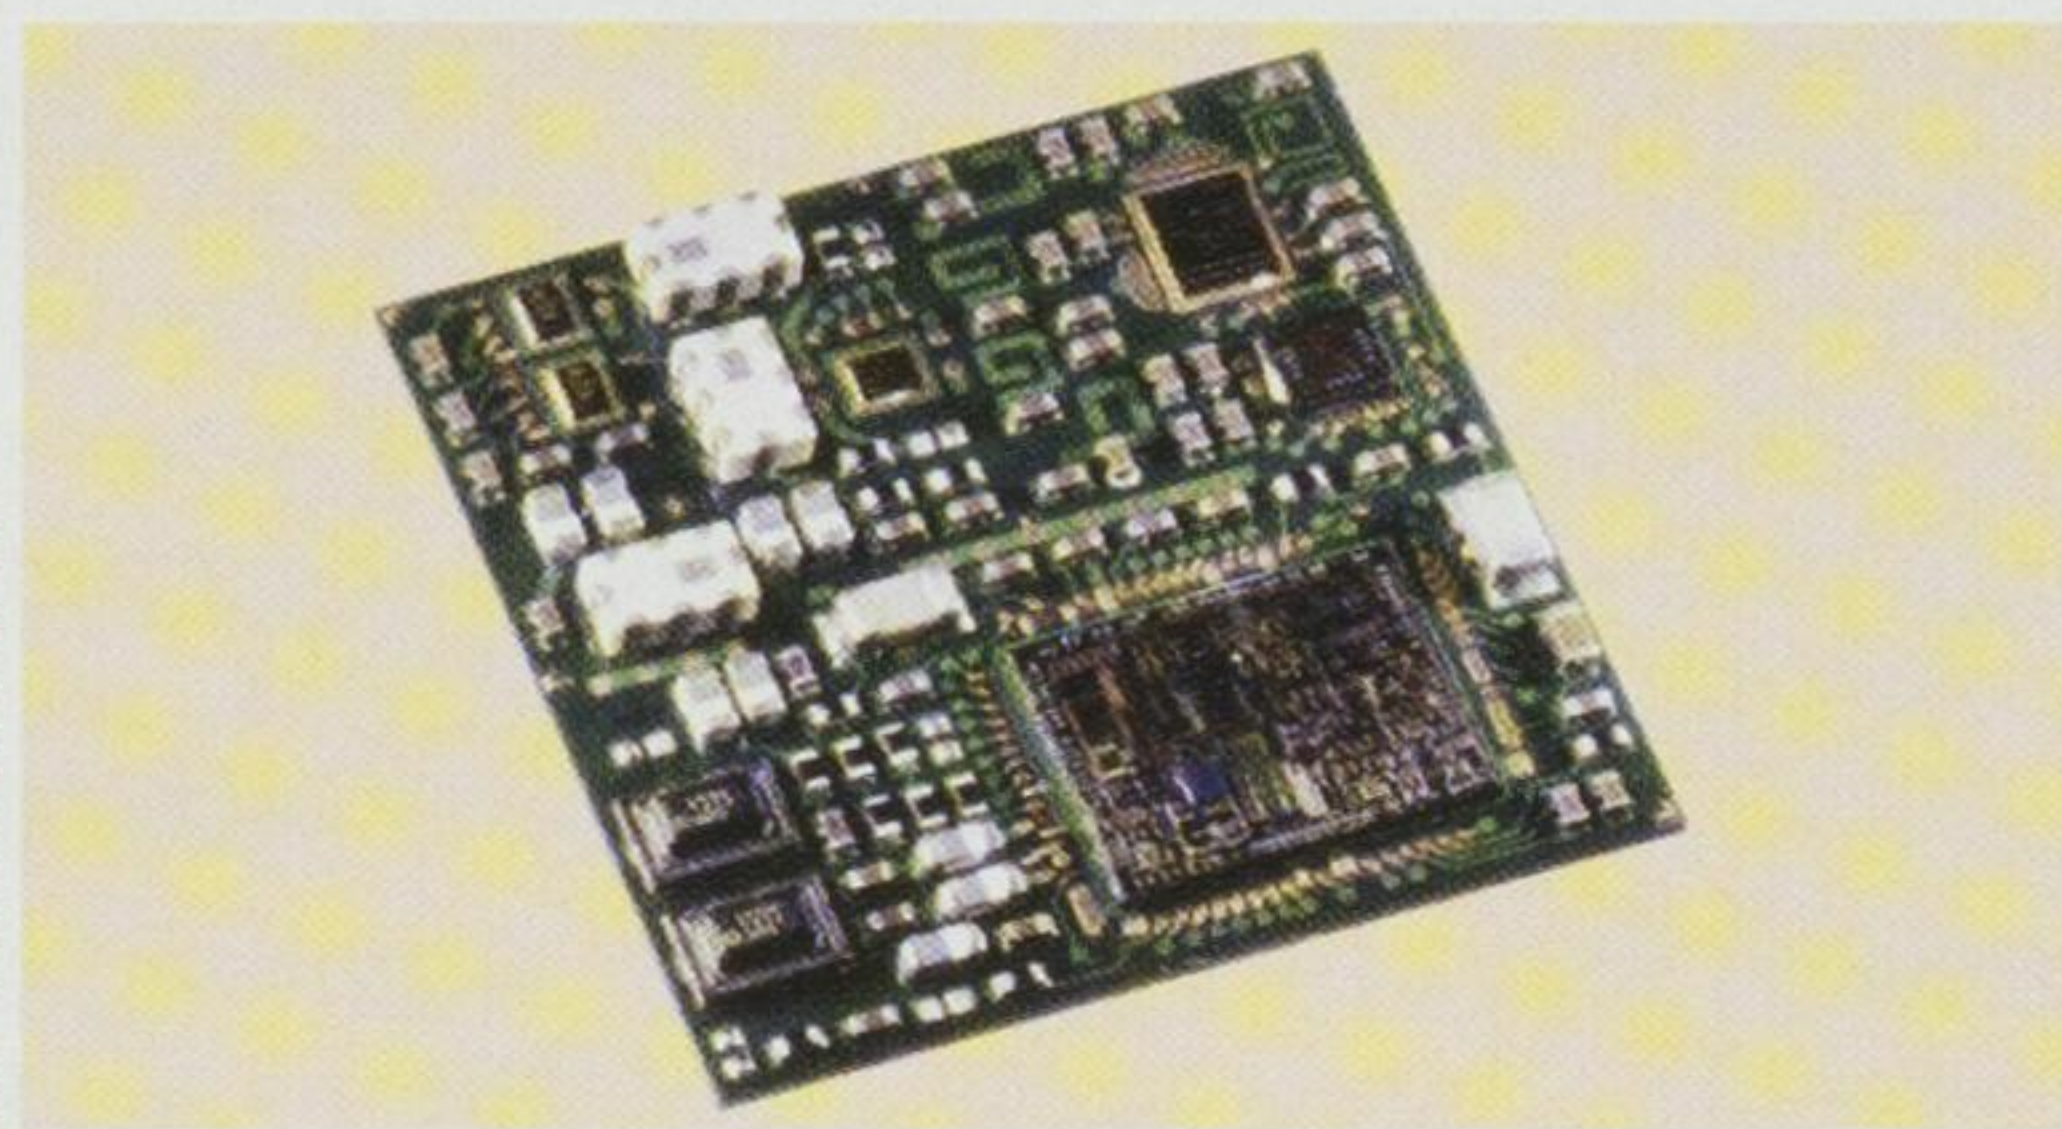

Skyworks' Single Package Radio combines all the radio circuitry required for GSM/GPRS handsets in a 13 x 13 mm package.

and a silicon BiCMOS direct conversion transceiver. All these components are combined in a compact 40-pin laminate multichip module package measuring only 13 x 13 mm.

New distribution center expands Anadigics' presence in Asia

Anadigics has opened an Asian distribution center through its partnership with Taiwan-based Universal Communications Technology (Ucomm). This will enable Anadigics to reduce cycle times by minimizing handling and transportation time and expenses, creating a more efficient product flow to its growing Asian customer base. The announcement follows just a year after Anadigics' agreement with Ucomm for the offshore outsourcing of its production RF testing operations. Ucomm

has also recently opened a new testing and assembly plant in China, which could offer Anadigics an even greater Asian presence.

Anadigics has grown its CDMA revenue significantly in the last year thanks to its pursuit of customers in Asia. Sales for the December 2002 quarter were \$18.7 million, of which wireless business accounted for \$11.4 million. During the quarter Anadigics' CDMA revenue grew 41.2% to \$7.3 million, while its TDMA revenue declined 84%, as expected.

Handset products flood the market

Among a flurry of PA announcements in early 2003, Skyworks unveiled its System Smart family of 3 x 3 x 1.2 mm PA modules for CDMA cellular handsets. The reduction in size was achieved by integrating additional passive components into the InGaP HBT die. The PCS-band module now contains 30% fewer external components than Skyworks' standard 4 x 4 mm² CDMA PA module.

Philips launched the BGY284, a quad-band GSM PA module that measures only 8 x 8 x 1.5 mm and achieves a power-added efficiency of more than 55%. The module combines an InGaP HBT power amplifier, a silicon BiCMOS RF driver/power control circuit, and integrated passive components. "Because the BGY284 has such a small footprint and includes an integrated power control loop, manufacturers can save as much as 30% printed circuit board area, and up to 30 external components," said Robbert van der Waal, marketing manager for RF PA products.

TriQuint introduced five PA modules for the GSM cell phone market, based on InGaP GaAs HBT die manufactured on TriQuint's high-volume 150 mm production line. Selected models incorporate power control and quad-band capabilities to meet growing market demands for integration, flexibility and ease-of-use.

TriQuint finishes China test facility

TriQuint has completed a 1100 m² test facility in Tianjin, China. The facility will be operated by TriQuint's Sawtek subsidiary to provide assembly, test, mark, tape and reel support for TriQuint's products that serve the worldwide cell phone market.

WIN and ACCO form strategic alliance

Taiwanese foundry company WIN Semiconductors has formed a strategic alliance with ACCO, a design company with offices in Europe and the US. WIN and ACCO will provide a broad range of design services using WIN's full spectrum of GaAs process technologies and ACCO's expertise in designing leading-edge analog, RF and microwave ICs.

GaAs under threat from SiGe PAs

By Tim Whitaker


SiGe Semiconductor, a fabless supplier of SiGe-based ICs, has signed a licensing agreement with IBM in order to gain access to designs and intellectual property associated with IBM power amplifier (PA) products for cellular handsets. The company believes that SiGe-based PAs will displace GaAs alternatives in handsets as consumer pressures continue to drive handset prices down.

SiGe Semiconductor is currently sampling CDMA products for 2G and 2.5G handsets and will introduce other CDMA and GSM devices in the spring. The company's roadmap includes GPRS and EDGE capable quad-band GSM PAs for 2.5G handsets, as well as 4 × 4 matched CDMA PA modules for 2.5G and 3G handsets. The PAs are manufactured by IBM under a foundry agreement, while development work takes place at SiGe's new facility in Metheun, MA. According to Jose Harrison, product line manager for cellular PAs, the original team that worked at IBM on the development of these PAs moved over to SiGe Semiconductor. "We took the team and access to the IP and products that had been developed up until that point," says Harrison, "as well as lab equipment pertinent to PA development."

SiGe Semiconductor was founded in 1996 as a spin-off from a Canadian government research organization, and spent several years providing SiGe epitaxy services to foundries. In 2000, the company changed its business model to develop products, introducing Bluetooth PAs, cable tuners, GPS front-end ICs, and PAs for the cellular, wireless LAN and cordless phone markets, as well as optical ICs for fiber-optic communications.

"All the products are in the physical layer, between the communication medium (wireless, cable, optical) and the CMOS processing chips, where it makes sense to use silicon germanium technology," says Bill Cuming, VP of product marketing.

SiGe Semiconductor is fabless, but has relationships with a number of different fabs. "We're unusual in having lots of in-house process skill, unlike other fabless design houses," says Cuming. "We go to the fabs and help them to tweak and improve their processes, and enable their silicon germanium expertise. The relationships provide us with preferential access to volumes and favorable pricing."

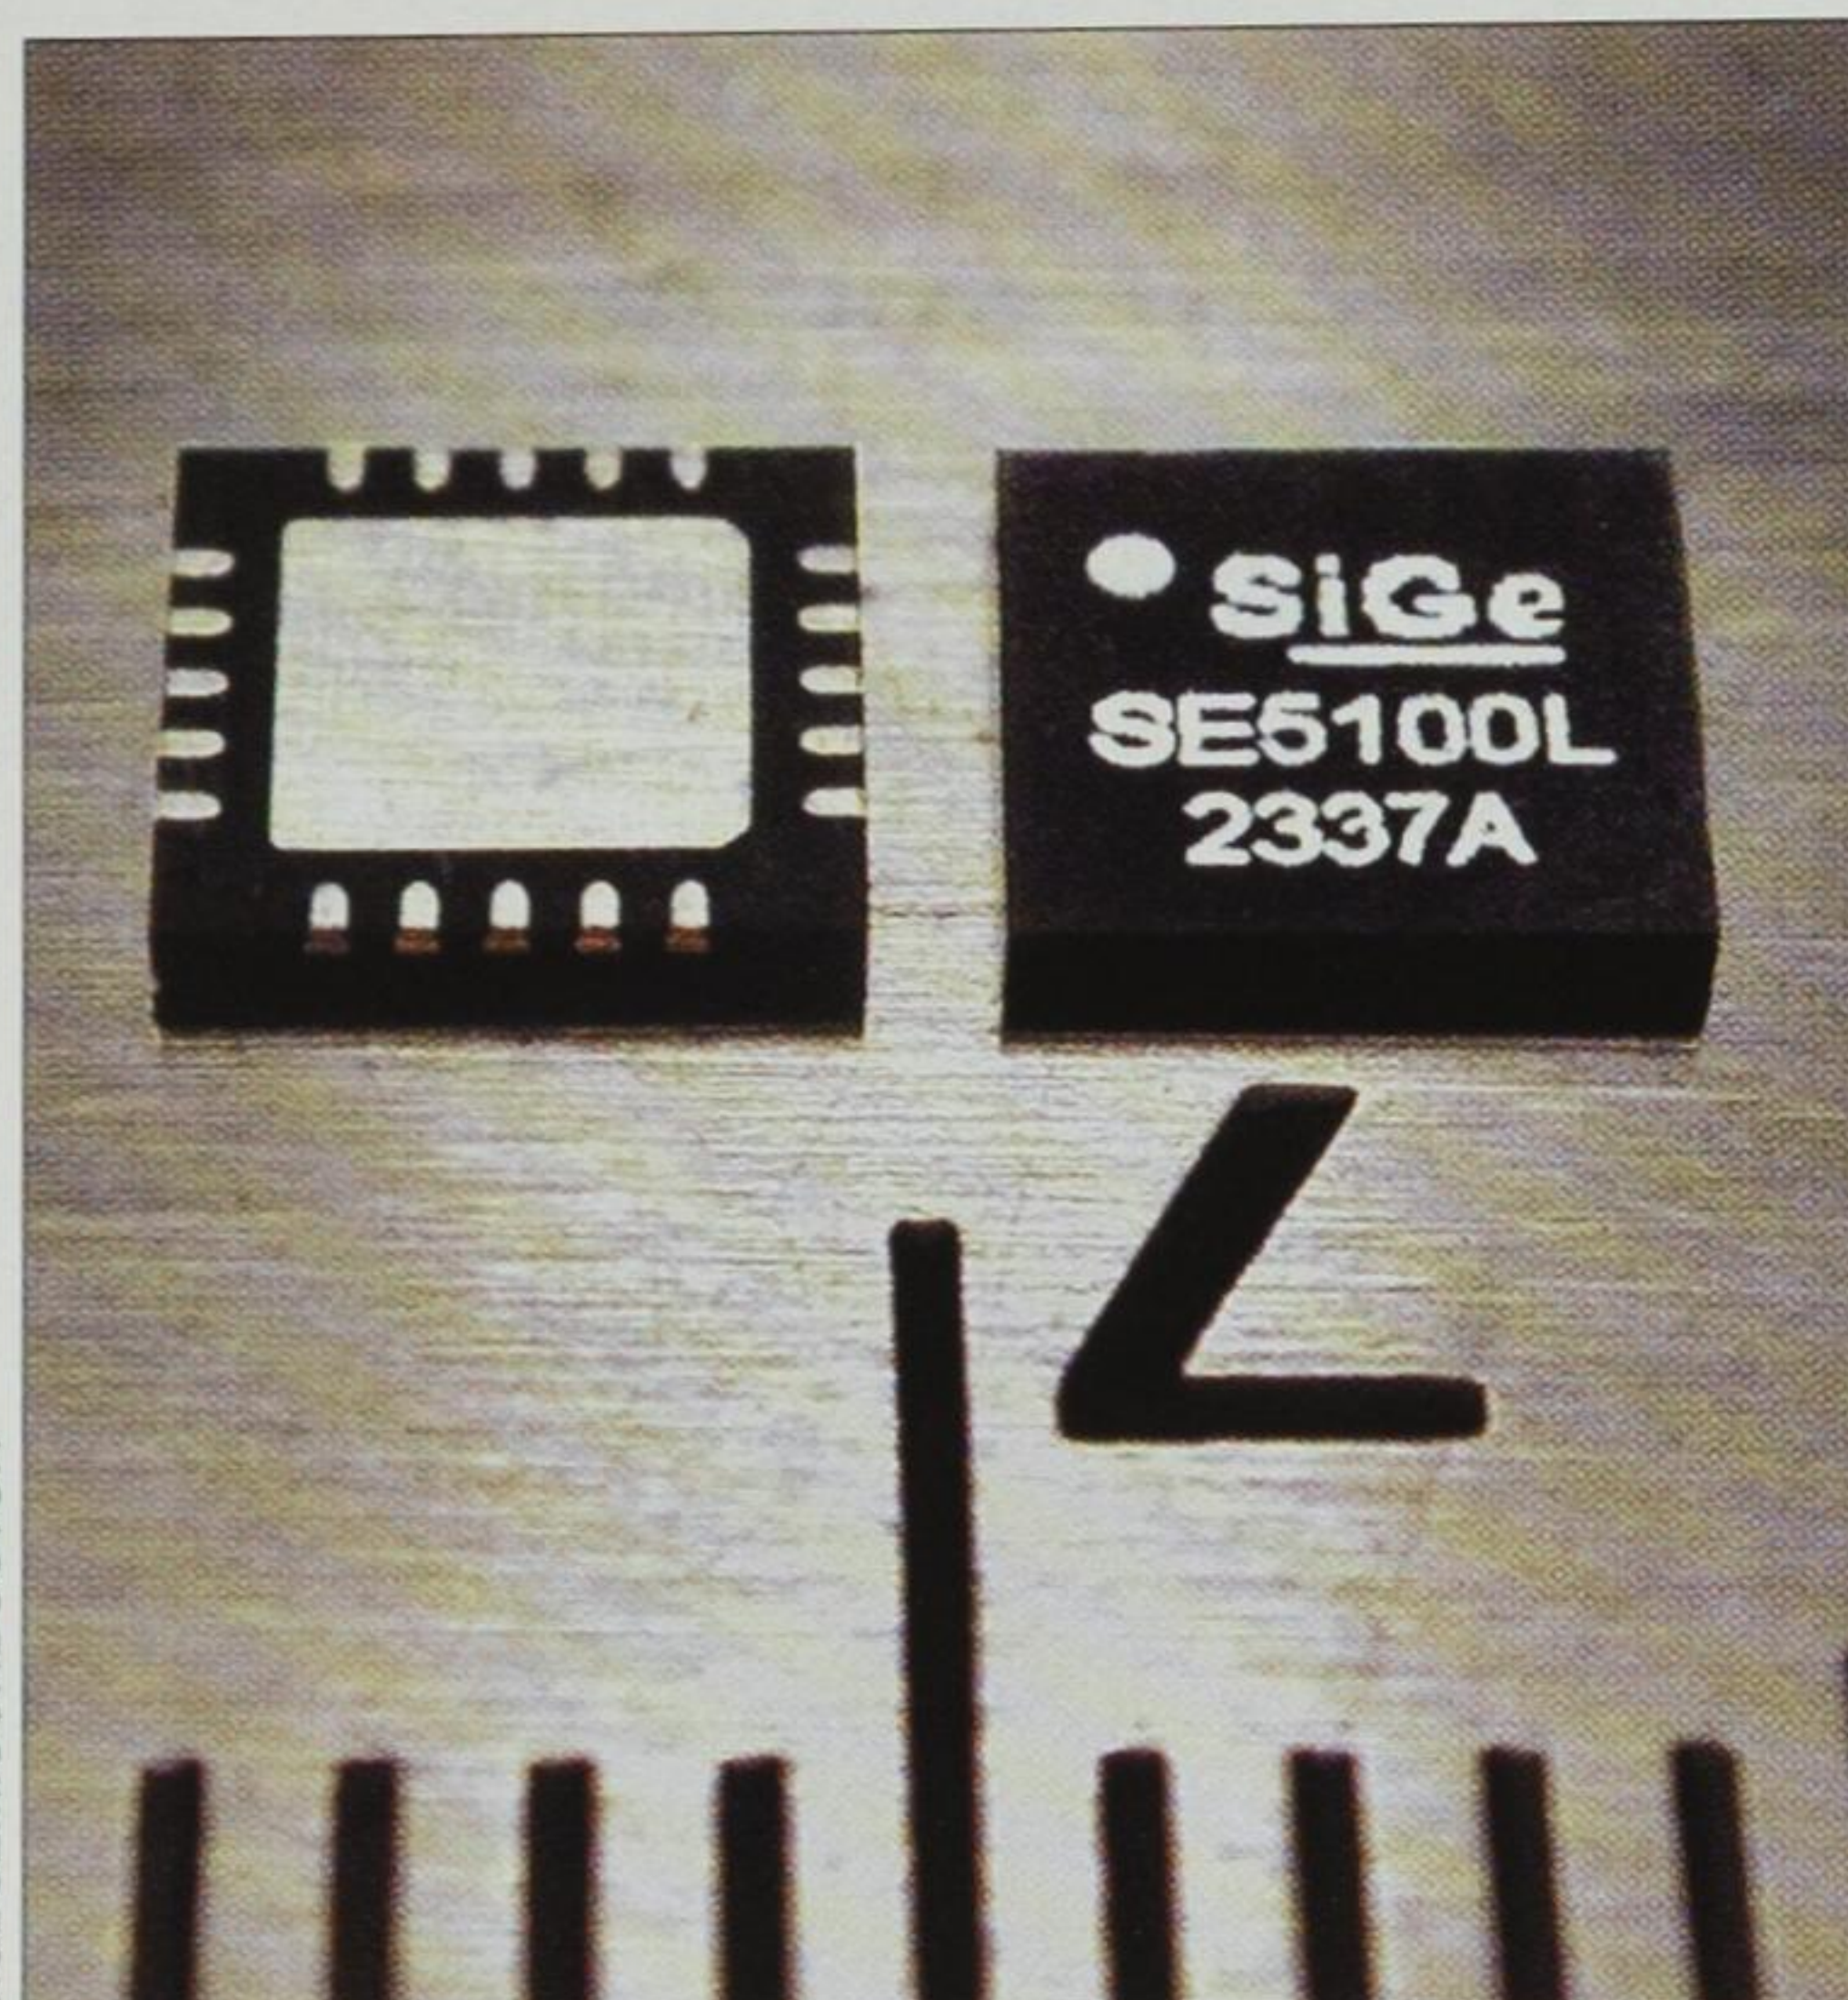

The SE5100 is one of the new SiGe BiCMOS power amplifiers for handset applications.

Improved PA performance

Several years ago, there were debates about the feasibility of using a process with lower breakdown voltages in applications requiring output powers of 28 or 35 dBm, especially under high voltage standing wave ratio (VSWR) conditions. "While at IBM, the group that is now part of SiGe Semiconductor worked with process engineers to optimize the SiGe process for PA applications, and also developed novel ruggedness protection circuits," says Harrison.

However, the breakdown voltage issue proves to be less of an issue for SiGe. "Unlike GaAs, SiGe tolerates excursions far beyond its DC breakdown voltage in RF applications," says Mark Doherty, director of IC design for cellular PAs.

Harrison claims that potential customers have described the performance of SiGe-based PAs as being "every bit as good" as they've seen with GaAs. "In recent weeks, we've seen excellent performance in our next-generation CDMA products, due out in spring," he says. "At an output power of 28.5 dBm, we've measured linearity in the region of -50 dBc, and [power-added] efficiencies in the 38% range."

SiGe and GaAs in handsets

"The SiGe BiCMOS process allows us to integrate not only the bipolar RF paths, but also to use CMOS devices for logic and bias control," says Harrison. "Also, silicon is inherently a better thermal conductor than

GaAs, and as a result the junction temperatures tend to run a little cooler at the same power levels." Furthermore, the current density handling capabilities of silicon lead to improved packing ability, reduced size and improved reliability. In fact, 8 inch SiGe BiCMOS wafers are handled like ordinary silicon, which allows standard pricing for assembly services. In contrast, however, GaAs technology often requires thru-wafer vias for backside grounds with wafers thinned to 3-6 mils (75-150 μm).

SiGe Semiconductor takes advantage of the very thick oxides in the IBM process to isolate passives from the lossy substrate. "This allows us to integrate more of the passive components onto the die," says Harrison. "This simplifies the module somewhat and reduces the bill-of-materials within the module." In turn, this results in smaller form factors for the final product, which is becoming more important as other features are added to the handset that take space from the radio portion.

Cost savings

Bill Cuming claims that SiGe also offers commercial advantages. "SiGe is an extension of BiCMOS, and there is only a small incremental cost over the standard process," he says. Cuming also claims that devices can be produced at higher yields and at a significant saving over the price of GaAs ICs. In Japan, environmental issues could come into play, as handset manufacturers will soon become responsible for recycling any products containing arsenic.

At the present time, there are no SiGe-based PAs designed into cellular handsets, although SiGe Semiconductor expects this situation to change. "Although we do not have any design-ins at this point, we have several very strong engagements with potential customers," says Harrison. "The use of SiGe is only now starting to be appreciated, and we've seen a tremendous amount of interest. I think in 2003 you will see some announcements of design-ins using SiGe."

LNAs and transceivers have moved from GaAs to SiGe, says Harrison, and the PA represents the last stand for GaAs. "Now that we are showing the performance levels that are accepted in the industry, we think that the trend [of replacing GaAs with SiGe] will continue into the PA as well," he says.

**Times Square is
no longer a red
light district**

Thanks to GaNzilla™

GaNzilla™

Did you know?

More than 400 million
high brightness LEDs
light up New York's
Times Square

Featuring exclusive TurboDisc® technology, EMCORE's GaNzilla™ MOCVD system offers the highest throughput in the industry for the growth of advanced GaN materials, including green, blue, and UV LEDs, GaN FETs, and blue spectrum lasers.

- Fully configured high volume production platform
- Low power consumption and efficient use of reactants
- Exceptional wavelength uniformity
- Low maintenance requirements lead to maximum production time

Grow With GaNzilla™



For more information, please
contact TurboDisc sales at
EMCORE (732) 271-9090
or visit www.emcore.com

Jazz and ASMC take SiGe BiCMOS to China

Jazz Semiconductor, the Conexant spin-off, and Advanced Semiconductor Manufacturing Corporation (ASMC), the largest wafer fabrication company in China, have announced plans to collaborate and create China's first pure-play foundry service for SiGe BiCMOS process technology.

Under the partnership, Jazz will contribute its BiCMOS and SiGe process technologies and engineering assistance. ASMC will provide capacity for SiGe processes in its new 200 mm wafer fab in Shanghai, which is expected to

begin volume production in Q4 2003 and will have a capacity of 30,000 wafers per month.

Jazz says the alliance will provide its foundry customers with a second production source for the mixed-signal and RF chip processes currently manufactured in its plant in Newport Beach, CA. "One of the primary markets for SiGe products is wireless handsets, which require integration of RF functions at low power consumption and at low cost," said Theodore Zhu, VP of sales, strategy and business development for Jazz. "This agreement

with ASMC provides Jazz customers with access to RF and mixed-signal process technologies in China, where the wireless market is expected to grow significantly. It also provides a second sourcing alternative."

China's Ministry of Information Industry has estimated that more than 200 million mobile phone subscribers now exist in the country, making it the world's second-largest market for mobile communications. The ministry estimated that 100 million wireless handset were sold in China during 2002.

Atmel collaborates with university on strained silicon process

Atmel, a major silicon IC manufacturer, is working with a team of researchers at Newcastle University in the UK to develop a strained silicon process for production. The project will be based at Atmel's fab near Newcastle, in the north-east of England, and will comprise a team of five university researchers led by Professor Anthony O'Neill.

The first phase of the project, which will involve integrating strained silicon into Atmel's CMOS process, is expected to take about a year. Both IBM and Intel have announced production processes including strained silicon, while Amberwave owns several patents in the area and is working with both AMD and UMC.

SiGe LNAs feature 0.52 dB noise figure

Toshiba has developed a SiGe-based LNA with a noise figure of 0.52 dB at 2 GHz. Toshiba claims this is the industry's lowest figure for a SiGe transistor, and is comparable with much more expensive GaAs transistors. The new parts are targeted for WLANs and GPS systems, and were developed through optimization of the SiGe bipolar process. The 4-pin package is the industry's smallest, at $1.2 \times 1.2 \times 0.52$ mm.

NEWS FROM ASIA

IN ASSOCIATION WITH OPTOTECH MAGAZINE


GaAs, GaP wafer shipments on the rise

Japanese manufacturers of compound semiconductor wafers reported a massive surge in sales of almost 46% in the six month period from April to September 2002, compared with the previous six month period. Total wafer sales amounted to ¥27,195 million (\$231 million), only 18% lower than the peak figure recorded in April–September 2000. Most of the discrepancy can be attributed to declining sales to domestic customers, while export sales are close to their highest-ever level.

Figures were supplied by the Japanese Manufacturers' Society of Compound Semiconductor Materials (JAMS-CS), which conducts a twice-yearly survey of wafer shipments among its nine member companies.

Most of the growth came from renewed sales of GaAs and GaP wafers. GaAs shipments rose 46% compared with the previous six month period, reaching ¥16,837 million.

Japanese wafer shipments

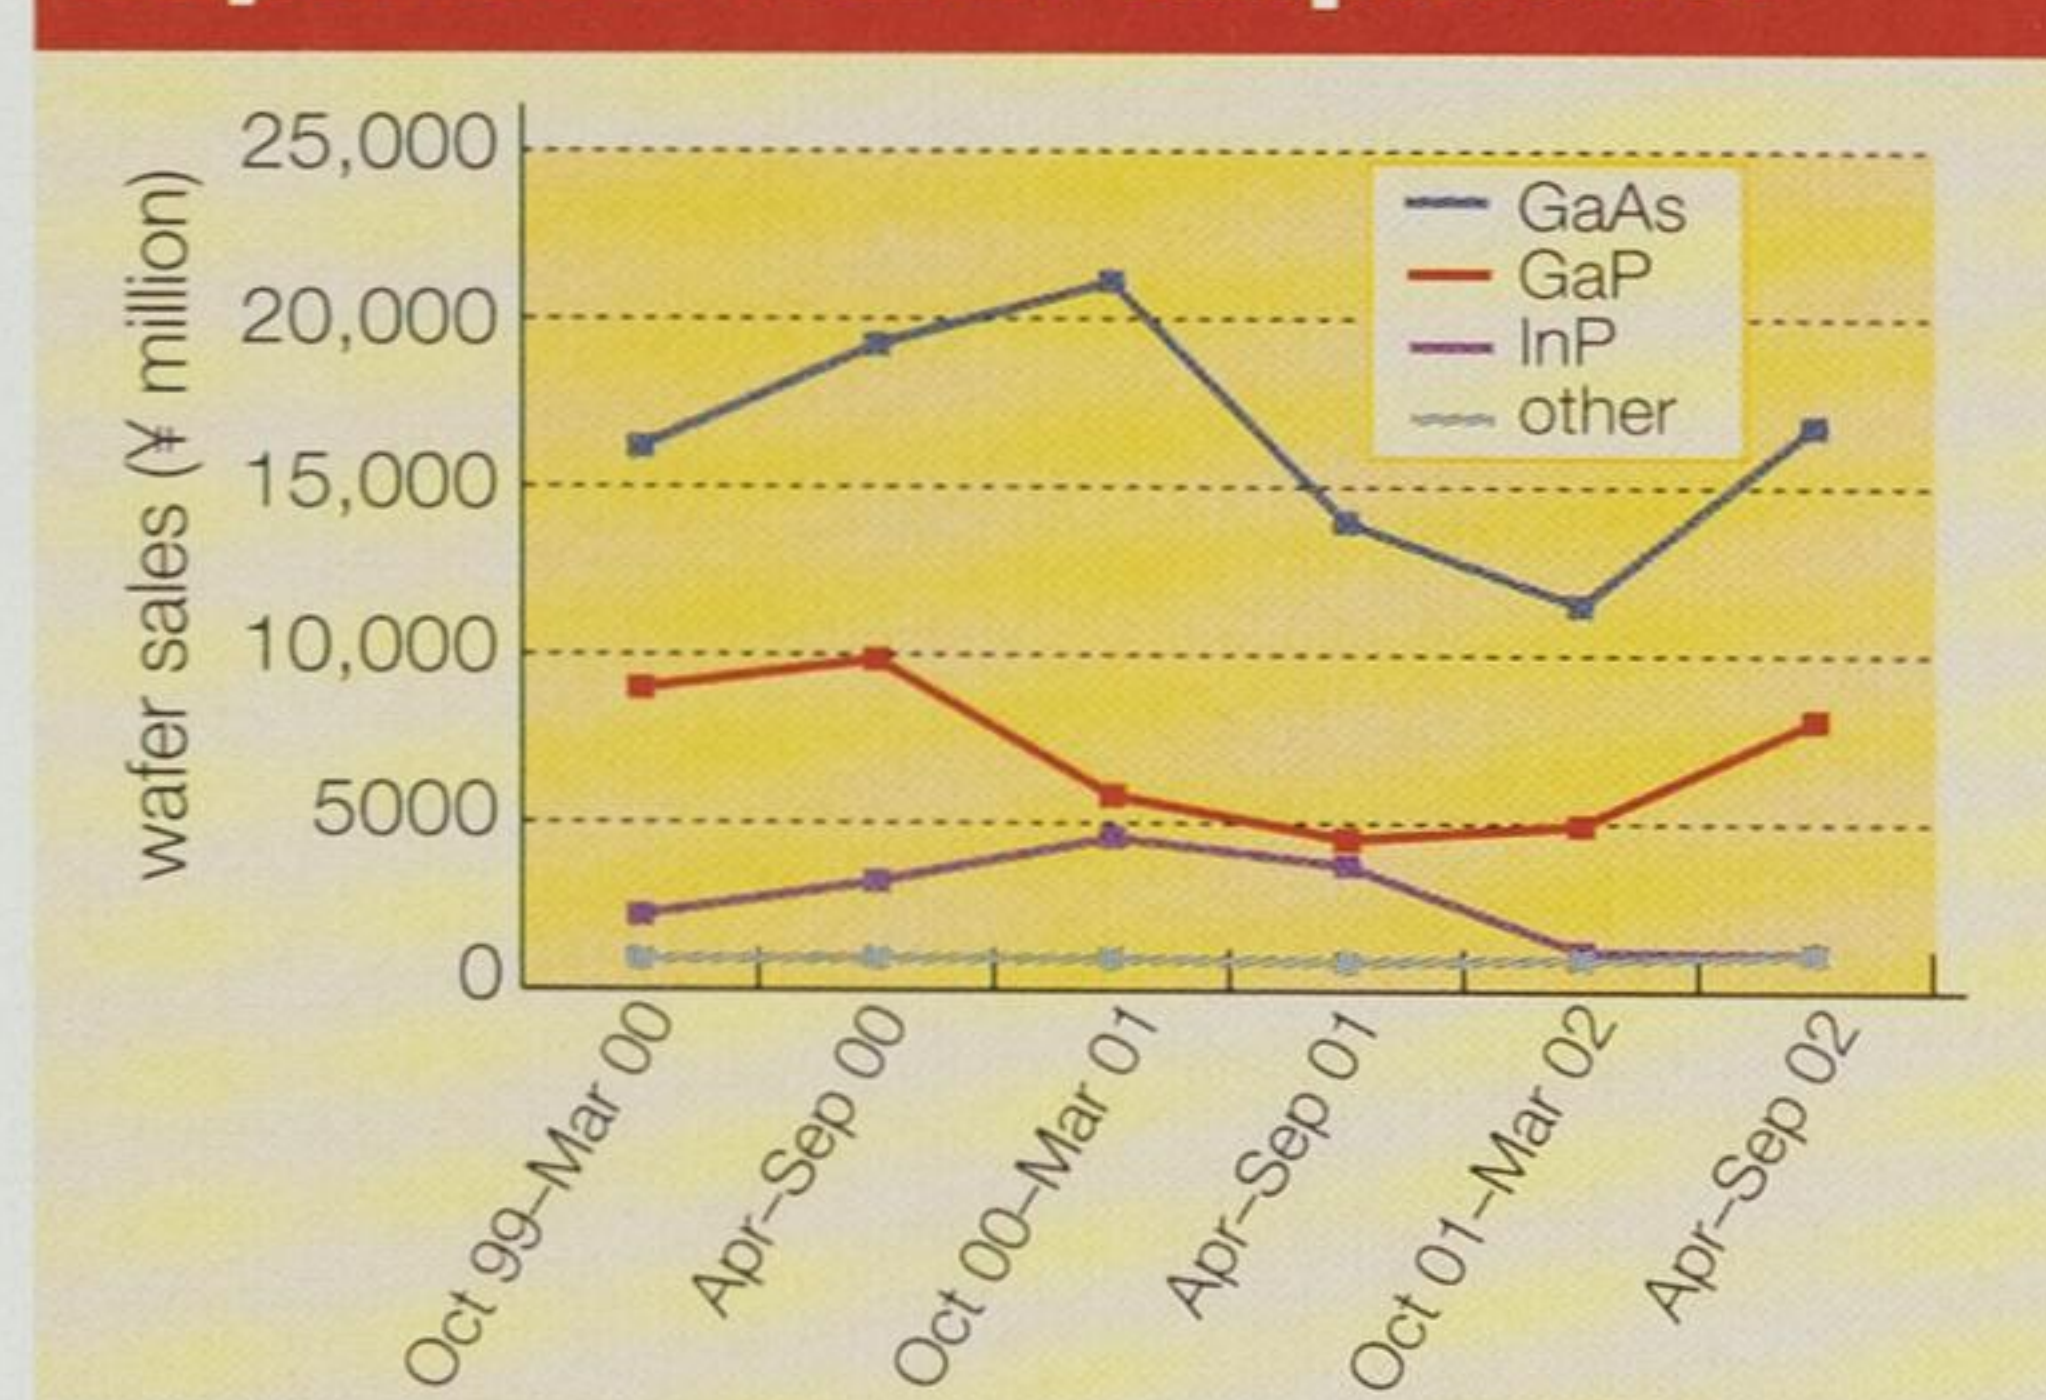





Shipments of GaAs and GaP wafers by Japanese suppliers rose sharply in the April–September 2002 period, although there is no sign of improvement for InP.

The figures have partly reversed a steady decline in GaAs wafer sales since the end of 2000; GaAs shipments fell by almost a half in

fiscal year 2001, mirroring the slowdown in the wireless handset market. Around 62% of GaAs sales were to domestic companies, while export sales were at their highest-ever level of ¥6330 million.

Meanwhile, GaP shipments rose by almost 63% sequentially to ¥8085 million. Sales of GaP wafers, which are used almost exclusively in the production of low-to-mid-brightness LEDs, peaked at ¥9812 million in the April–September 2000 period, and fell by 40% in the subsequent six month period. In the most recent period, 64% of GaP sales were for export, with Taiwan being the major recipient.

However, InP sales declined by 6% to ¥1149 million in the April–September 2002 period. At only one-quarter of the peak value of shipments at the end of fiscal 2000, the InP wafer sales figure reflects the continuing stagnation in the fiber-optic components market.

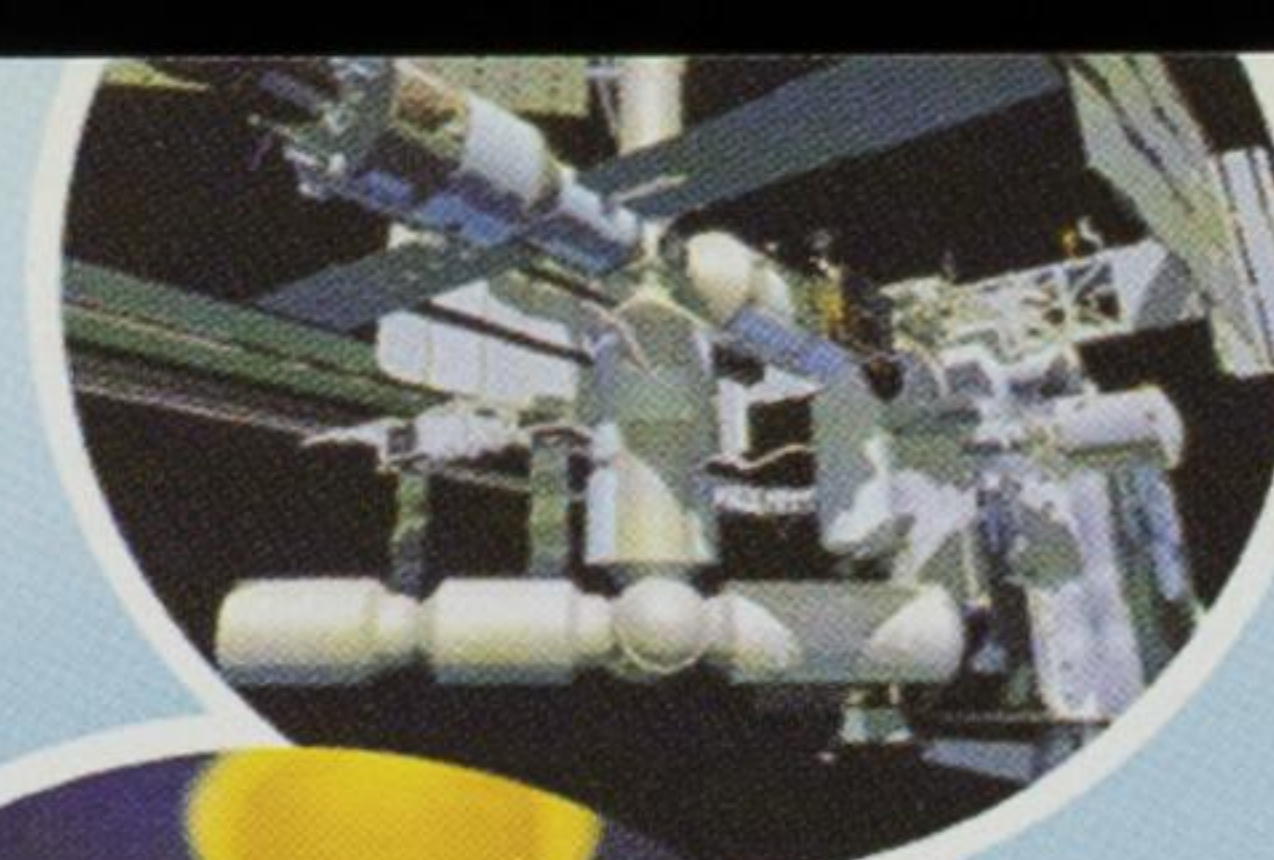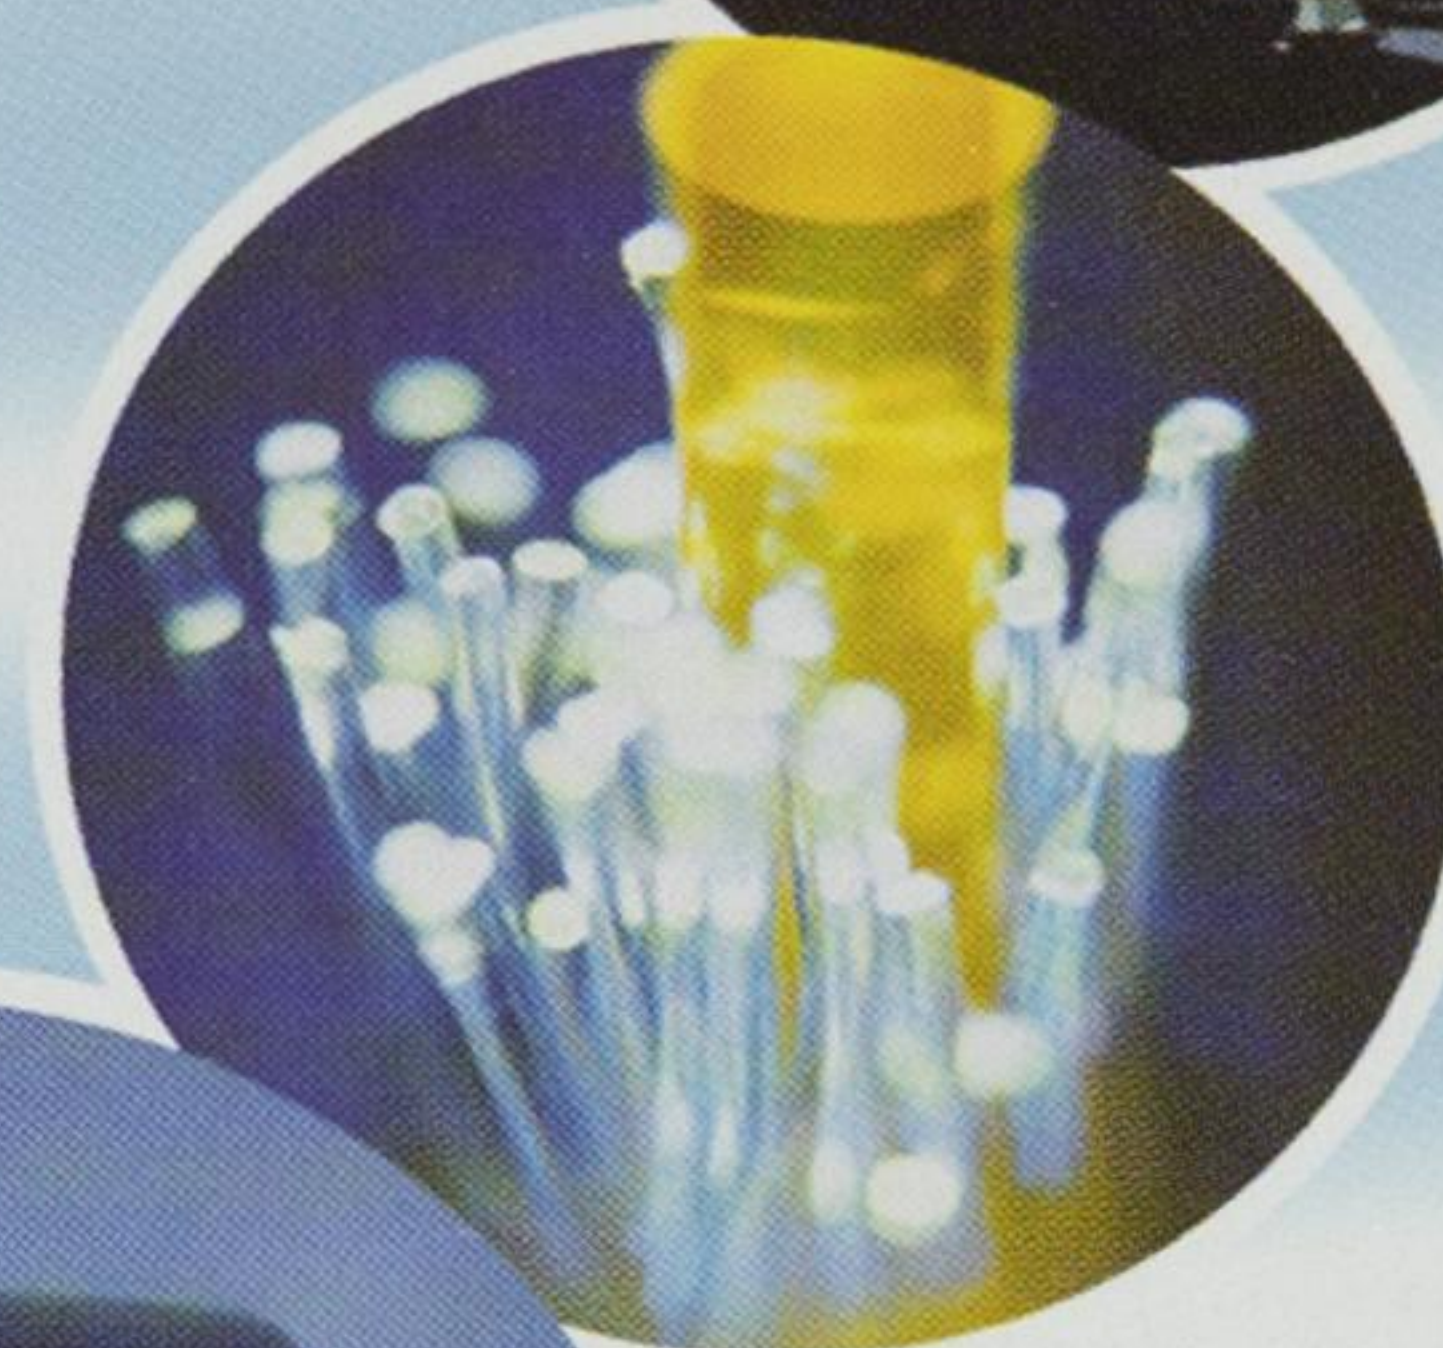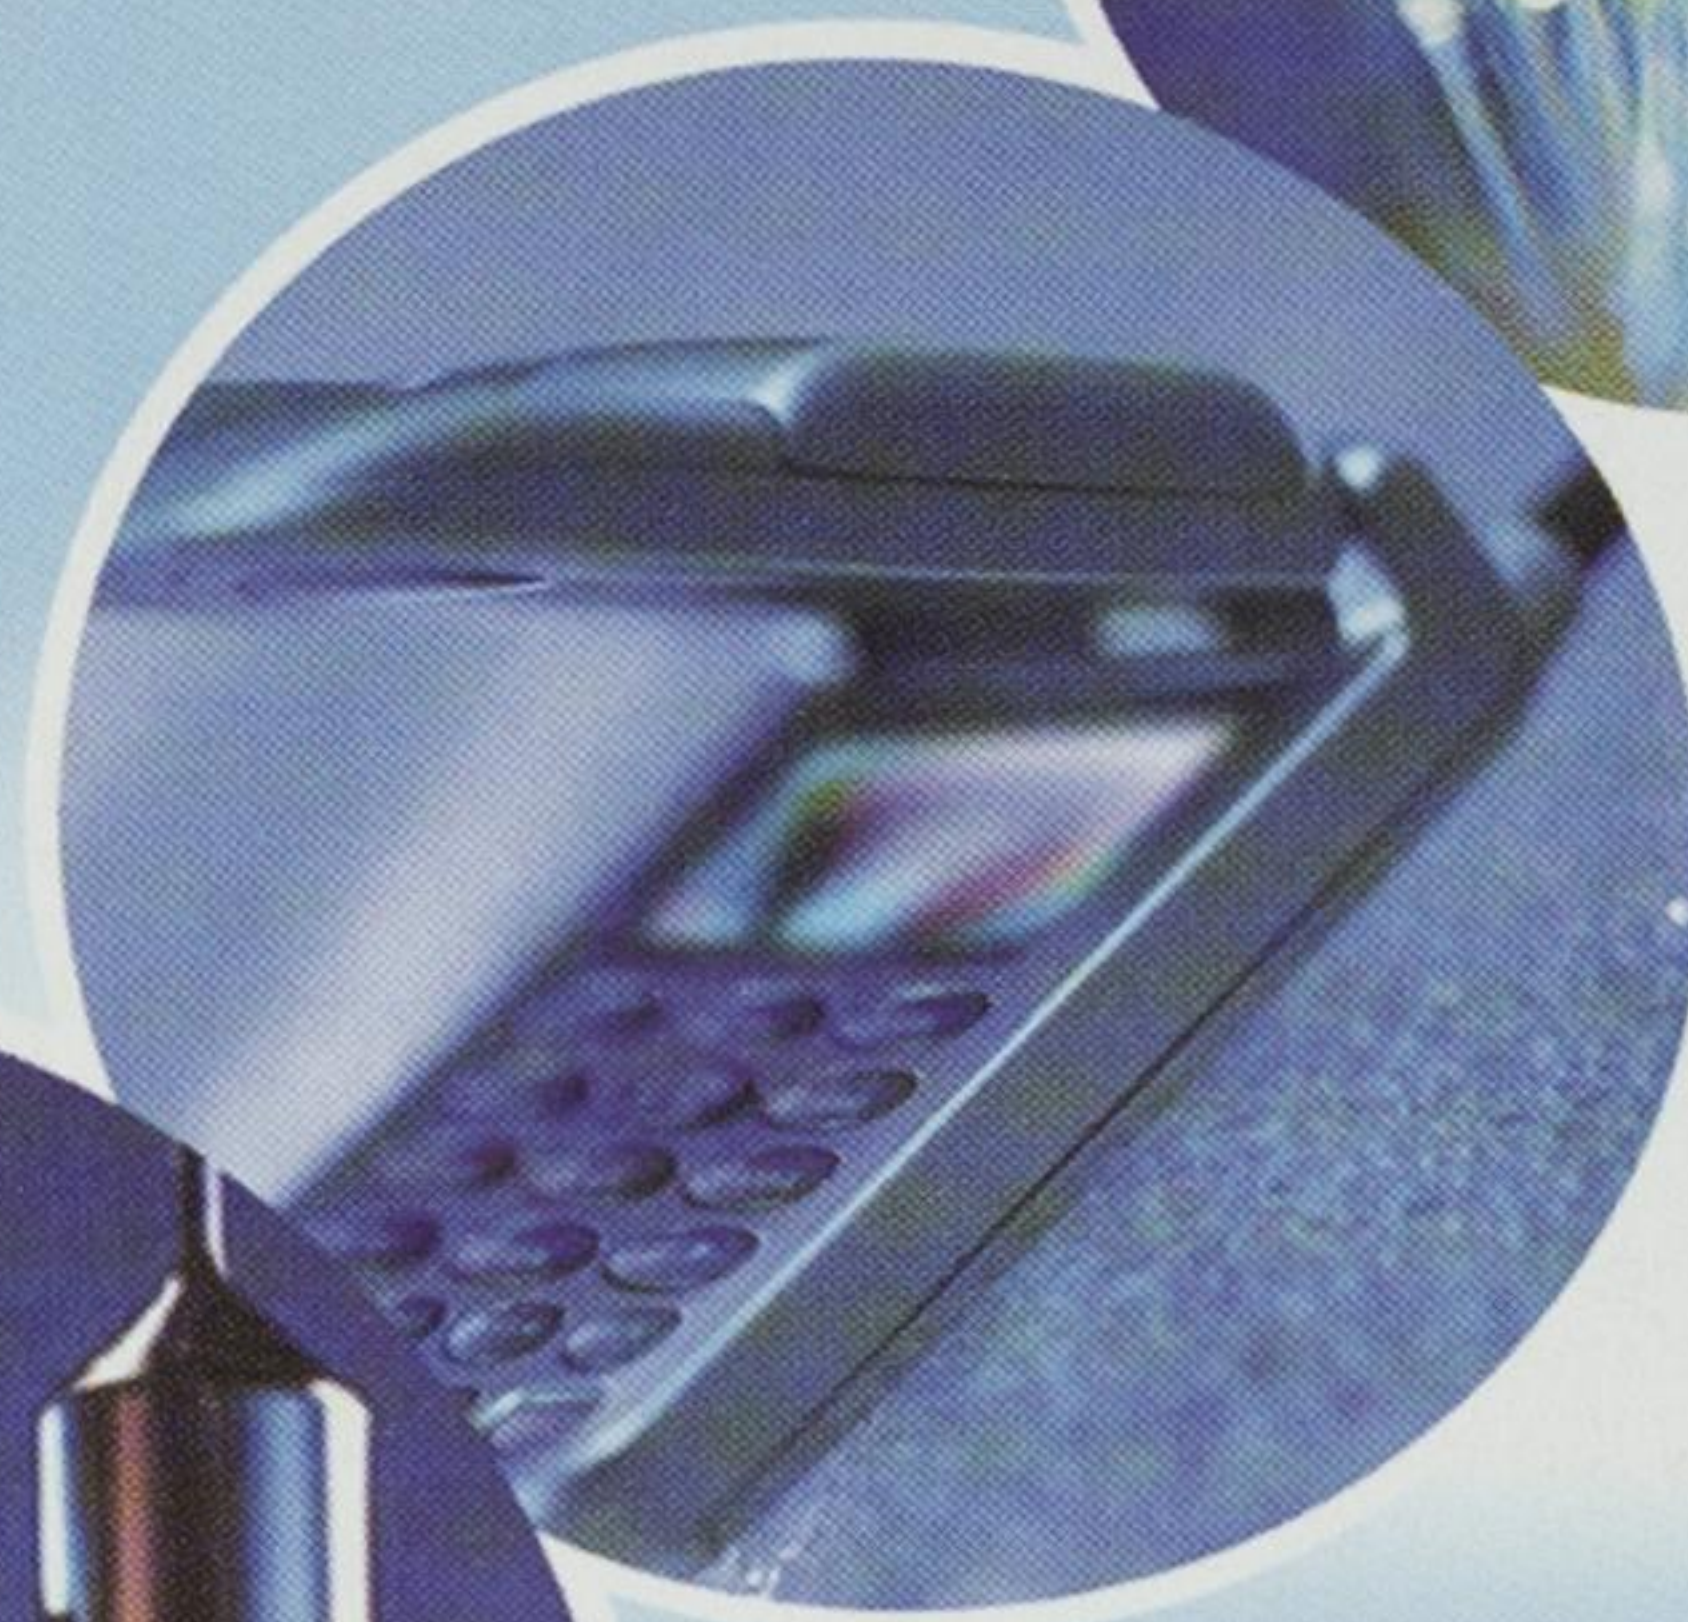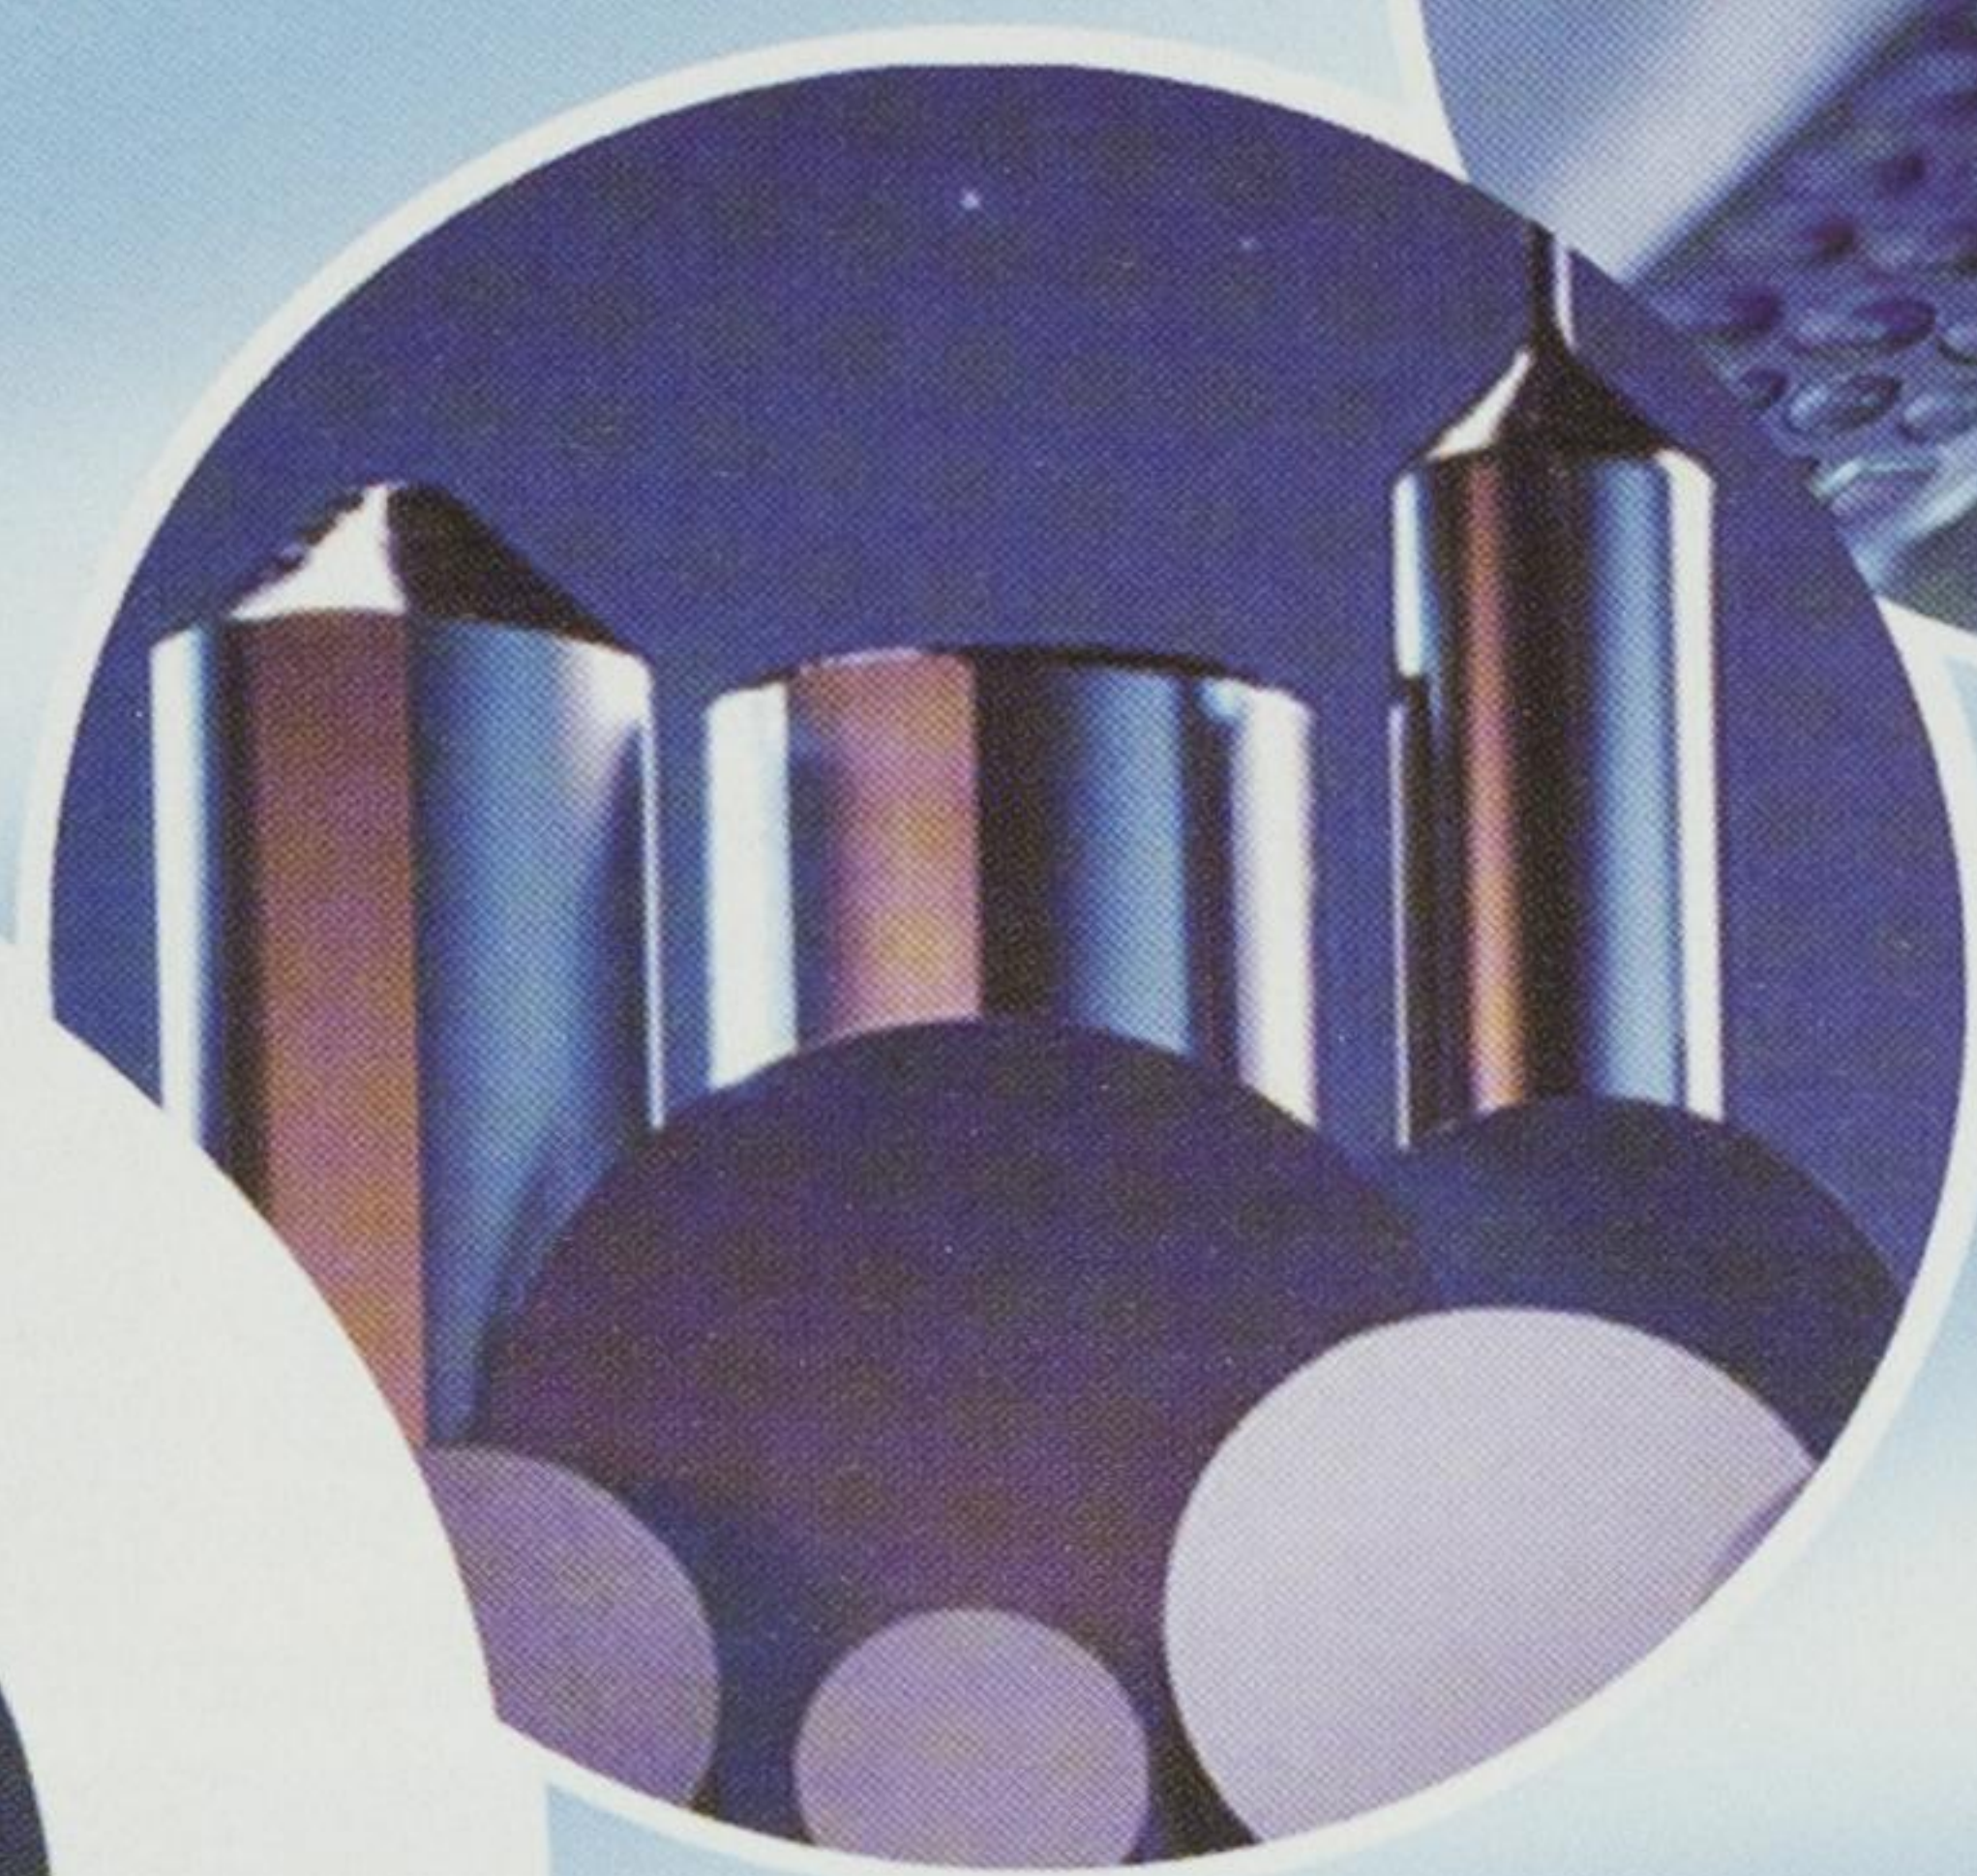

Wafer sizes to:
GaAs 150mm
InP 150mm
Ge 100mm

Low EPD
Epi-Ready
High Mechanical Strength
Excellent Electrical Uniformity

VGF - The Right Choice For Compound Semiconductors

USA Corp Office

American Xtal Technology
4311 Solar Way
Fremont, CA 94538
U.S.A
Tel: 510-226-4300
Fax: 510-683-5901
E-mail: sales@axt.com

Taiwan

Conary Enterprise Co., Ltd.
9F No.28, Sec.3
Nan-King East Road
Taipei, Taiwan, R.O.C
Tel: +886-2-2509-1399
Fax: +886-2-2501-6279
E-mail: sale@conary.com.tw

Korea

Iantek Corporation
CheongMyung Towntel 607
1021-4 YeongTong-Dong
PalDal-Gu SuWon-Si, KyungGi-Do
442-813, Korea
Tel: +82-31-204-4221
Fax: +82-31-204-4220
E-mail: iankim@kebi.com

Japan

AXT-Japan
302 Urban Plaza Izumi
2-26-4 Myojin-cho
Hachioji, Tokyo
192-0046 Japan
Tel: +81-426-56-2032
Fax: +81-426-56-6885
E-mail: yohashi@axt.co.jp

China

Beijing Tongmei Xtal Technology
4 Eastern Second Street
Tongzhou Ind. Development Zone
Tongzhou District
Beijing, China 101113
Tel: +86-10-6156-2241
Fax: +86-10-6156-2245
E-mail: sales@axt.com

United Kingdom & Scandinavia

West Associates Ltd.
73 Lodge Close
Cobham, Surrey
United Kingdom, KT11 2SQ
Tel: +44-1932-868-006
Fax: +44-1932-860-932
E-mail: westonweb@compuserve.com

France & Germany

Geo Semiconductor Ltd.
4 Quai Gustave Ador
POB 6464
CH-1211 Geneve 6
Switzerland
Tel: +33-145-3162-84
Fax: +33-145-3339-43
E-mail: ralph_hananel@compuserve.com

Freiberger

Gallium Arsenide substrates for micro- and optoelectronics

Semi-insulating VGF and
LEC wafers up to 6"

Semi-conducting VGF and
LEC wafers up to 4"

Comprehensive crystal and
wafer characterization

Bulk material with extremely low
residual impurity concentration

Excellent surface quality
for epitaxial growth

Laser-marking options

**Freiberger
Compound Materials**

Freiberg, Germany:

Phone: +49 3731 2800

Fax: +49 3731 280 106

Dayton, OH, USA:

Phone: (937) 291 2899

Fax: (937) 291 2898

www.fcm-germany.com

In alliance with the future

Tornado ICP[®]



Inductively Coupled Plasma Etching System

SAMCO's proprietary "Tornado Coil Electrode" efficiently generates a stable high-density plasma and enables the highly selective etching of quarter-micron patterns.

Low bias minimizes plasma-related damage to devices.

Applications

- GaN LED
- AlGaAs LED
- VCSEL
- Laser Diode Array
- Photonic Crystal Laser

Photonic Crystal Lasers on InP


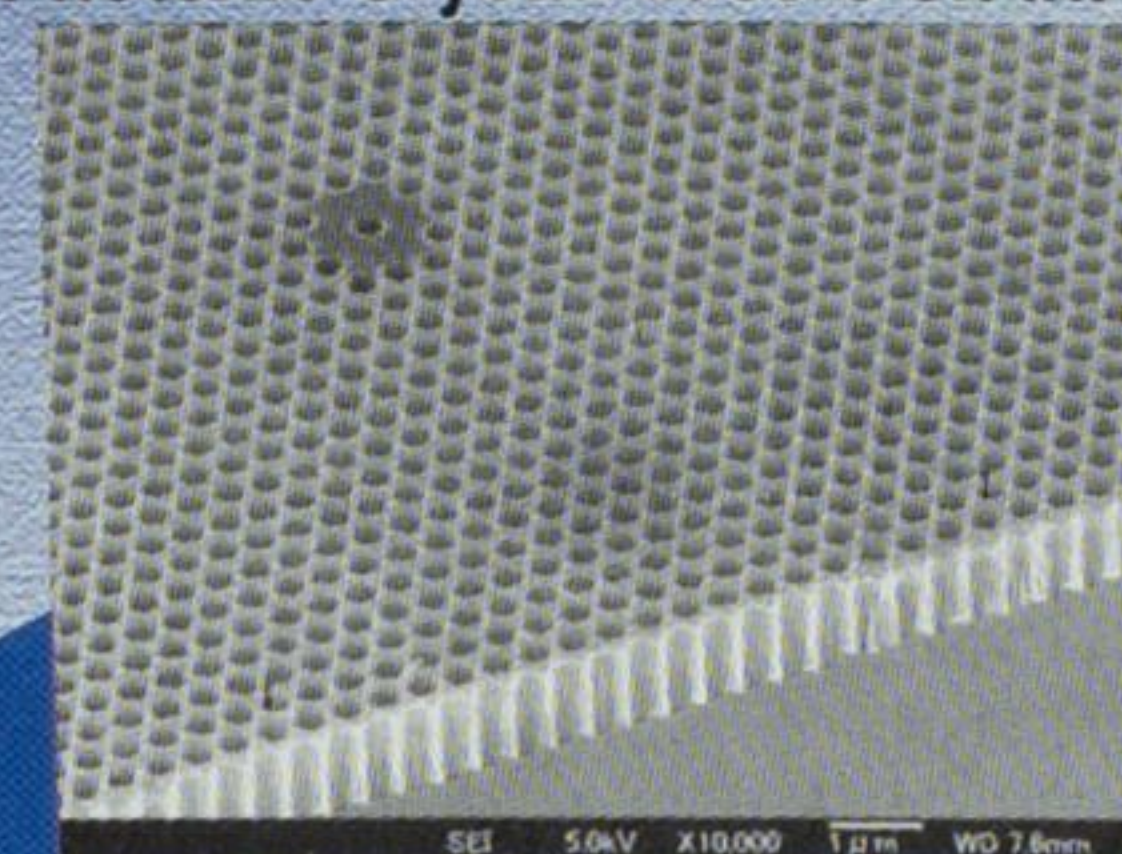


Photo Courtesy of Baba Research Lab,
Yokohama National University



For Production
RIE-200iPC

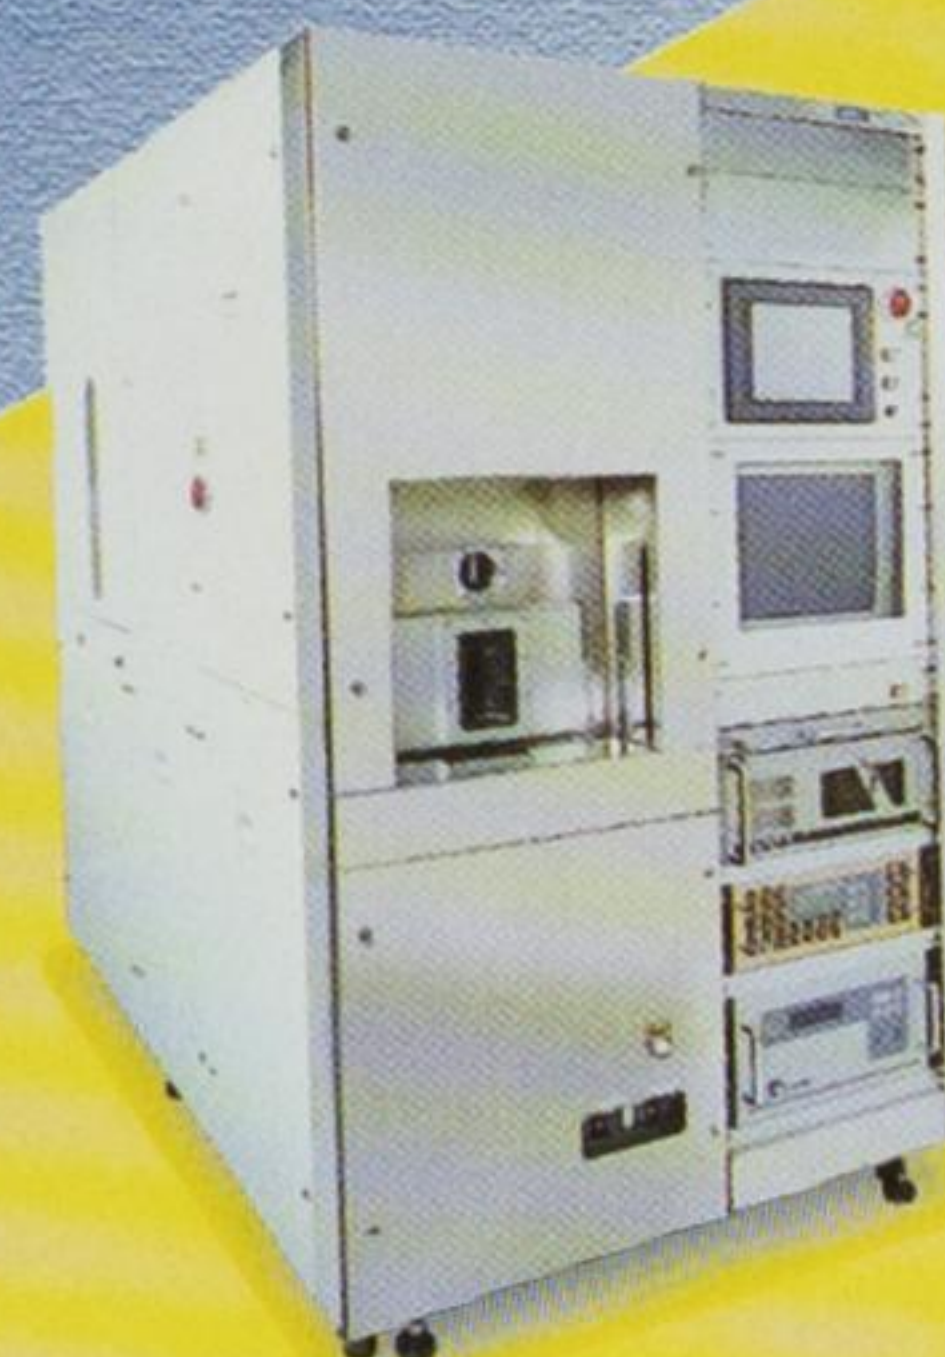

For R&D
RIE-200iP

Thin Film & Surface Technology

SAMCO[®]

SAMCO INTERNATIONAL, Inc.

<http://www.samcointl.com>

Head Office

36 Waraya-cho, Takeda, Fushimi-ku, Kyoto 612-8443 JAPAN

Phone: +81(75)621-7841 FAX: +81(75)621-0936

E-mail: itl@samco.co.jp

United States Office

532 Weddell Drive, Suite 5, Sunnyvale, CA 94089-2133 USA

Phone: +1(408)734-0459 FAX: +1(408)734-0961

E-mail: info@samcointl.com


Attention electronics manufacturers – for all your

Ceramic requirements...

High temperatures / Abrasion resistance ?

Purity Quality

Design Development Innovation

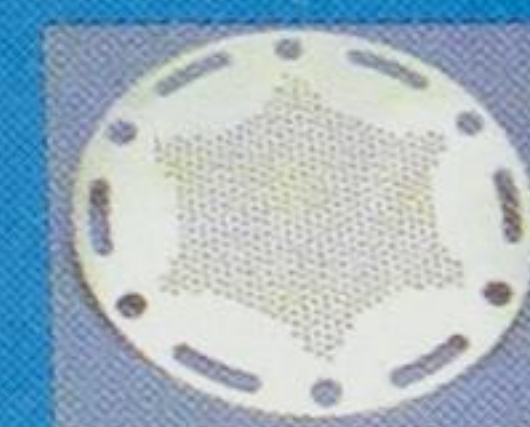

- PBN Products for example – MBE, VGF & LEC crucibles
- PBN / PG (C.V.D.) parts
- Helix support rods (PBN)
- Ceramic heaters (PBN/PG)
- Evaporator boats (for evaporation of Aluminium, Copper)
- Ion Beam grids (Molybdenum / Graphite)
- Machined parts in BN, PBN, AlN, Alumina, Glass ceramics, Graphite, etc.
- Ceramic powders – Hot Pressed and H.I.P
- Carbon-Carbon and Mesophase Carbon technologies
- Shot-blast nozzles

Contact us at any one of our sites worldwide or at :-

E-mail: info.uk@sintec-keramik.com

Tel. +44 (0)1633 636500 Fax +44 (0)1633 636501

or Website: www.sintec-keramik.com




SINTEC[®]
INNOVATION IN CERAMICS

GaAs and SiGe IC market to grow at 22% per year

The compound semiconductor IC market will experience an average annual growth rate of 22% from 2002 through 2007, according to IC Insights. In comparison, the total IC market will grow at a rate of 10% over the same time period. This data indicates that the compound semiconductor IC market peaked at \$2.42 billion in 2000, but fell to \$1.69 billion in 2002. IC Insights forecasts strong growth in 2003, when the market will reach \$1.96 billion, and expansion through 2007, by when it will have more than doubled to \$4.65 billion.

SiGe is expected to display the strongest growth in demand in the coming years. The main advantages of SiGe arise from its compatibility with conventional silicon CMOS processes, providing economies-of-scale in 8 and 12 inch silicon fabs. Also, it is possible to merge the advantages of CMOS technology in low-power, high-density digital circuitry with the high speed of the SiGe HBTs. This

IC market growth

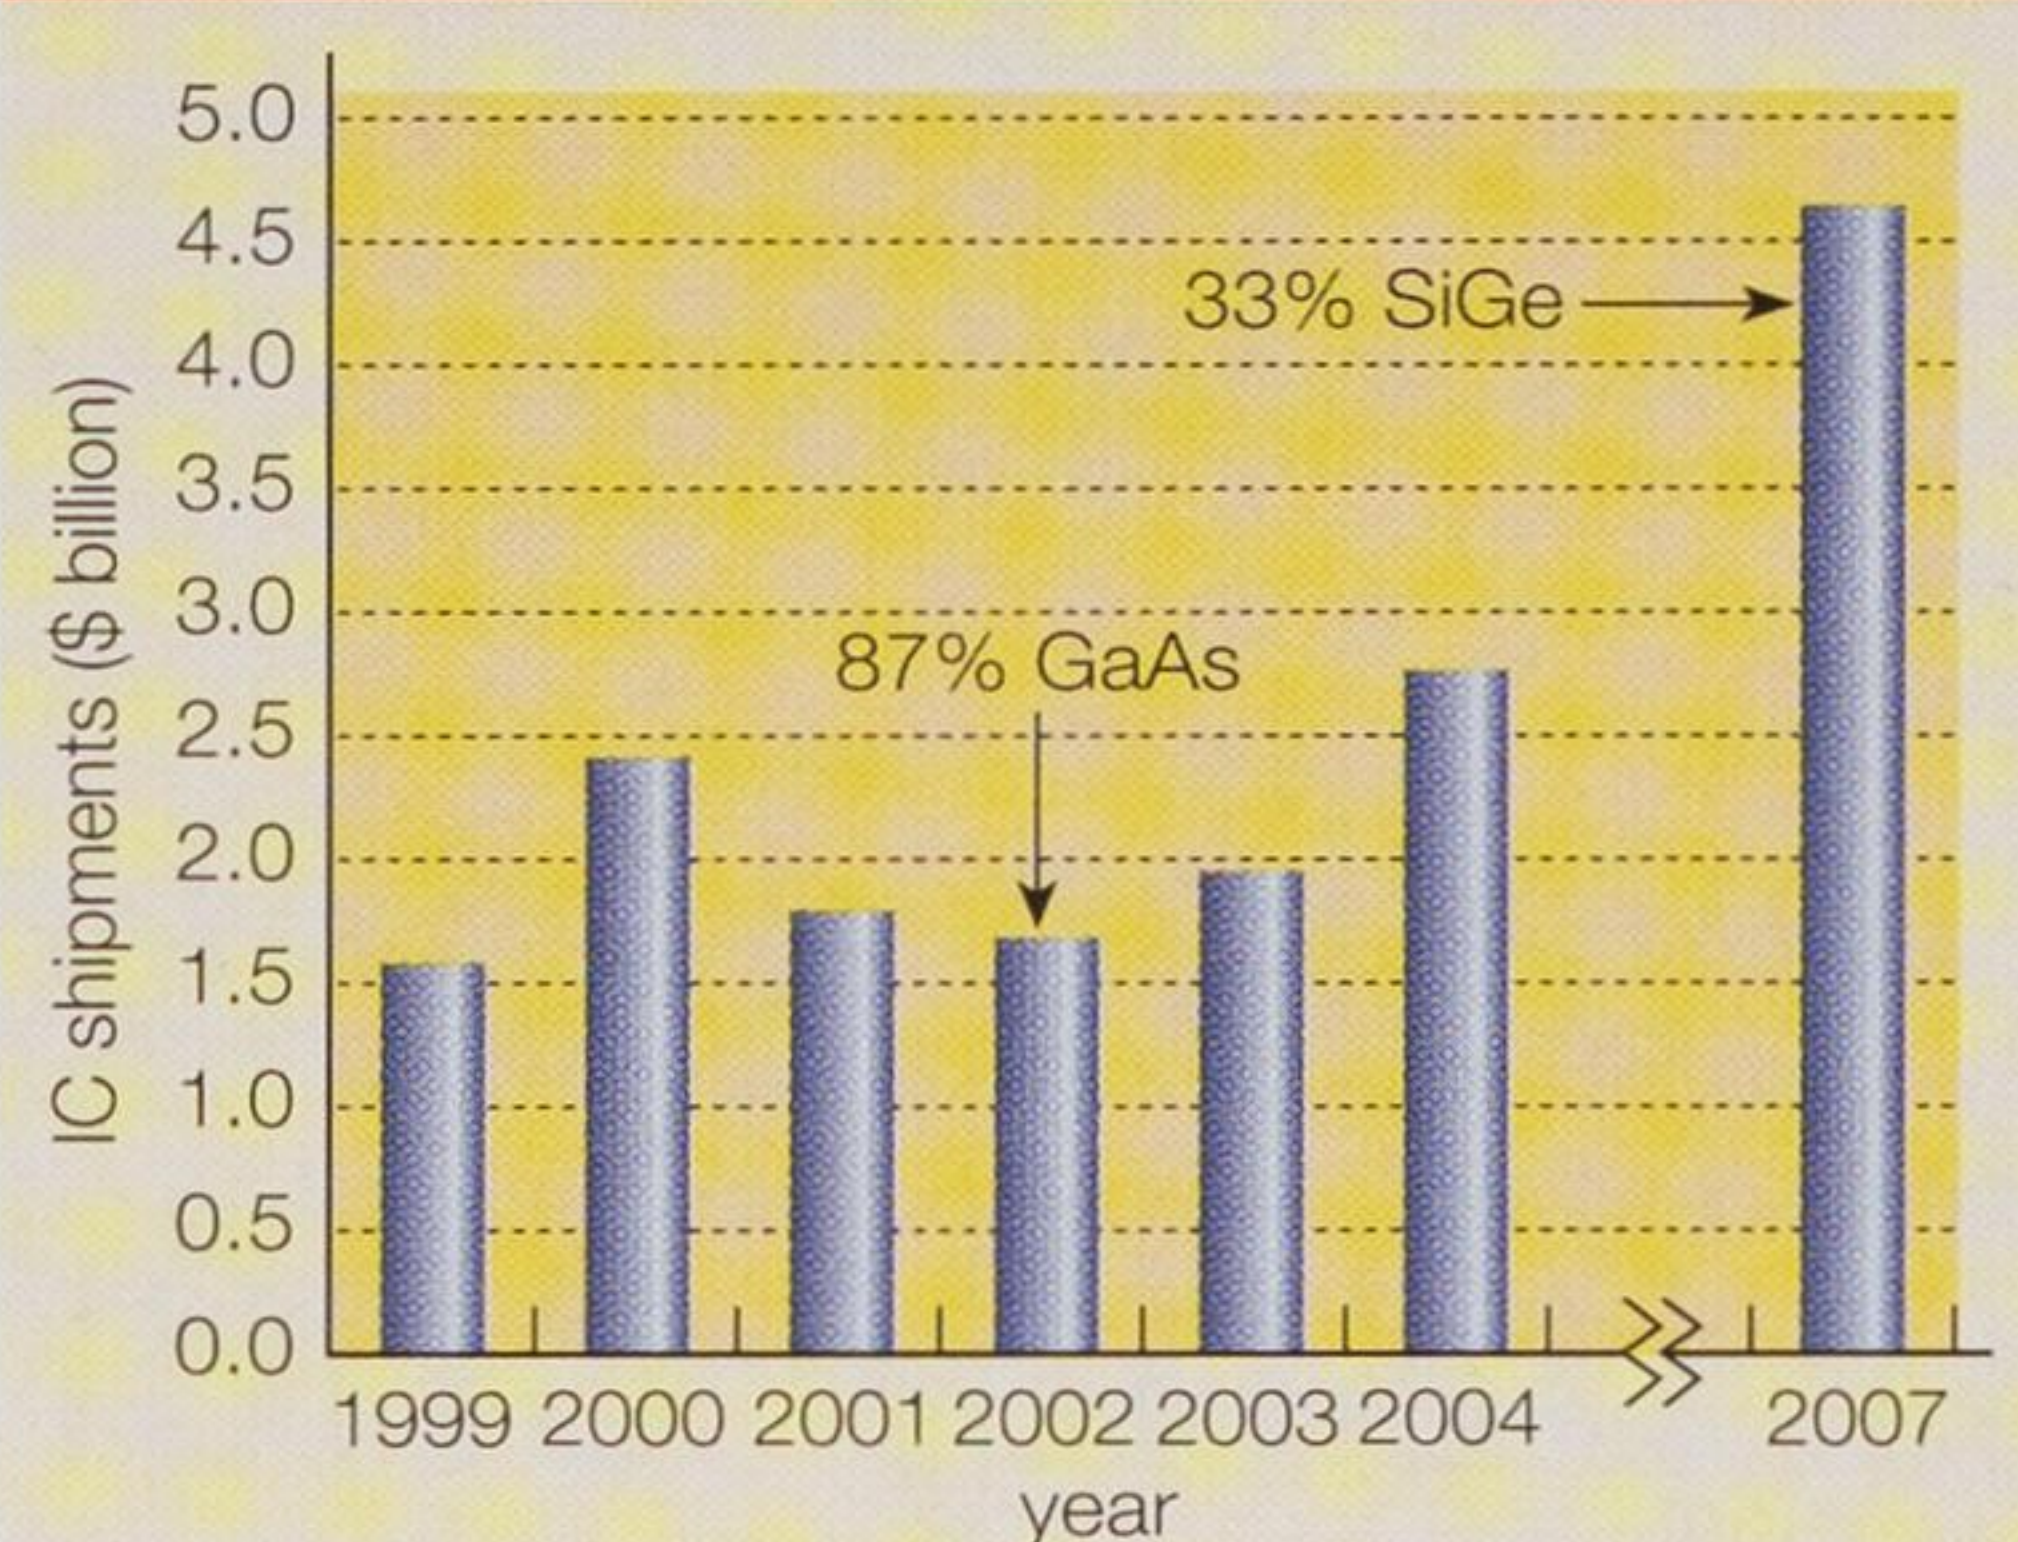

SiGe will take market share from GaAs as the overall market grows at 22% per year.

can lead to the creation of advanced BiCMOS processes that are ideally suited for highly integrated mixed-signal ICs for communications applications.

Telecom laser and transponder market to grow in 2003

According to market research firm Strategies Unlimited, the telecom laser and transponder market stands to grow more than 30% in 2003. This is largely due to the continued installation of line cards into existing systems. "Traffic is continuing to grow, albeit more slowly than in the past," said Strategies Unlimited's Tom Hausken. "Prices will stabilize enough for revenues to grow in this market beginning in 2003." However, with dozens of suppliers competing for a share of the pie, prices and margins will continue to be squeezed.

The laser market has fared better than many other optical components, such as fiber-optic cable or optical amplifiers, during the current industry downturn. Laser products are installed into networks not only as new systems are installed, but also as new DWDM channels are added to existing systems. In addition, average selling prices (ASPs) of lasers in general have increased, since new, higher data rate lasers are more expensive to package. In contrast, ASPs for many passive optical components have risen only modestly with new generations of systems.

The integration of new features into functional blocks, or transponders, provides a higher-revenue opportunity for many players in the 10 Gbit/s and 40 Gbit/s markets.

However, excess inventories still remain for products aimed at the long-haul market, such as CW lasers on the ITU grid. Products in the best inventory position are metro transceivers and newer products such as coarse WDM lasers.

Critical consumables market set to double in the next five years

The global market for critical consumables utilized in the fabrication of compound semiconductor-based devices such as laser diodes, LEDs and ICs reached almost \$1.1 billion in 2002, according to a new study by Kline & Company. Over the next five years, this figure is projected to double to \$2.2 billion. The report covers substrates; epitaxial wafers; precursors for MOCVD, MBE and metallization; and

ancillaries including photoresists and etchants.

"Many of the leading suppliers of chemicals and materials are also leading suppliers to the CMOS industry," says Michael Corbett, director of Kline's Electronic Chemicals and Materials practice. "These companies feel that they can take lessons learned in CMOS and apply them here to develop new business models to better meet customer needs."

Quantum Electronics & Sensor Technologies

... driving advanced compound semiconductor technology into the future




QinetiQ


Custom Epitaxy & Characterisation
Custom Device Fabrication & Test
High Performance Thermal Imaging
High Speed, Low Power Electronics
High Power, High Temperature Electronics
Magnetic Field Sensing Technology
Gas Sensing Technology

Tel: +44 1684 895365
Email: tjphillips@qinetiq.com
Web: www.qinetiq-quest.com

reliability local emergency
 unparalleled analytical capabilities
 investment in your future
 technology leader MOCVD full service
 consistent reliability service
 quick to respond react total flexibility relationships
 the right attitude data & publications local stocking
 quick to respond react total flexibility relationships

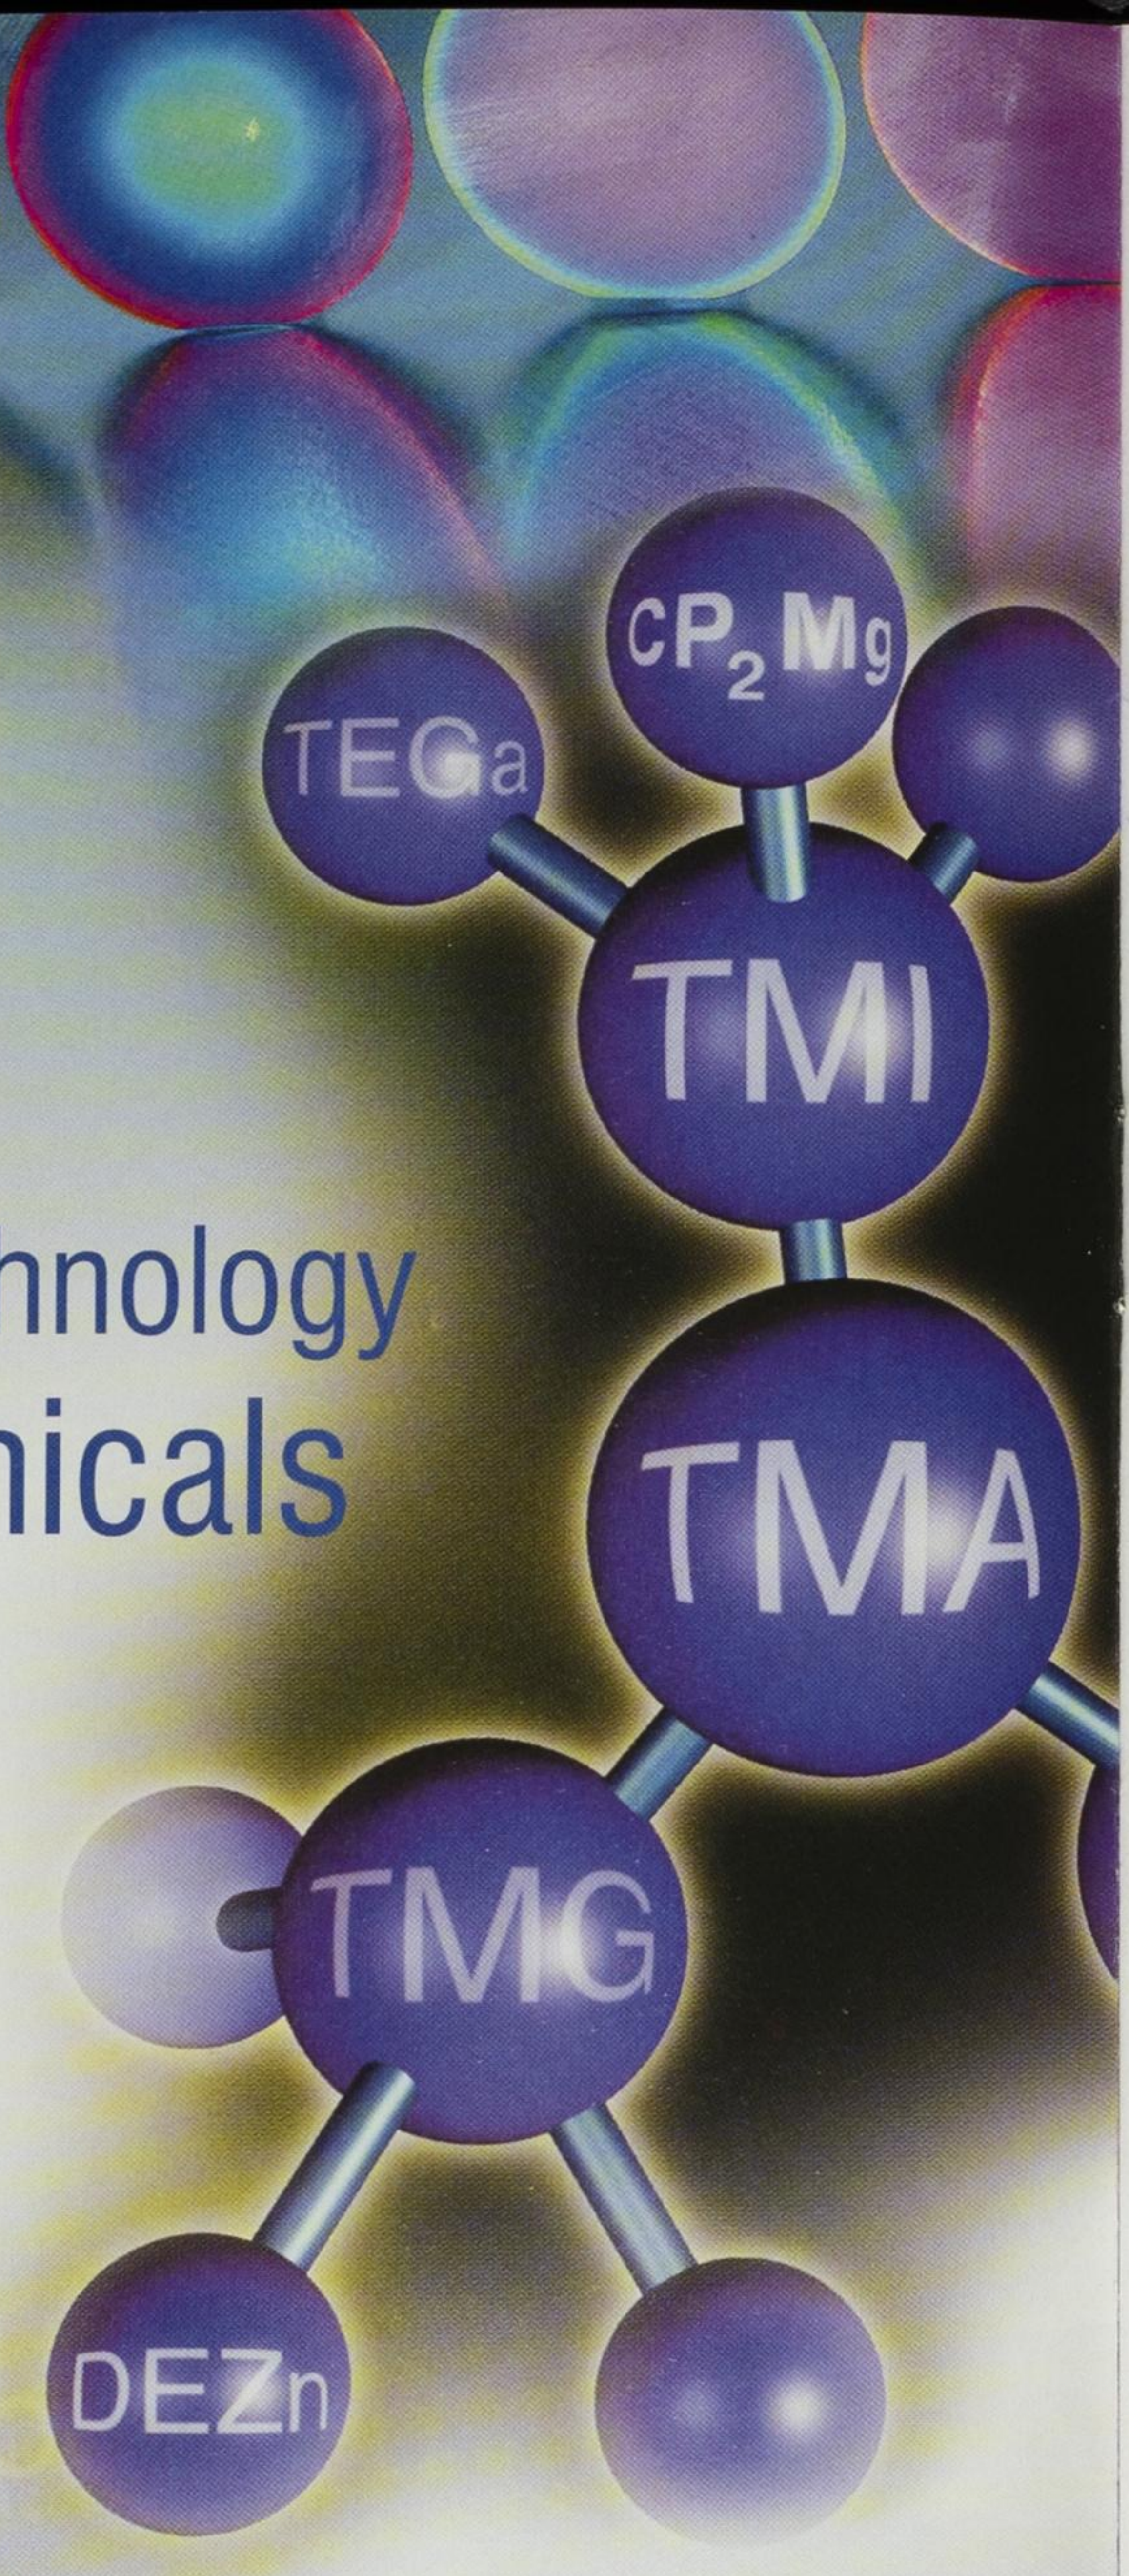

leading edge on innovation and technology
 ultra high purity chemicals

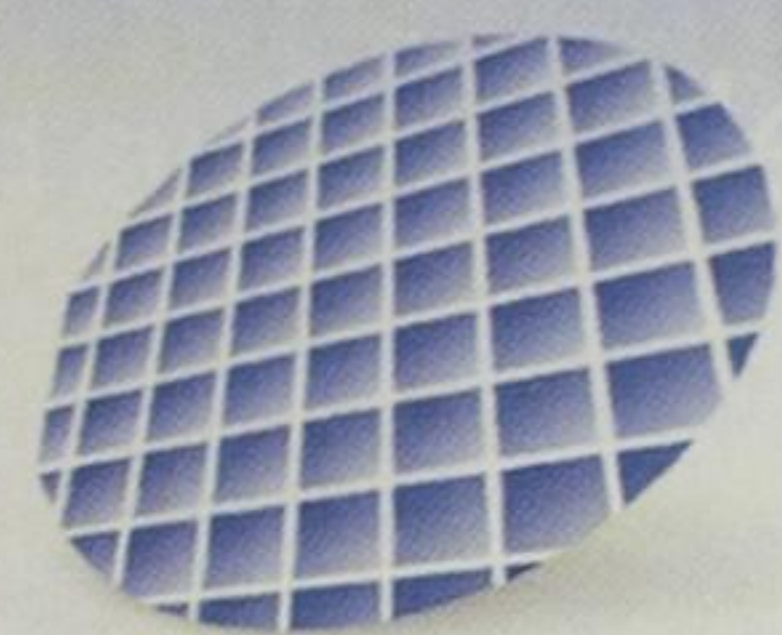


epichem group

innovation we listen incredibly focused
 innovation technology leader
 incredibly focused continued success

www.epichem.com

UK Tel: +44 (0)151 334 2774
 USA Tel: +(1) 610 706 0606
 Germany Tel: +49 89 300 2241
 Europe Tel: +46 85 742 0469

Japan Tel: +81 3 3432 7032
 China Tel: +86 21 6443 3466
 Singapore Tel: +65 483 3386
 Taiwan Tel: +88 62 2 501

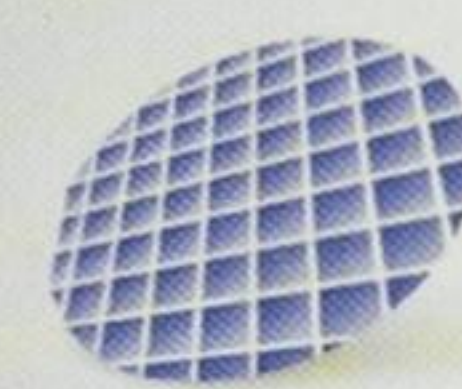


epichem
 metalorganics



epichem
 gases



epichem
 oxides & nitrides

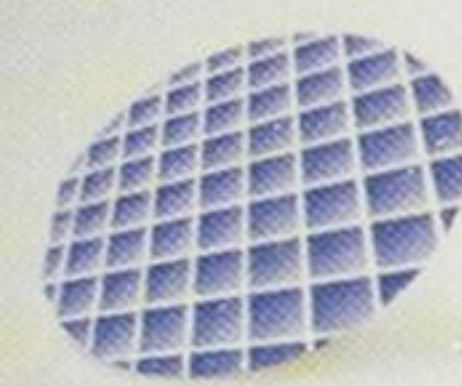

epichem
 surface coatings

HB-LED market reaches \$1.8 billion

After a flat year in 2001, the market for high-brightness (HB) LEDs grew by 50% to \$1.8 billion in 2002, according to Robert Steele of Strategies Unlimited. Speaking at the recent Strategies in Light conference, Steele explained that growth was mainly driven by the mobile appliance market, which now accounts for 40% of the HB-LED market.

Other key markets include signs, which range from single-color moving message panels to full-color video screens in sports stadiums, and both interior and exterior lighting in automotive applications. These markets had a share of 23% and 18%, respectively, while illumination accounted for 5% of the total market in 2002 (see chart).

The mobile appliance market, which includes phone screen and keypad backlights, PDAs and digital cameras, grew by a massive 114% compared with 2001, despite very little growth in handset shipments. More HB-LEDs were used in handsets due to a proliferation of full-color screens, larger screens, secondary screens and backlighting for keypads.


Sanyo unveils phone with OLED display

Sanyo Electric, a Japanese handset manufacturer, has unveiled a new mobile phone with a full-color organic LED (OLED) display screen, which will enter production in summer 2003. Also, Sanyo and Eastman Kodak are to jointly invest a total of ¥20 billion (\$165 million) to boost the production capacity of their joint venture, SK Display, which manufactures next-generation displays using Kodak's patented OLED technology. SK Display plans to establish a monthly production capacity of 1 million 2 inch panels for portable devices such as digital still cameras and mobile phones. Other applications are also emerging; Philips expects to produce 100,000 electric shavers featuring OLED displays this year.

The Sanyo phone is the first to feature an OLED display since NEC produced its FOMA N2001 for NTT DoCoMo in mid-2001. Before that, Motorola's TimePort handset featured an OLED display made by Pioneer, although this was a three-color rather than full-color display.

The introduction of full-color OLED displays in phones could affect demand for white LEDs, which are currently used as backlights for many types of full-color LCD panels.

2002 HB-LED market

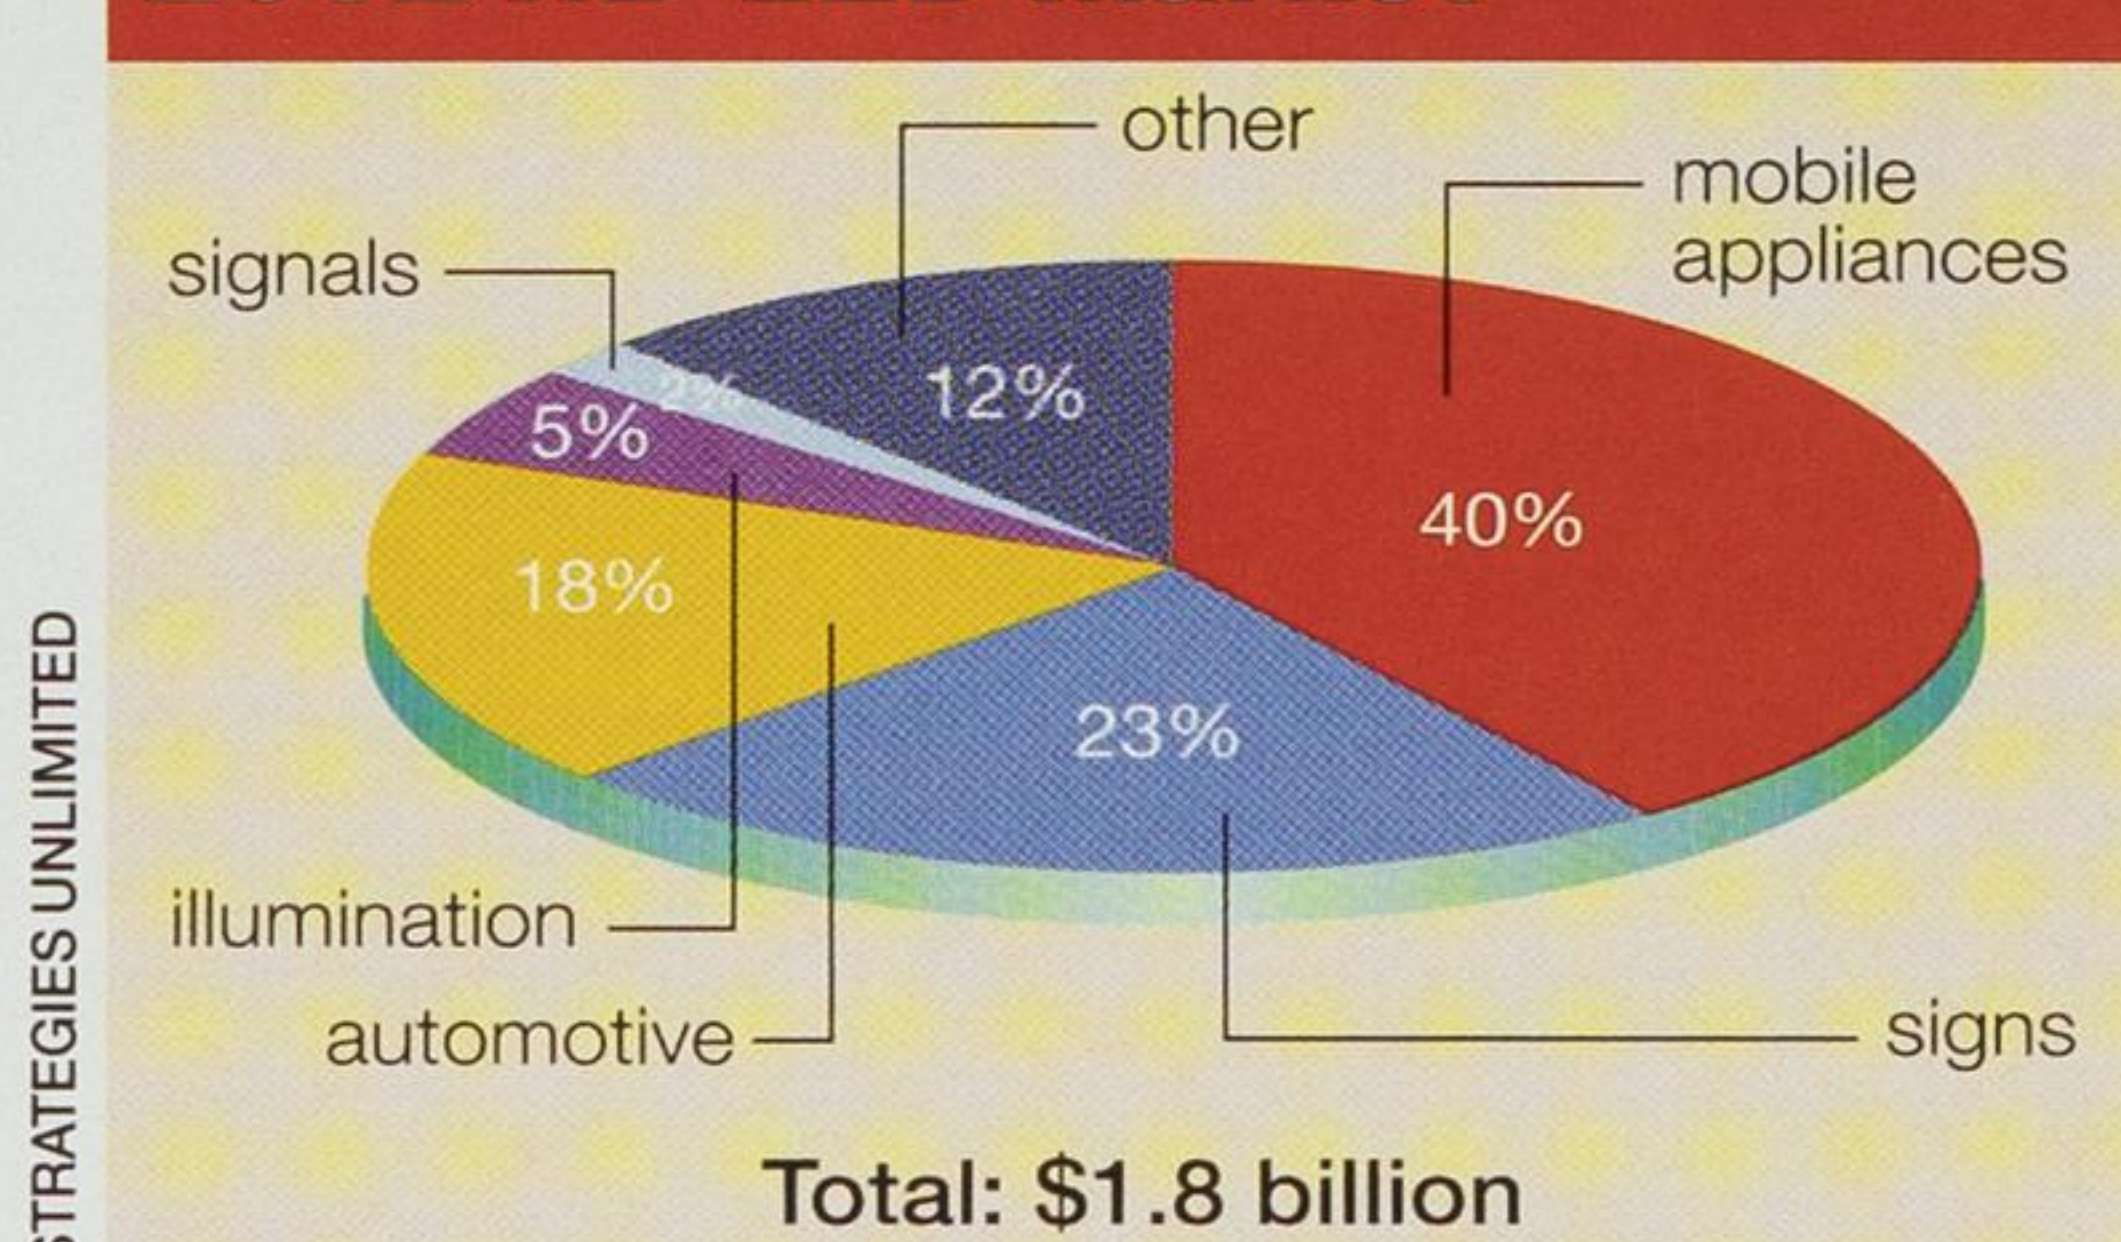

A growth of 50% in the high-brightness LED market in 2002 was largely driven by demand from mobile appliances, and in particular from phone handsets.

In terms of materials, the market was dominated by InGaN-based devices, which accounted for 68% of total HB-LED sales. Again, this reflects the use of blue, green and white LEDs in handsets. Steele estimated that around 3.5 billion InGaN-based LEDs were shipped in 2002, although this does not include low quality "off-spec" chips. AllInGaP LEDs


accounted for 24% of the total market in 2002.

Taiwan is rapidly emerging as a leading supplier of InGaN-based LEDs, with four established manufacturers (UEC, Epistar, Arima and Formosa Epitaxy) and more than 10 others with InGaN capability. Steele estimated that there are more than 80 InGaN MOCVD reactors in Taiwan.

Looking ahead, Steele predicted steady growth in the HB-LED market of about 20% per year for the next five years, assuming normal growth takes place in the general economy.

● Ruediger Mueller, CEO of Osram Opto Semiconductors, described his company's new InGaN chip concept. After developing shaped InGaN-on-SiC devices (the ATON chip and its flip-chip variant, NOTA – see *Compound Semiconductor* February 2001 p7), Osram Opto has now developed a ThinGaN chip. This consists of an InGaN-on-sapphire chip, which is metallized and bonded to a carrier wafer. The sapphire substrate is subsequently removed by a laser-off technique. The device is expected to offer an extraction efficiency of about 75%.

Fast UV Laser Scribing of Nitride LED Wafers

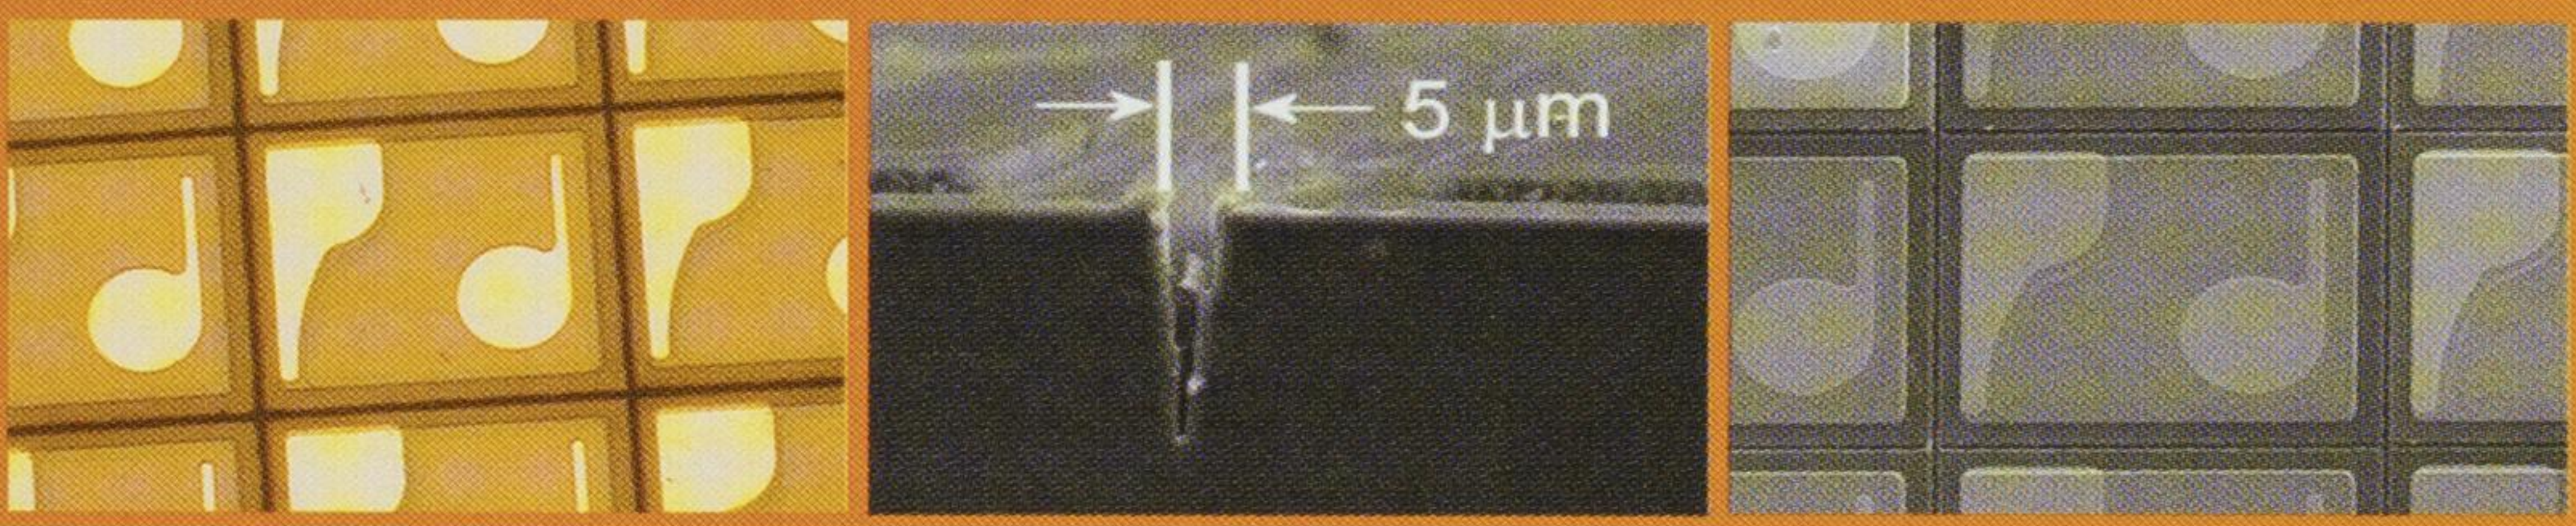

JPSA Introduces the IX-300 ChromaDice UV laser wafer scribing system.

Features Include:

- State-of-the-art 266nm DPSS laser process
- Narrow cut width: as small as 5 microns
- Excellent die yield: 97 - 99%
- Unmatched throughput: up to 5 wafers per hour
- Low operating cost: < \$2 US per wafer
- Minimal impact on LED performance
- Better than 99% system uptime
- User friendly Windows 2000™ software
- Automatic wafer alignment: <1 minute to align
- Apps lab and contract manufacturing services

JPSA UV Laser Systems
www.jpsalaser.com



J.P. Sercel Associates Inc.
 Tel: (603) 595-7048
 e-mail: sales@jpsalaser.com



Photodigm unveils 1310 nm surface-emitting laser

Photodigm, an optical components start-up based in Richardson, TX, has achieved single-mode output powers of 6 mW with its 1310 nm grating-outcoupled surface-emitting (GSE) laser technology. The GSE laser uses a proven edge-emitting epitaxial material structure based on AlInGaAs/InP, and relies on first and second order gratings for the DBR reflectors and the outcoupler.

"This represents a significant breakthrough for Photodigm," said John Spencer, president and CEO of the company. "For the first time we have shown that a small outcoupler grating is able to deliver a significant amount of power into single-mode fiber. With this unique semiconductor laser architecture, we now expect to provide major improvements in the cost and the performance of a wide range of photonic devices in the enterprise and access markets."

Photodigm's devices exhibit threshold currents below 20 mA and slope efficiencies of 0.1 mW/mA. The lasers have a beam divergence of $5 \times 7^\circ$, modulation speeds of 2.5 Gbit/s and a side-mode suppression ratio (SMSR) greater than 35 dB. The narrow beam divergence provides a superior fiber coupling capability and, because it is a surface-emitting device, the laser offers significant efficiencies in testing and packaging.

In a separate development, Photodigm has been awarded a contract for approximately \$1 million from the US government to develop a high-power surface-emitting laser. This program will build on Photodigm's GSE laser technology by including a lens-like lateral layer for mode control. The resulting laser is designed to produce a "high brightness" beam at 975 nm with an output power up to 10 W.

Zia and Aculight demonstrate quantum-dot ECL


Aculight Corporation, a developer of laser technologies including external cavity lasers (ECLs), and Zia Laser, a manufacturer of quantum-dot (QD) lasers, demonstrated a broadly tunable QD ECL at the Photonics West show in January. The laser combines Zia Laser's GaAs-based 1300 nm QD gain chip with Aculight's external cavity design. Zia's dots-in-a-well (DWELL) technology enables broad tunability through engineered QD nanostructures grown within the active region of the laser.

The QD ECL is capable of tuning over a 100 nm range with a maximum CW output power of 3 mW, which exceeds the capabilities of more conventional quantum-well devices. Potential applications of the laser include medical diagnostics (spectroscopic and imaging modalities), test and measurement, and spectroscopy.

Products from Alcatel, Multiplex and Modulight

- The 1926 SDH Rx 2R from **Alcatel Optronics** is a 2R (Re-amplification/Re-shaping) receiver that contains an APD detector integrated with a preamplifier ASIC. The product has a 30 dB dynamic range, a compact standardized 24-pin package measuring $58.7 \times 35.7 \times 8.9$ mm, and a typical power consumption of 1 W. The receiver has its multi-rate capability from 100 Mbit/s to 2.7 Gbit/s and does not use clock recovery.

- The MRP10N5 from **Multiplex** is an MSA-compliant, 10 Gbit/s avalanche photodiode (APD) receiver in a $10.75 \times 8.0 \times 3.43$ mm package. The "gull wing" lead configuration (see photo) allows the MRP10N5 to provide outstanding

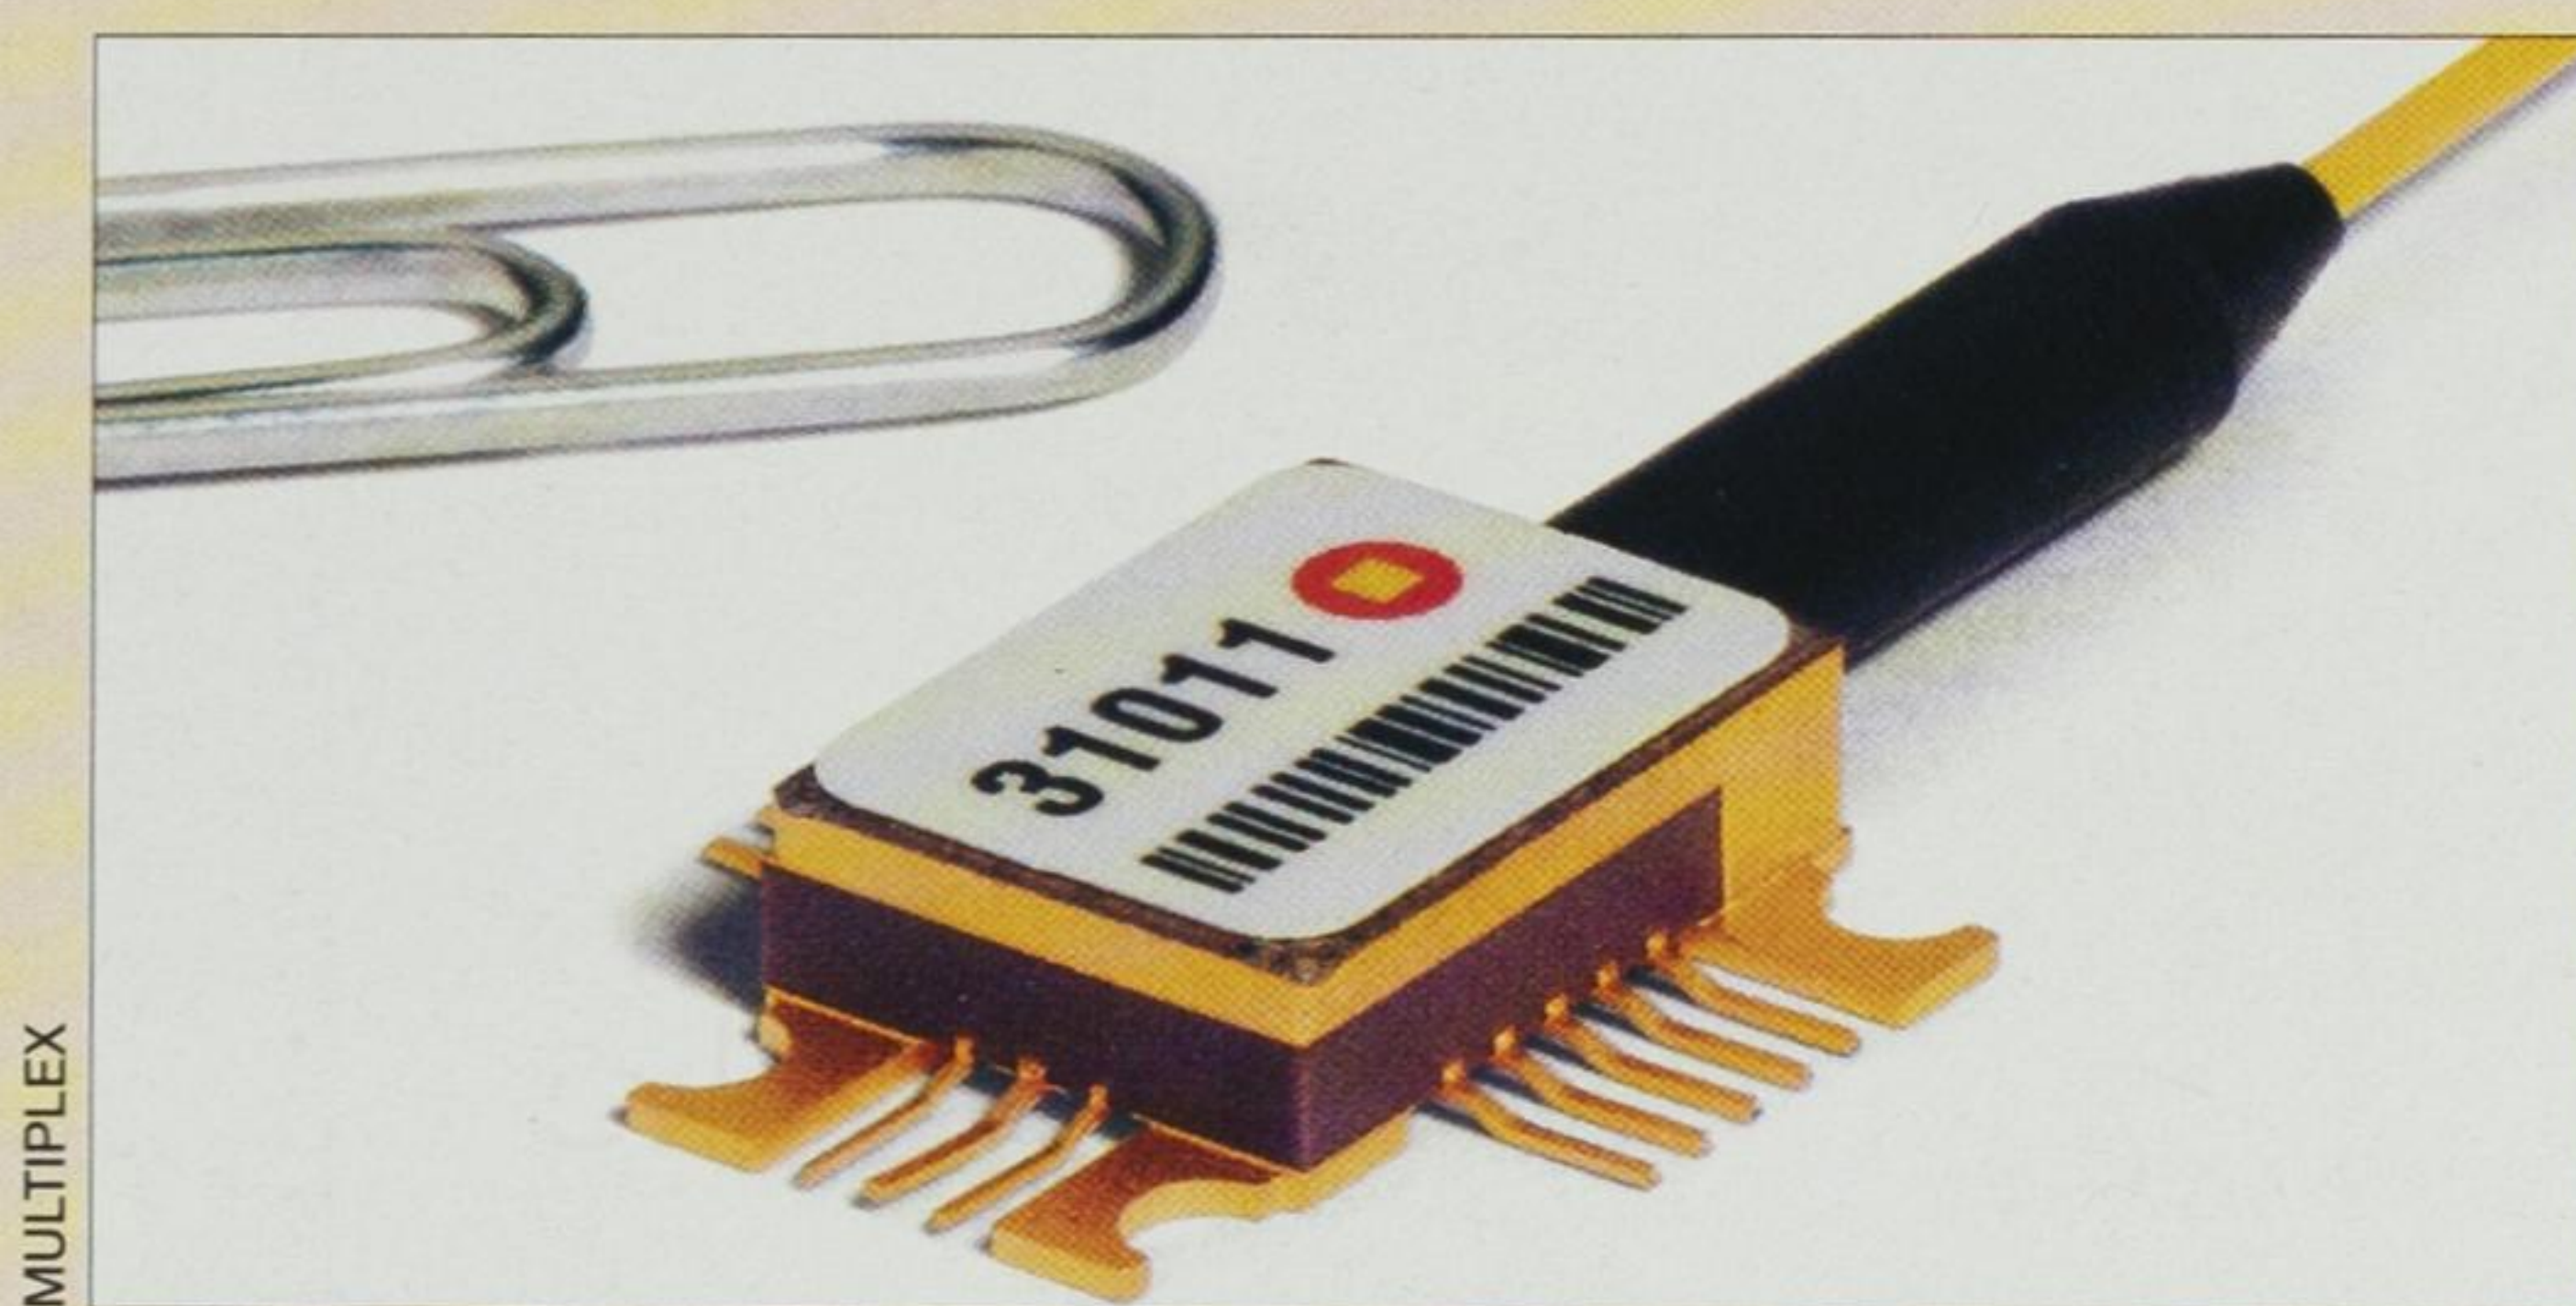

The ultra-compact MRP10N5 from Multiplex is a 10 Gbit/s avalanche photodiode receiver.

bandwidth of better than 15 GHz. Sensitivity is also extremely high at better than -26 dBm at a bit-error-rate of 10^{-12} . For lower performance applications, Multiplex is also offering a *pin* version with a sensitivity of -19 dBm.

- **Modulight** has recently commenced production of its 1310 nm Fabry-Perot laser chip for use in

uncooled serial 10 Gbit/s transceivers and in transponders for very-short-reach link distances. Many serial point-to-point 10 Gbit/s transmission links will be shorter than 2 km, says Modulight, and for these applications customers are not willing to invest extra in a DFB laser that allows 10 km transmission.

In brief...

Opto Speed and Mitsui reach Japanese distribution agreement

Opto Speed, a manufacturer of high-value-added optoelectronic modules for the communication, test and measurement, medical and defense markets, has signed a distribution agreement with Mitsui & Co. Ltd to sell and support Opto Speed's suite of state-of-the-art high-value-added products in the Japanese market.

Intense Photonics opens new cleanroom

Intense Photonics has further expanded its capability with the addition of 1000 square feet (95 square meters) of cleanroom at its semiconductor fabrication facility located in High Blantyre, Scotland, UK. The new area will provide additional optoelectronic life test, assembly and packaging development, and will enable Intense Photonics to fully qualify its products in house.

SemiSouth wins contracts

SemiSouth Laboratories, a developer of SiC-based electronic devices, has announced two more new small business innovation research Phase I contract wins from the US Department of Defense (DoD).

In the first contract, monitored by the Office of Naval Research, SemiSouth is developing high-current, high-voltage SiC diodes for power rectification to meet new needs in on-board ship energy conversion.

"SiC opens up new possibilities in megawatt power-switching applications for both DoD and commercial applications," said William Draper, SiC product development engineer. "What has limited development to date is the ability to scale devices up to large current operation (over 10 A) with acceptable cost and yield. SemiSouth has innovative technology, which we are examining as a promising solution to this roadblock."

In the second contract, monitored by Air Force Research Laboratory, SemiSouth is look-

ing at insertion of SiC RF transistors into near-term L-band missile defense radar applications.

"We are excited about the possibilities of this contract to explore proprietary SemiSouth technology as a way to accelerate the technology readiness of SiC for several key near-term radar system programs," said J B Casady, president and CTO of SemiSouth.

The awards represent the seventh and eighth DoD contracts in the first 18 months of operation for SemiSouth. "We are proud of the faith shown in our technology by DoD sponsors," said Casady.

Based in Starkville, MS, SemiSouth Laboratories is a privately held developer and manufacturer of silicon carbide electronic devices, and a merchant supplier of SiC-based epitaxial material. The company's devices manage and control or regulate power, protect against transient voltage spikes and transmit/amplify signals for applications in radar, power conversion and space.


SiC-based 1200 V Schottky rectifiers unveiled by Cree

Cree has broadened its SiC Schottky rectifier product family to include 1200 V devices, which are now being sampled alongside 600 V devices that are in production. The 1200 V products consist of a 5 A Schottky diode in a TO-220 package and a 10 A device in a TO-247 package.

The SiC Schottky rectifiers are targeted for applications such as the antiparallel diode for high-frequency inverters, snubber diodes for high-current IGBT inverters, the boost diode for 480 V input power factor correction, and high-voltage multipliers.

Initial testing in a motor drive showed a reduction of losses which should save energy and increase the performance of electrical variable-speed motors typically used in light industrial automation or heating, ventilation and air-conditioning (HVAC) units.

BANDWIDTH SEMICONDUCTOR

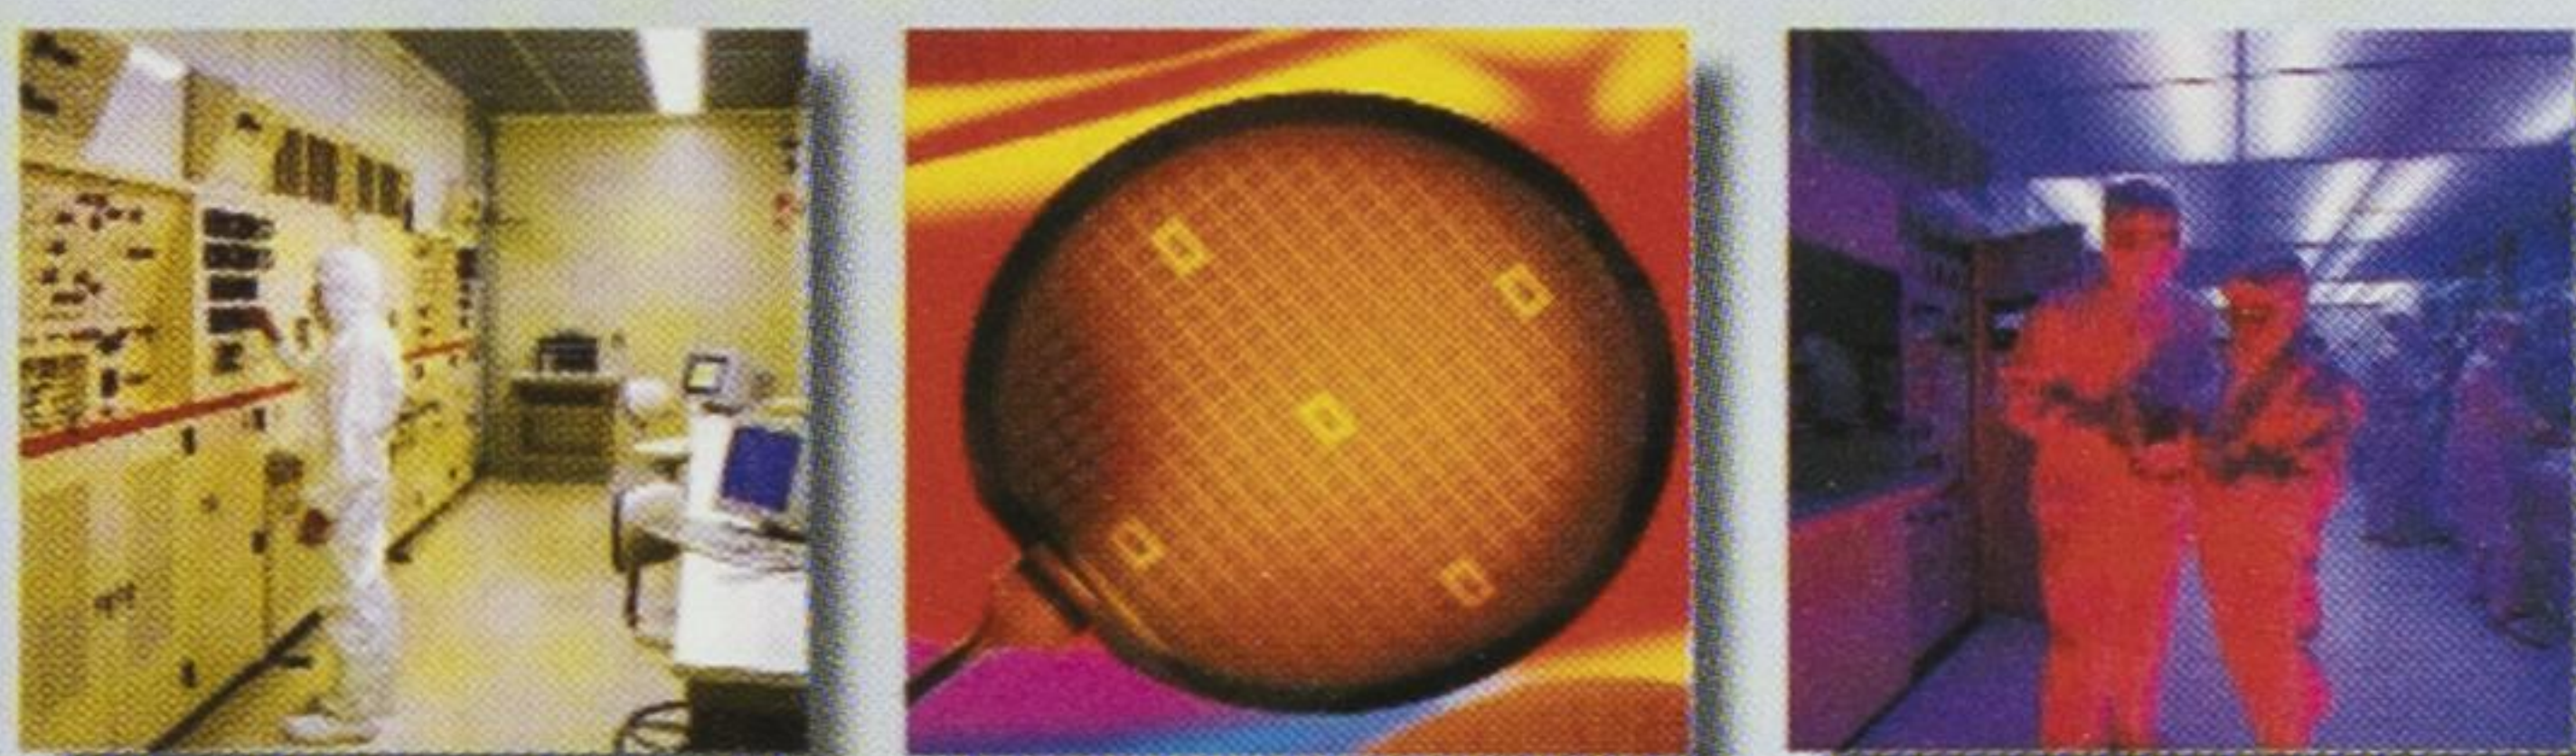

With a cohesive and complete team of professionals, **Bandwidth Semiconductor** continues to grow in today's marketplace. We operate a complete compound semiconductor growth & device fabrication line housed in a 13,500 sq. ft. class 100/1000 cleanroom.

Epitaxial Services

MOCVD Experts — 20 Years Experience
Our extensive MOCVD experience and capacity enable us to grow a wide range of GaAs and InP epitaxial structures to our own or to customer's designs.

- GaAs and InP-based materials
- 2", 3", 4" Custom Epi-Wafer Capability
- Excellent Uniformity & Reproducibility
- Production & Development Quantities

Foundry Services

We design the process steps and conditions to meet the desired device characteristics and implement the process in our fab. Process equipment includes:

- PECVD
- Metallization
- Wet & Dry Etch
- Photolithography
- Dielectric & Optical Thin Film Deposition
- Wafer Polishing, Lapping, Dicing & Cleaving

BANDWIDTH SEMICONDUCTOR, LLC

25 Sagamore Park Rd., Hudson, NH 03051

www.bandwidthsemi.com

(603) 595-8900

Epitaxial and Foundry Inquiries: sales@bandwidthsemi.com

EOE M/F/D/V

SAPPHIRE SUBSTRATES

Crystal Systems HEM sapphire is the ideal substrate material for growth of nitrides.

LED SAPPHIRE SUBSTRATES:

- Highest purity sapphire available
- Low dislocation density
- Excellent surface finish
- (0001) on- and off-axis; other orientations
- 2, 3 and 4 inch diameter
- Single and double side polished
- Laser marking
- Large and small volume capacities

Crystal Systems has produced high quality sapphire by the Heat Exchanger Method (HEM) for more than 30 years. See how our material improves your nitride yields and performance.




CRYSTAL SYSTEMS

27 Congress Street, Salem, MA 01970

Tel: 978-745-0088 Fax: 978-744-5059

www.crystalsystems.com

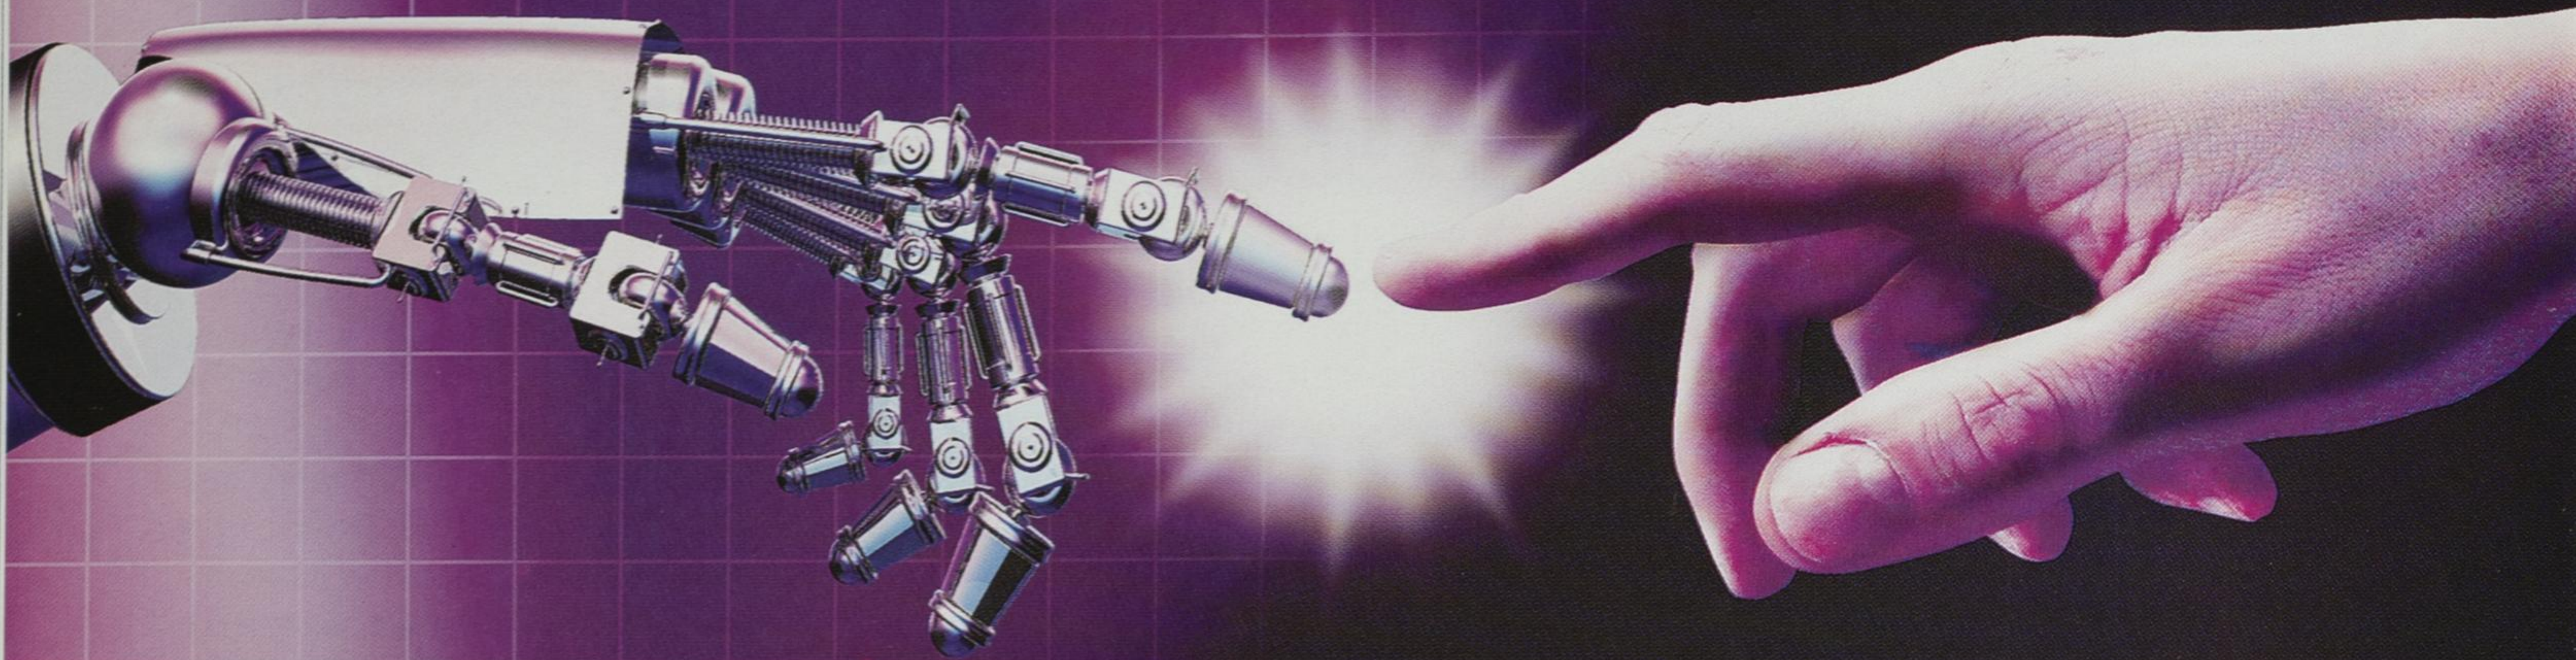

Partners in growth

Materials Outsourcing is the key to leveraging the most from your IP. With more than 14 years experience in wafer outsourcing, IQE can help you deliver world-class products for next generation applications. For all your semiconductor materials needs from III-V substrates to III-V and Si based epiwafers, ***make IQE your partner to take you into the future.***



USA: +1 610 861 6930

Europe: +44 2920 839 400

Japan (E&M): +81 797 34 6655

Korea (K1): +82 2 597 3961

Taiwan (Conary): +886 22 509 1399

info@iqep.com

www.iqep.com

Aixtron acquires TriJet patents from JIP Elec

Aixtron has acquired a patent and license portfolio for its TriJet technology from the French company JIP Elec, in which Aixtron has a 7.4% stake. TriJet provides reproducible delivery and evaporation of liquid precursors during atomic vapor deposition of oxide-based materials, and is a key part of Aixtron's Tricent tool. In this latest transaction, Aixtron has divested its sharehol-

ding back to JIP Elec, acquired the patent and license portfolio related to TriJet, and has granted patent licenses for niche applications back to JIP Elec.

The agreement with JIP Elec is part of Aixtron's strategy to be a key player in the technology for depositing the thin, high-k dielectrics required by the CMOS industry to shrink device dimensions further.

MicroChem forms joint venture

Photoresist manufacturer MicroChem (based in Newton, MA) has formed a joint venture company with Tokyo-based chemical and resist manufacturers Nippon Kayaku and Tomen Corporation. The new company, which is called Kayaku MicroChem Corporation (KMCC), is headquartered in Tokyo and

imports and distributes resists for MEMS and electronic materials manufacturing in Asia. KMCC also provides sales, marketing and technical services for newly developed photoepoxy resists that have resulted from a joint development effort between Nippon Kayaku and MicroChem.

Equipment sales

● **Emcore** has sold two E300 GaNzilla MOCVD tools to **Shanghai LanBao Photoelectric Materials**, a Chinese manufacturer of GaN-based blue and green LED epiwafers.

● **Thomas Swan Scientific Equipment** is installing a 3 × 2 inch close-coupled shower head (CCS) MOCVD system for GaN epitaxy at **Harvard University's** Nanoscience and Nanotechnology Research Center. The system will be used for the growth of a broad range of nitride-based nanoscale photonic and electronic structures including nanowires. The company has also announced the sale of a CCS MOCVD system designed for the growth of GaAs- and GaN-based materials to **Helsinki University of Technology**.

● **EMF** (Cambridge, UK) has announced the sale of a custom-made 2 inch multi-wafer MOCVD system to **Vancouver University** (BC, Canada). The system is configured for GaN research and development.

● **DCA Instruments** has received an order from **Uppsala University** in Sweden for a unique UHV deposition system. The MTD 450D features an MBE module combined with a UHV sputtering module, and will be used for the growth and preparation of devices made of magnetic layers of rare earth metals.

● **United Epitaxy Company** (Hsinchu and Tainan, Taiwan) has ordered an additional AIX 2600G3 24 × 2 inch HT MOCVD reactor to further

increase its production of III-nitride yellow, blue and green LEDs.

● **Veeco Instruments** has received orders from **RF Micro Devices** (RFMD) and **Massachusetts Institute of Technology** (MIT) for MBE systems. RFMD has ordered its second GEN2000 7 × 6 inch MBE system for the production of HBT epiwafers, and MIT has purchased a Dual GEN200 R&D MBE system. This first-of-a-kind system will be used by MIT for research into integrated optoelectronics and future applied microphotronics. The dual MBE system features two growth modules, each capable of 1 × 6 inch, 1 × 8 inch, or multiple 2, 3 or 4 inch wafer production.

Aeronex able to beat the downturn

Gas purifier manufacturer Aeronex experienced a 34% increase in sales and a 6% increase in profits in 2002. The company puts its success in a very challenging climate down to a significant number of design wins during the year. In addition, Aeronex has added 20% to its research and development laboratory space at its headquarters in San Diego, CA. The new lab has state-of-the-art gas delivery systems to all instruments and test stations, and is designed with future expansion in mind.

Evans Northeast opens for business

Evans Analytical, a provider of materials characterization services, has opened a new laboratory in Peabody, MA. Evans Northeast Analytical Laboratory (ENE) is the seventh facility in the Evans Group's global network of laboratories, and the second on the east coast of the US. The lab is equipped with a Phi quadrupole SIMS, a Cameca magnetic sector SIMS and a Technos 300 mm-wafer-capable TXRF system.

Instrument Systems expands into France

Instrument Systems, a German manufacturer of optical instrumentation for light measurement, has established a new subsidiary near Paris, France. The company says that its decision to establish a greater presence in France is in response to the rapid growth in demand for its LED and display analysis equipment in the region.

AWR's European HQ moves to new offices

Applied Wave Research (AWR), a provider of high-frequency electronic design automation tools, has relocated its European headquarters in Hitchin, UK. The new larger offices, also in Hitchin, will continue to provide sales and technical support throughout Europe. The company is hoping to double its sales in Europe over the next few years, necessitating a move to larger offices with customer demonstration and training facilities.

SHUTTLELINE

SHUTTLELINE

Your tool for R&D and pilot production



SHUTTLELINE – ICP version

The **SHUTTLELINE™** merges the technology of four systems and an extensive experience with an installed base of over 650 tools, making it an ideal platform for R&D and pilot production:

- Multi-process platform for etching and deposition including ICP, RIE and PECVD
- Superior process solutions for HBTs, HEMTs, SAW, Photonics and MEMS
- Loadlock equipped for consistent process results
- User friendly software standardized for all versions
- Unmatched process support from the Unaxis technology centers in the US and Switzerland


Secure your success in the Semiconductor business with the new SHUTTLELINE and the support of our experienced Unaxis professionals.

www.semiconductors.unaxis.com

USA	Tel. +1 727 577 4999	KOREA	Tel. +82 31 708 8666
EUROPE	Tel. +49 89 7550 5251	TAIWAN	Tel. +886 3597 7771
CHINA	Tel. +86 21 5057 4646	JAPAN	Tel. +81 3 3225 9020
SINGAPORE	Tel. +65 6890 6288	Other	Tel. +423 388 4986



Merging the essence of the SHUTTLELOCK, 790, NE 860 and NE D200

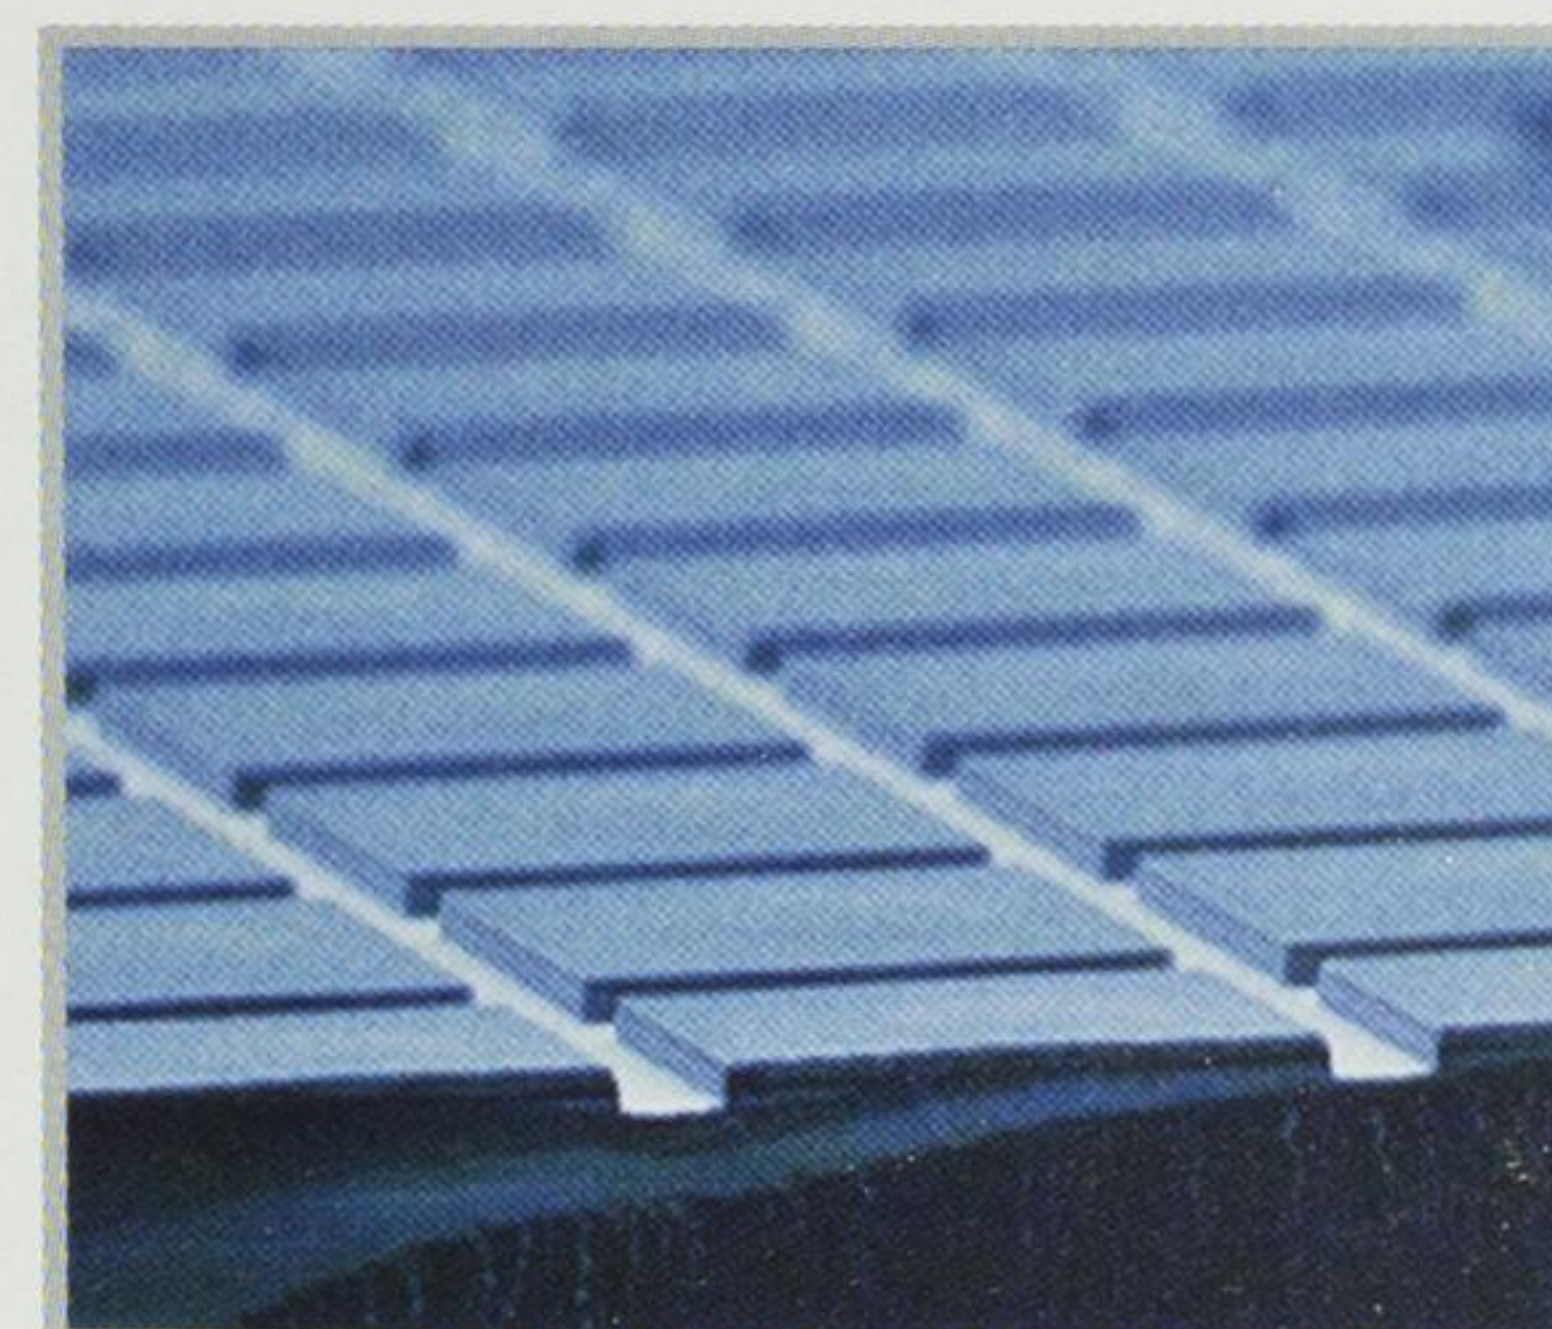

Etching of quantum well LEDs

Visit us at Semicon China
Hall 1, Booth 1337


unaxis

making IT possible

New mirrors for InGaN/GaN lasers

InGaN/GaN lasers are gathering much attention as blue-light sources for the next generation of optical data-storage devices. However, the operating current of InGaN/GaN lasers with cleaved or etched facets is high due to the low facet reflectivity of about 18%, resulting from the low refractive indices (about 2.5) of GaN-based materials. Reducing the operating current is an important issue from the viewpoint of power saving and reliability. To reduce the operating current, multiple dielectric films are usually coated on the facets, but this adds processing steps to the laser fabrication. A promising alternative structure for the laser mirrors is a deeply etched DBR. However, it is difficult to achieve high reflectivity from the etched DBR mirrors with simple quarter-wavelength periods, because tapering of the sidewalls occurs during etching.

High-reflectivity InGaN/GaN DBR mirrors for blue lasers with reflectivities as high as 62% have been obtained, using

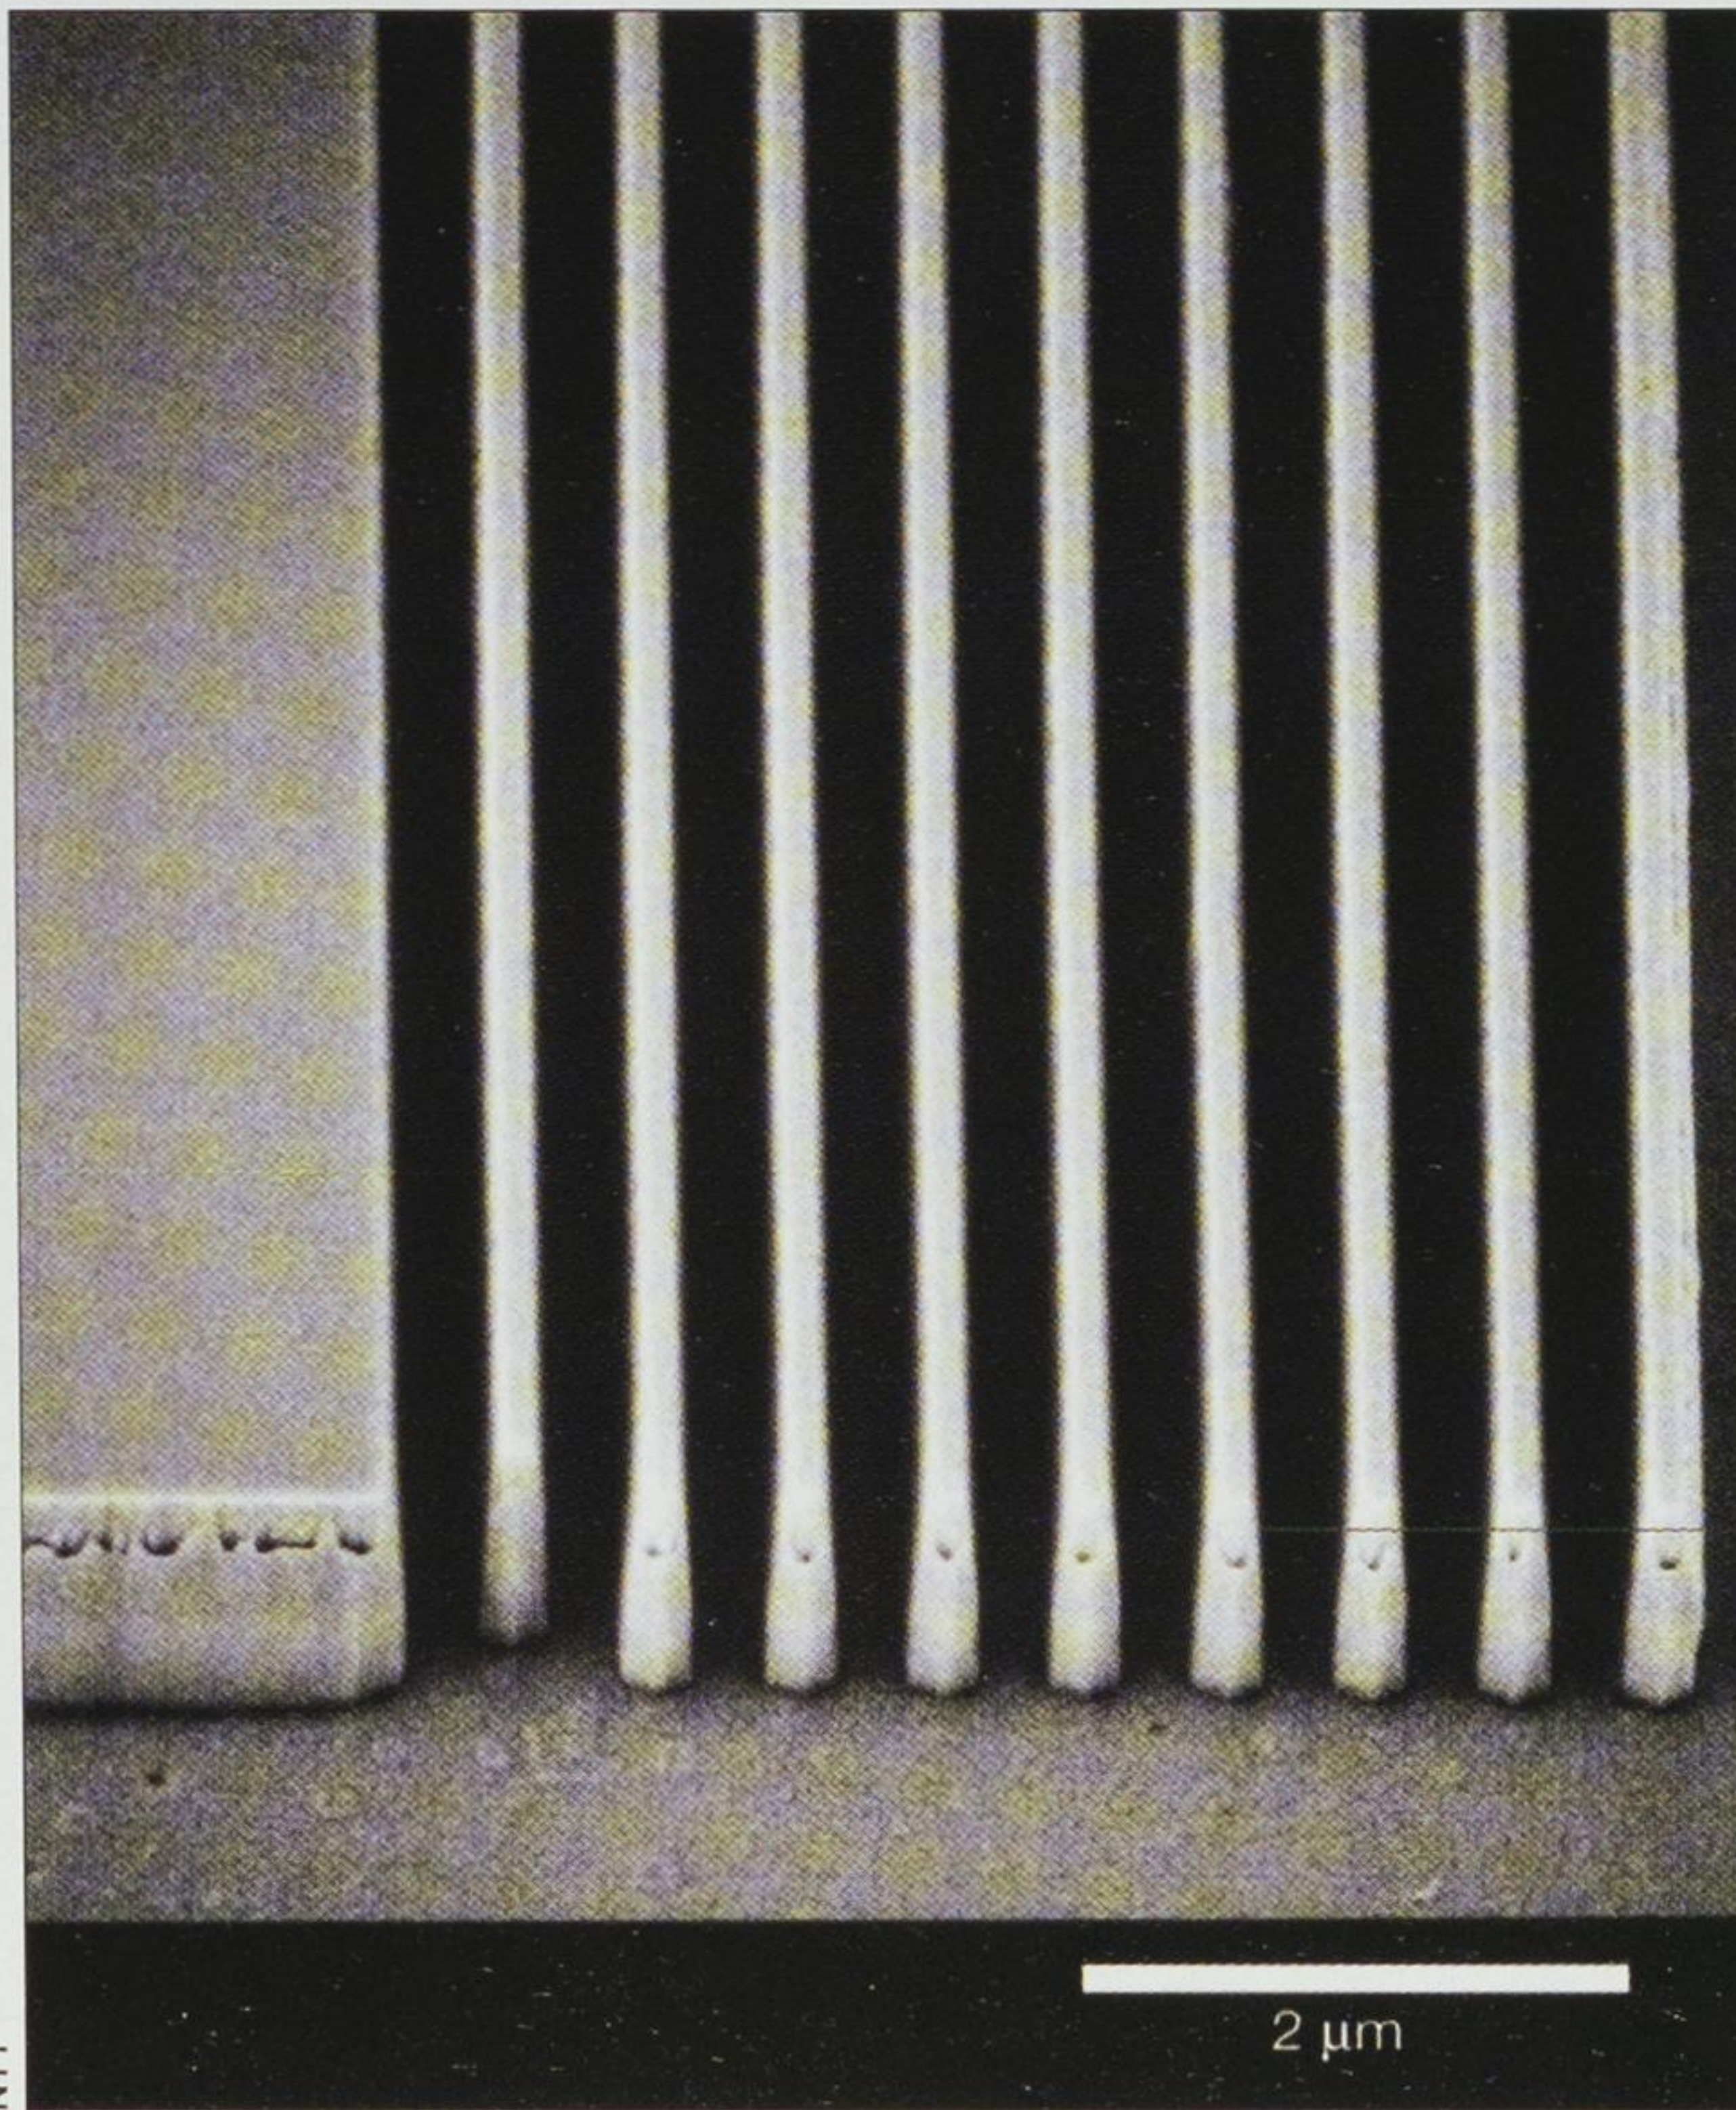

SEM image of a deeply etched distributed Bragg reflector.

mirror designs that maintain high reflectivity despite the presence of tilt, by Tadashi Saitoh and colleagues at NTT Basic Research Laboratories in Japan (*Appl. Phys. Lett.* 2003 **81**(25) 4703). The laser wafer consisted of an InGaN triple QW sandwiched by AlGaIn optical guiding layers and GaN cladding layers. The laser structure contained deeply etched DBR mirrors with $5\lambda/4n$ semiconductor and $3\lambda/4n$ air spacings. The air gaps were formed by reactive ion etching as deep as $1.22\ \mu\text{m}$ down to the SiC substrate, and the etched sidewall angle was 86° .

The DBR mirrors were designed according to simulation results obtained by a finite-difference time-domain method. The optimum DBR structures are different from those obtainable by simple quarter-wavelength design. The design criteria for DBR mirrors with tilted sidewalls and the realization of high-reflectivity DBR mirrors should accelerate the introduction of InGaN/GaN lasers to the market.

New technique yields high-quality GaN wafers

Researchers at Hitachi Cable in Japan have developed a novel technique called void-assisted separation (VAS) for preparing large-scale free-standing GaN wafers (*Jpn J. Appl. Phys.* 2003 **Pt.2 (1A/B) L1**). HVPE growth of a thick GaN layer was performed on an MOVPE-grown GaN-on-sapphire template with a thin TiN film on the top. The TiN film had a net-like structure with hole sizes of 20–30 nm. This nanonet was self-assembled by annealing a Ti film formed on an MOVPE-grown GaN template by vacuum evaporation. Numerous voids were generated around the TiN film during the HVPE growth. After cooling, the thick GaN layer was easily separated from the template with the assistance of the voids. As a result, a free-standing GaN

wafer was obtained with excellent reproducibility.

The free-standing wafer had a diameter of 45 mm, and a mirror-like surface. The FWHM of the (0002) and (10 $\bar{1}0$) peaks in the X-ray rocking curve profiles were 60 and 92 arcsec, respectively. The dislocation density was $4 \times 10^6\ \text{cm}^{-2}$ and was uniform over the wafer. The researchers believe that the low dislocation density is the result of using the TiN film, which acts in the same way as the masks used in epitaxial layer overgrowth techniques. These results indicate that the VAS method is very promising for producing large-diameter GaN wafers with sufficient crystal quality to be used as a substrate for reliable laser diodes.

Wafer scale integration of III-V and CMOS devices


Researchers from NCSR Demokritos in Athens, Greece, the University of Crete and the Max Planck Institute in Halle, Germany, have developed a monolithic-like process flow for the integration of III-V optoelectronic devices with commercial CMOS ICs (*Appl. Phys. Lett.* 2002 **81**(27) 5099). The reported technique was based on a low-temperature wafer bonding procedure for the solid attachment of an entire epitaxial GaAs wafer onto a fully processed CMOS wafer.

The top surface of the CMOS wafer was covered with SiO₂ deposited at temperatures below 450 °C. The SiO₂ surface underwent a chemical mechanical polish before the two wafers were bonded face-to-face using a spin-on-glass low-temperature (<250 °C) wafer-bonding procedure. After bonding, the GaAs substrate was removed by lapping and selective chemical etching. The III-V epilayers (bonded


to the CMOS wafer) were then processed to define the optoelectronic devices. Beyond this stage the process temperatures above 400 °C were possible, because the thin III-V epilayers could sustain larger deformations without risk of debonding. Electrical interconnections between the III-V devices and CMOS ICs were made with metalized via holes. The Si ICs were characterized before and after wafer-bonding and III-V processing, and no degradation was observed.

A complete optoelectronic link was demonstrated using the heterogeneous bonding technique, showing its potential for manufacturable wafer-scale integration of III-V devices with CMOS ICs. The link consisted of a CMOS laser driver connected to a 850 nm edge-emitting laser, and a *pin* receiver connected to a CMOS transimpedance receiver.

Break Through the Barriers

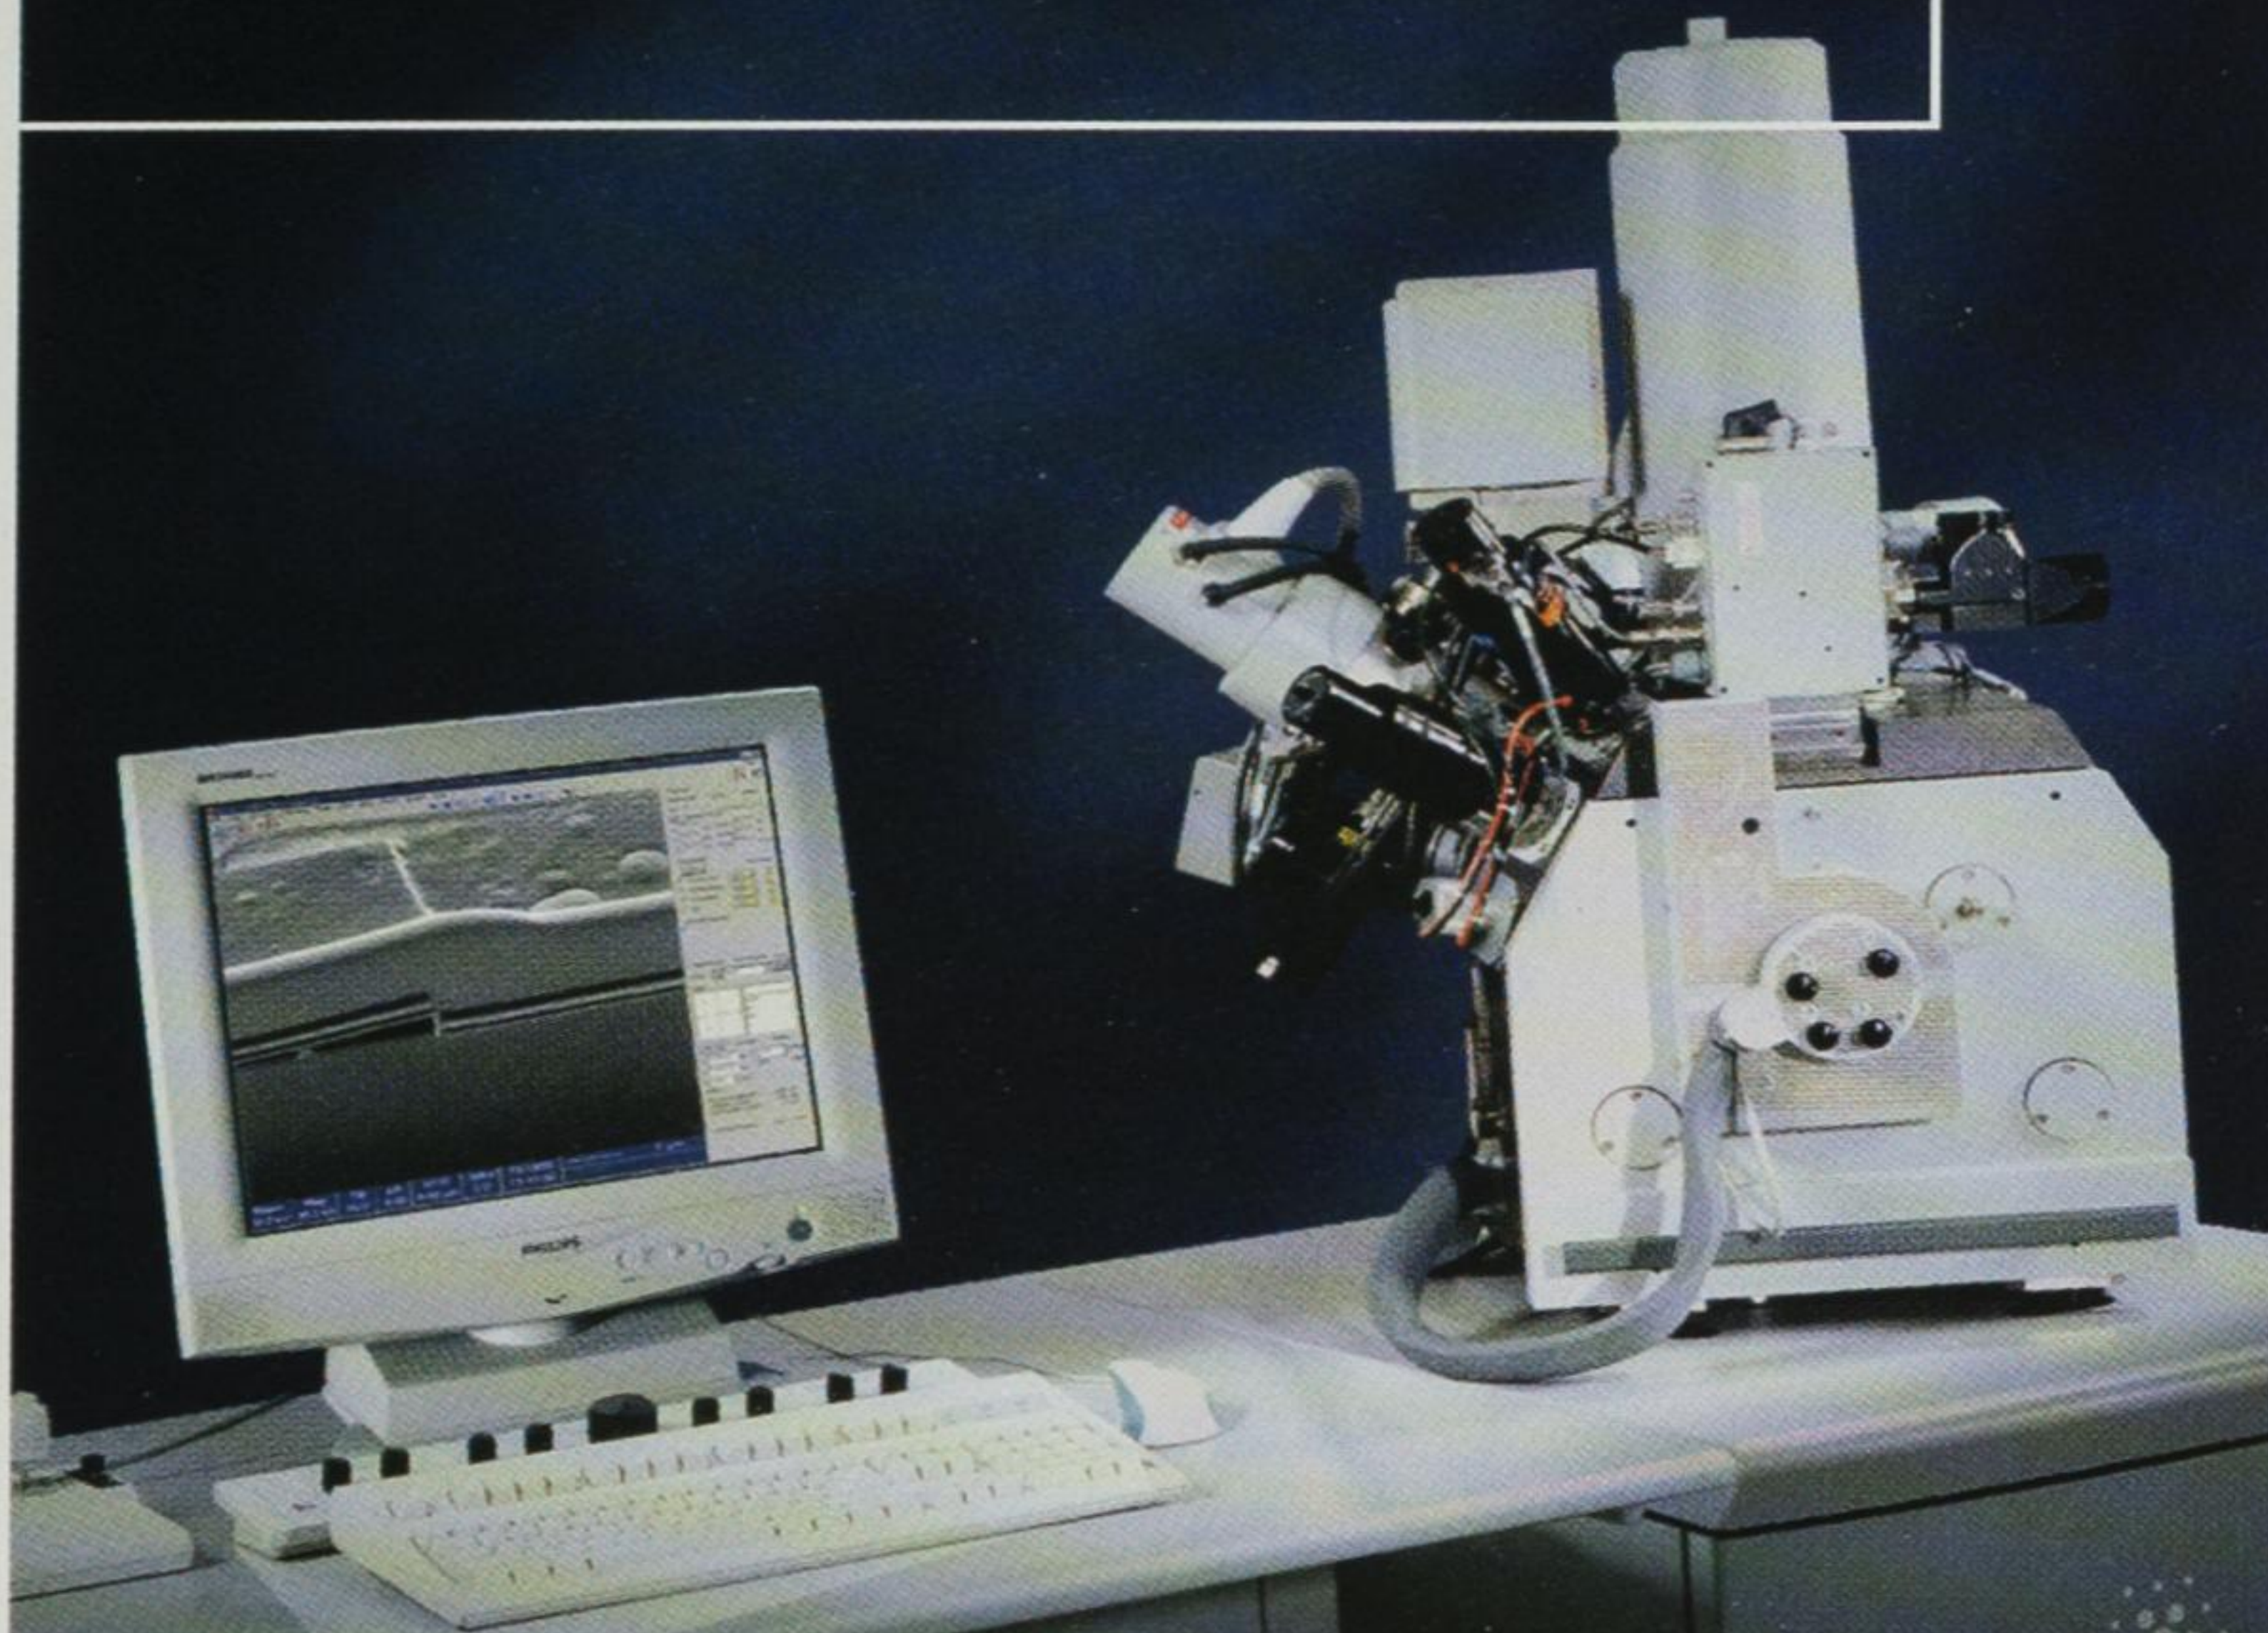

Take Control with DualBeam™ for 3D Structural Diagnostics

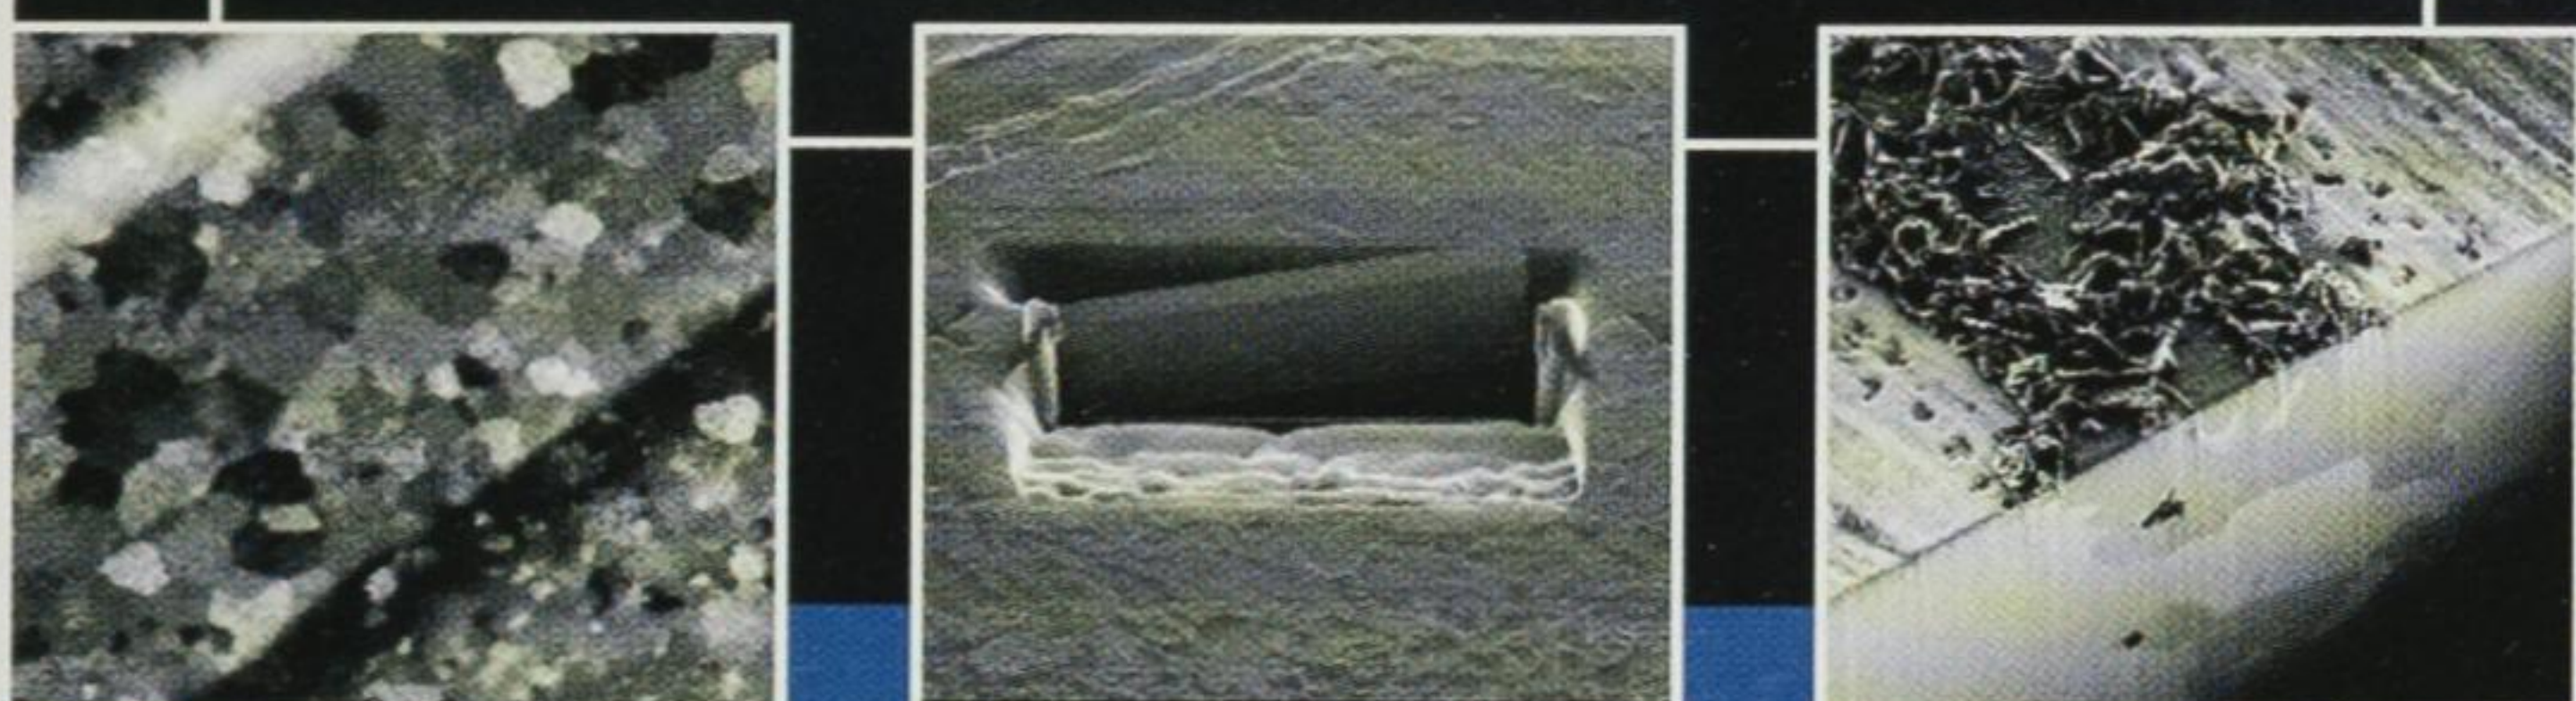

Two-dimensional analysis of today's complex samples tells you only half the story. It's what lies beneath the surface, further into the sample that will give you complete, in-depth data for advanced analytical studies.

Introducing the Strata™ DB 235M for analytical labs from FEI—the world's pioneer and leader in DualBeam (FIB/SEM) technologies.

- Reveal subsurface structures
- Produce site-specific cross sections with clean material interfaces
- Perform localized material removal and deposition
- Create TEM samples

The new Strata DB 235M expands your materials research into the third dimension. It's another measure of FEI's commitment to comprehensive Structural Process Management™ solutions for materials, and to advancing the world of Structural Diagnostics™ and research.

Talk to us and discover how DualBeam solutions from FEI can help you break through the 2D barrier to see the entire story.

For further information contact:

FEI Company
PO Box 80066
5600 KA Eindhoven
The Netherlands
Tel.: +31 40 2766768
Fax: +31 40 2766786

www.feicompany.com
sales@feico.com

Deep UV emission from structures grown on AlN

Although good progress is being made towards producing large-area (50 mm diameter and above) AlN substrates, these are still some way from being commercially available. However, in preparation for this eventuality, researchers are already investigating the growth of GaN-based structures on the small bulk AlN samples that can currently be made. A collaborative effort between Sensor Electronic Technology, the University of South Carolina, Rensselaer Polytechnic and Crystal IS has resulted in the growth of high-quality MQW structures containing AlGaIn wells with Al contents of up to 50% between AlN barriers (*Appl. Phys. Lett.* 2002 **81**(24) 4658). The ability to grow high-quality AlN barriers on the AlN substrates means that thin, highly stressed AlGaIn wells of high structural quality can be grown.

The team used low-pressure MOCVD to grow an AlN buffer layer on the bulk AlN substrate, followed by a structure containing three 5 nm thick $\text{Al}_{0.5}\text{Ga}_{0.5}\text{N}$ QWs between 20 nm thick AlN barriers. For comparison, the same structure was grown on SiC. The photoluminescence (PL) characteristics of the samples were measured, including the evolution with temperature and the PL peak intensity as a function of pump intensity. PL spectra of the samples on SiC and AlN were measured at room temperature with an excitation wavelength of 193 nm. The PL intensity peaked at 259 nm for both, but the intensity from the sample on AlN was 28 times that from the sample on SiC. This is consistent with the data on the crystal quality of the two samples obtained by X-ray diffraction. These results, coupled with the steady advances in growing larger-diameter AlN substrates, demonstrate the strength of this approach for the future production of deep UV LEDs and lasers.

X-band AlGaIn/GaN HEMTs set power record

A joint effort by researchers at General Electric Global Research Center in Niskayuna, NY, and Lockheed Martin in Syracuse, NY, has resulted in 9.2 W/mm (13.8 W total) output power at 10 GHz from 1.5 mm AlGaIn/GaN HEMTs (*Elec. Lett.* 2003 **39**(2) 245). The devices were characterized under pulsed conditions with a 50 µsec pulse width and 5% duty cycle. The associated PAE at peak RF power was 33% and drain biases were up to 55 V, the highest ever for similar-size devices.

The device structure was grown by MOCVD on 2 inch 4H-SiC semi-insulating substrates. The T-gate length was 0.25 µm as determined by cross-sectional SEM. The 1.5 mm devices were formed with six gates at 250 µm per gate with 49 µm gate pitch. The dies were mounted into conventional Mo/Cu-based packages, and the large signal characteristics were measured at room temperature without the benefit of package cooling.

A power density of 10.7 W/mm has been reported for 150 µm AlGaIn/GaN HEMTs at 10 GHz. However, realizing comparable power densities from larger gate periphery devices has been difficult due to pronounced self-heating effects and an increase of trapping at defects. The team has largely circumvented these issues by device design. Three-dimensional thermal analysis has indicated that self-heating effects may be further reduced, enabling realization of power densities of more than 10 W/mm for moderate-size devices.

FIB process takes materials analysis into new realms

The novel integration of ion and electron beams into one tool with precision sample handling abilities is providing a one-stop shop for many characterization needs, writes **Lloyd Peto**.

The examination and analysis of multi-layered films and complex structures is often challenging. Site-specific analysis, as required for single-site semiconductor device failures, is especially demanding. Problems are exacerbated when working with materials that are sensitive to the preparation techniques being used and/or environmental factors during preparation. Laser devices, for example, are almost impossible to remove from can-type packages without damage, so the detailed analysis of laser facets or failure sites on returns is normally only attempted when essential. Recent advances in equipment and analysis techniques are now removing many of the existing limitations that are imposed by complex structures and sensitive materials.

Focused ion beam (FIB) instruments are widely used in the semiconductor and data-storage industries for many applications, including 3D materials analysis, photolithographic mask repair, circuit edit and general nanoengineering. The ability to focus a beam of ions onto an area of a sample with precision and accuracy means that specific sites can be machined by the beam to modify the structure by sputtering away material. Buried structures such as HBTs can also be cross-sectioned and imaged using the ion beam. Imaging the area of interest is accomplished by scanning the ion beam across the sample and detecting the electrons emitted as a result of the interaction between the ion beam and the surface. Scanning ion microscopy has evolved to a point where it rivals high-resolution SEM as a microscopy technique in its own right.

FIB sample preparation

Preparing thin samples by FIB machining for subsequent TEM analysis is a widely accepted technique in the silicon-based IC industry (see figure 1). The benefits of using FIB technology in this way are very clear; the process is very fast and labor saving when compared

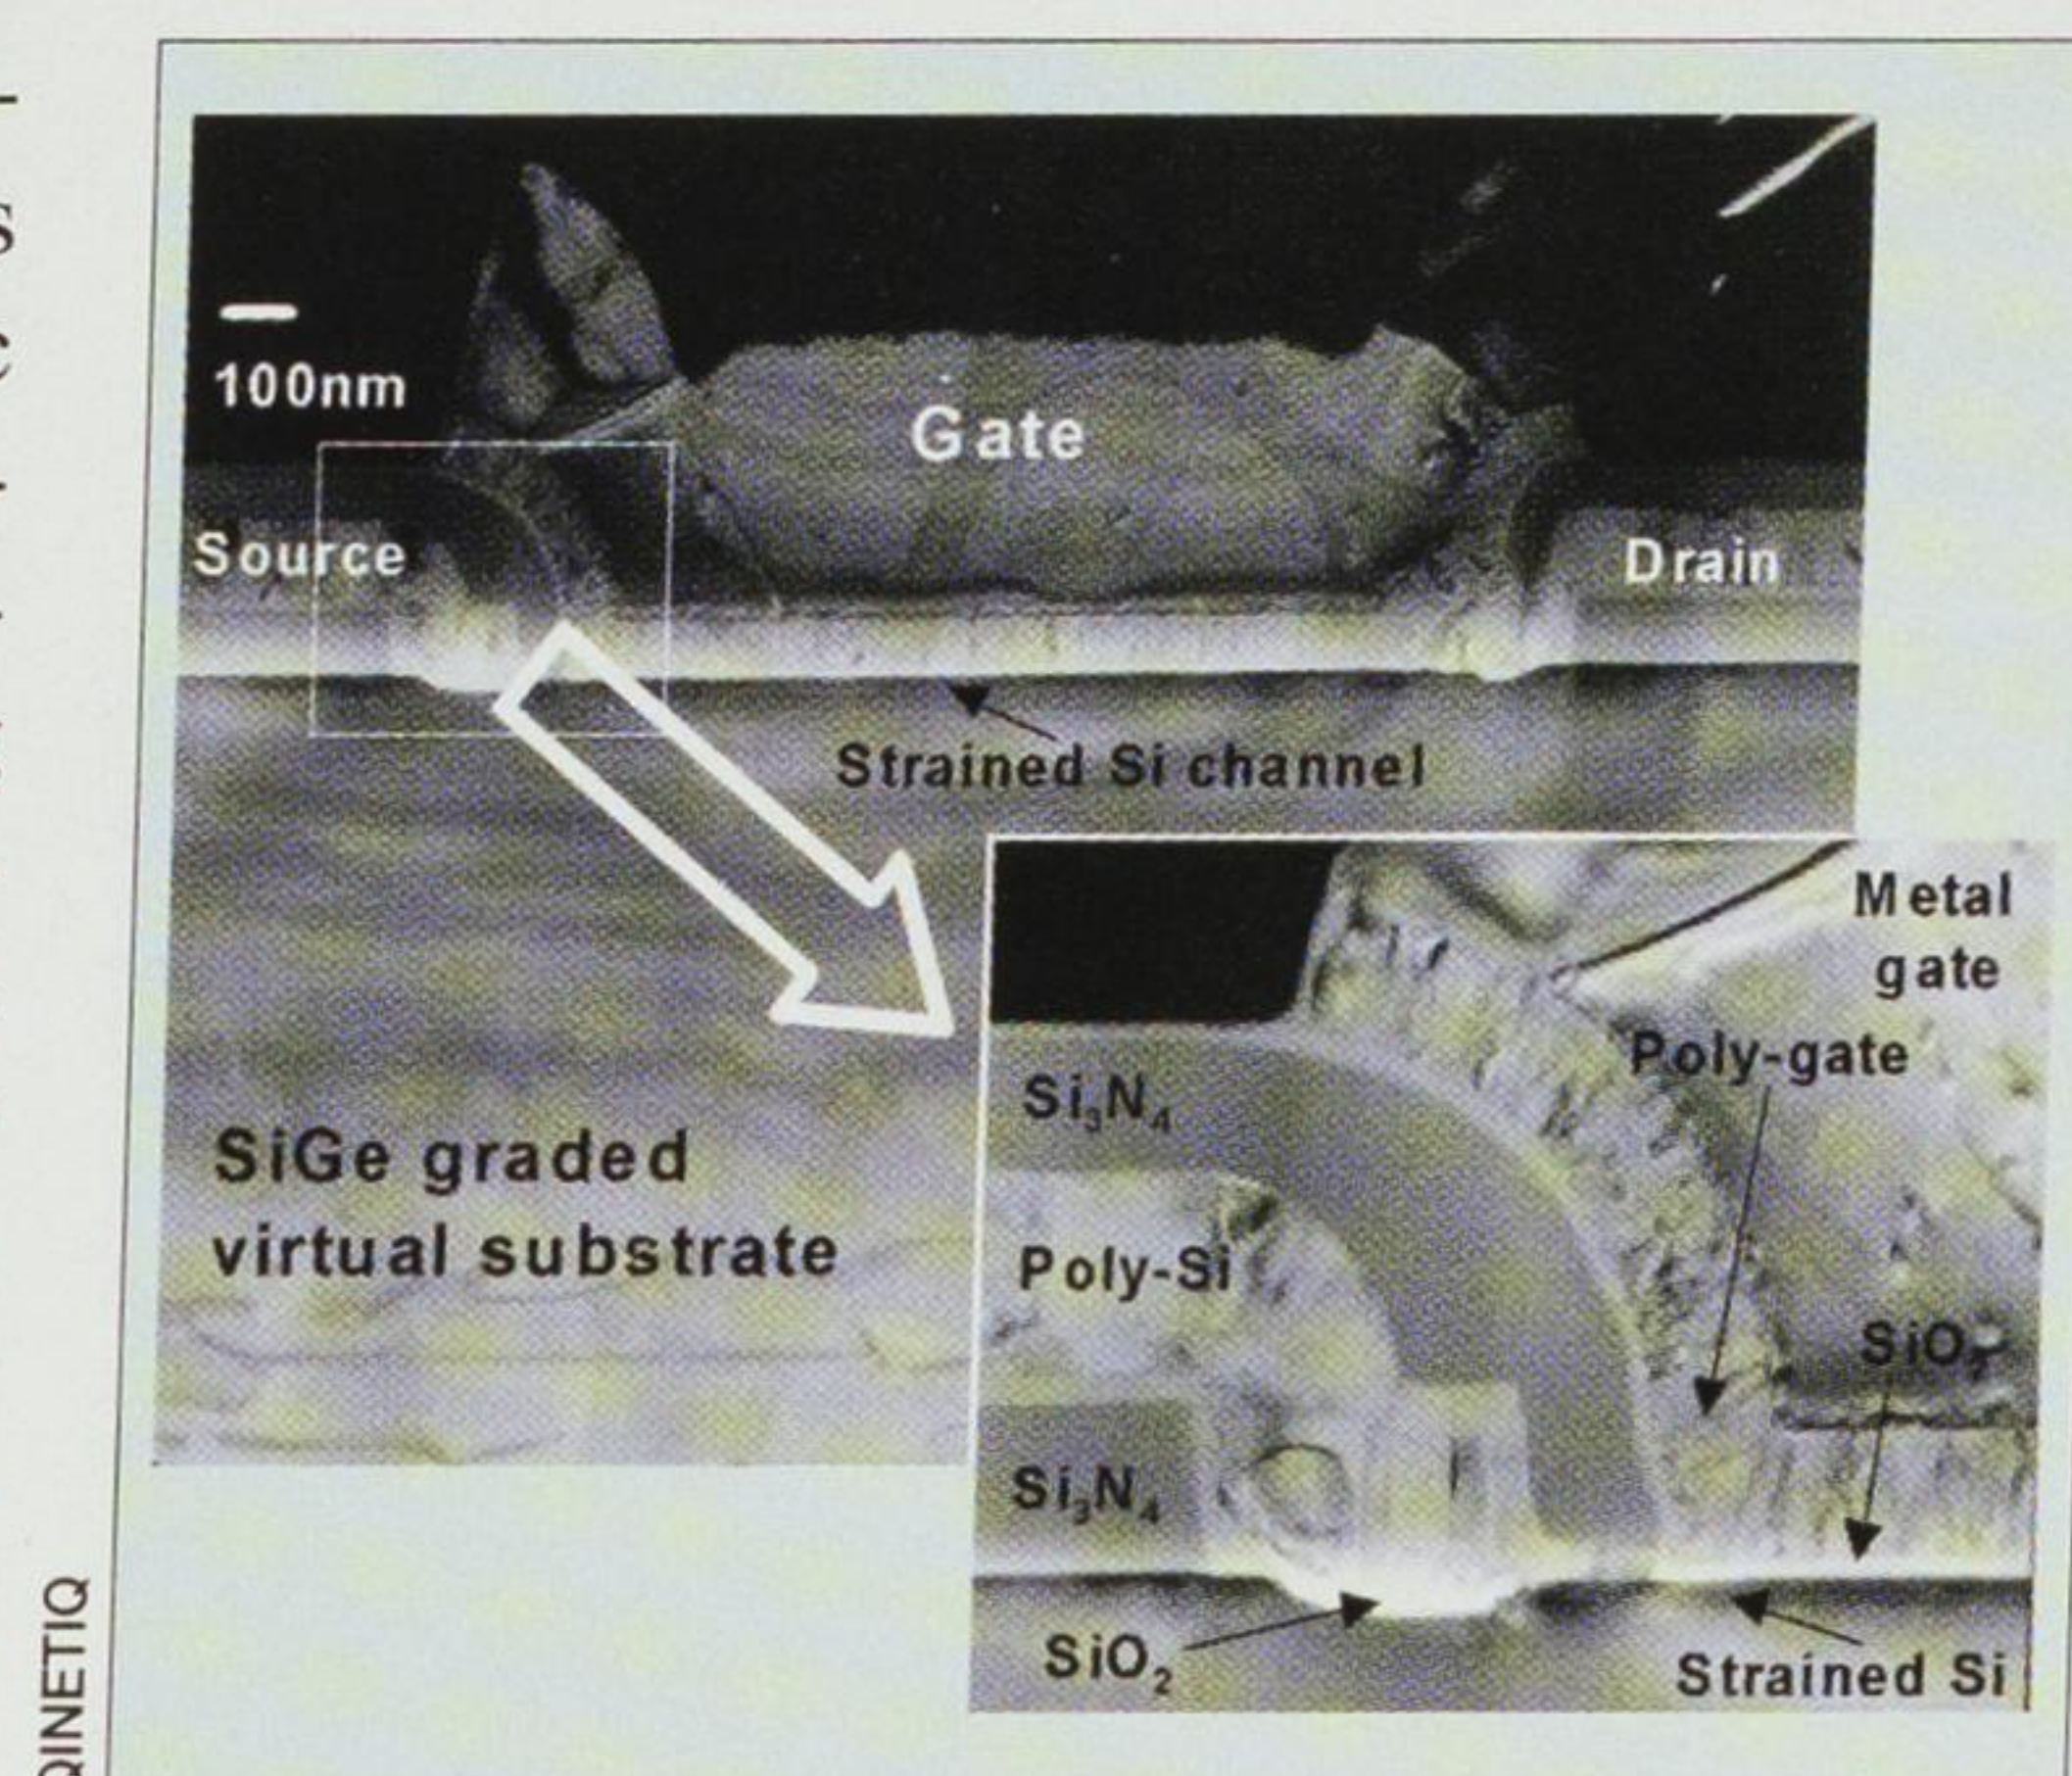


Fig. 1. TEM image of a foil machined by FIB from a strained silicon MOSFET device. The dark layer at the top is tungsten deposited as part of the FIB sample preparation.

Recent developments have resulted in a unique integrated dual-beam system that combines a field emission electron beam with an ion beam.

with sample preparation by mechanical grinding and polishing. It is very site specific (placement accuracies down to $\pm 500 \text{ \AA}$), independent of different material hardnesses within a single foil and is the only fully instrumental technique that does not require any mechanical preparation of the bulk sample. These physical benefits are now routinely combined with multi-site automatic operation of the FIB instrument.

Recent developments at FEI Company, a manufacturer of FIB instruments and a provider of FIB analysis services, have resulted in a unique dual-beam system that combines a field emission (FE) electron beam with an

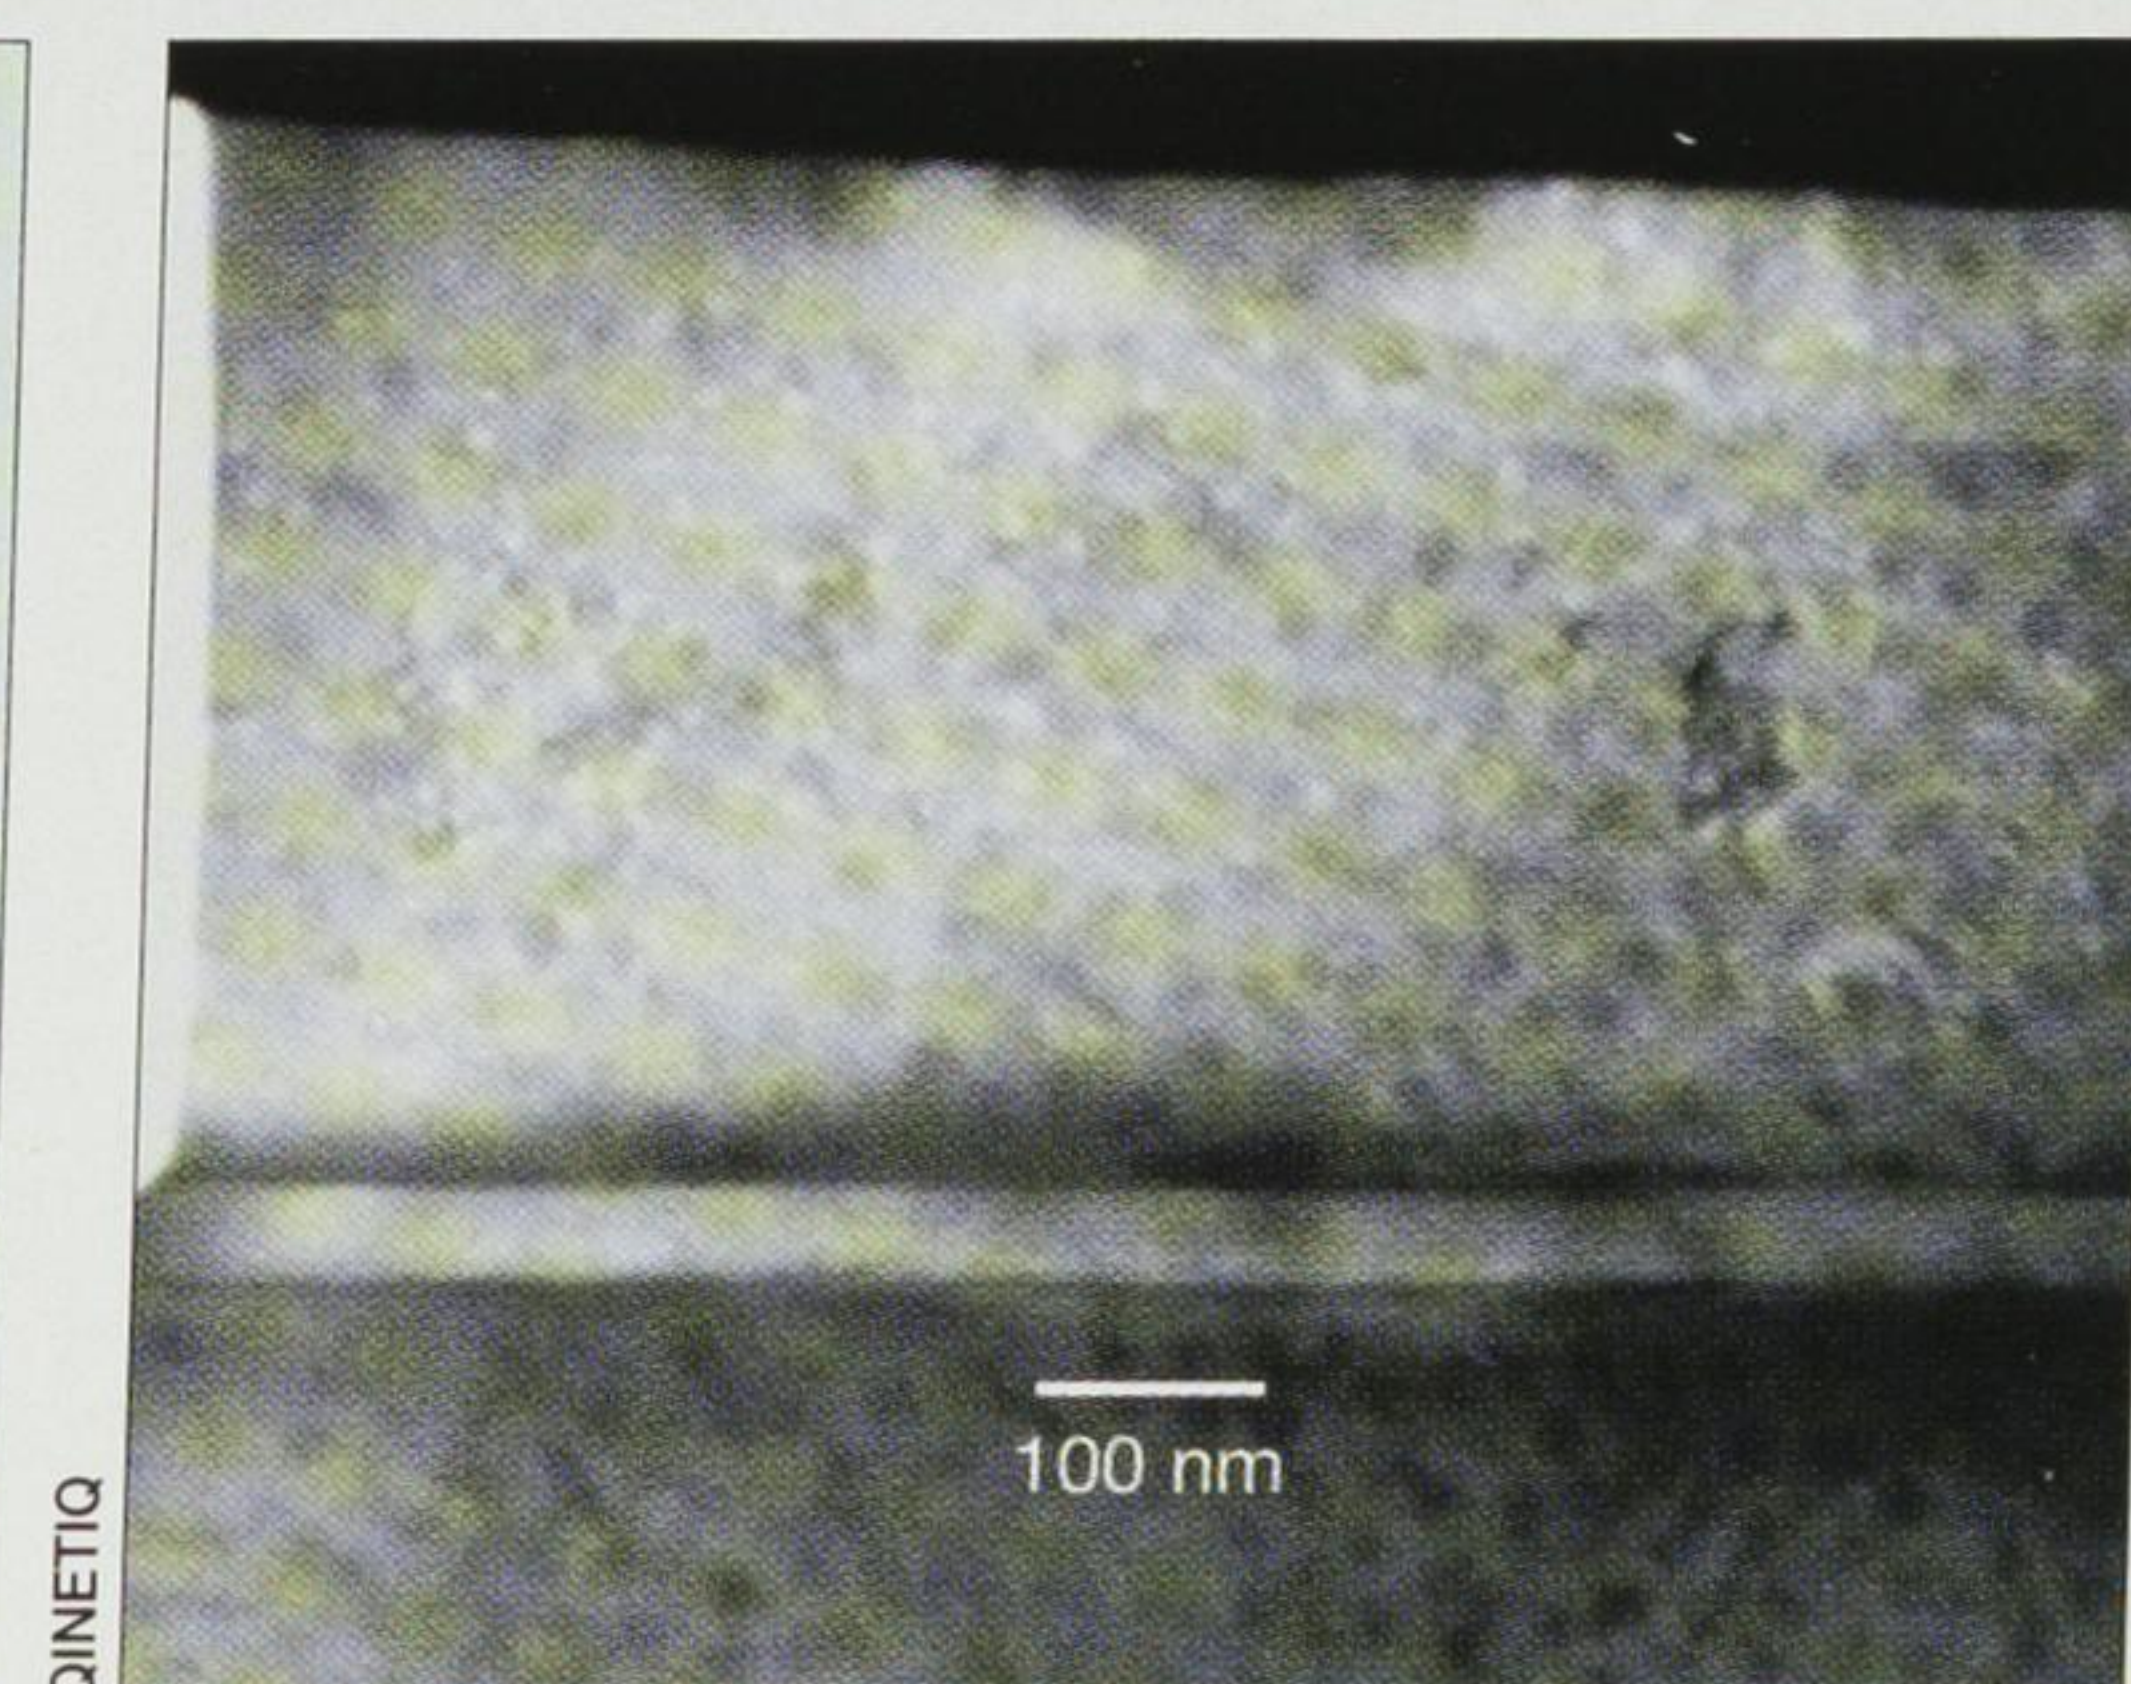


Fig. 2. High-magnification TEM image from part of a FIB foil taken using a single-beam instrument from an InGaP HBT. The speckled appearance is due to materials redeposited during the final ion-beam polish of the foil.

ion beam. This gives the ability to prepare a thin section of material and perform electron-beam analysis of that section within a single tool called a DualBeam instrument. The developments described within this article are specific to FEI's Strata DB235 DualBeam tool, and the TEM images were taken by the materials characterization group at QinetiQ in the UK.

The DualBeam advantage

The advantage of the electron and ion beam integration system developed at FEI's laboratories is that all of the benefits offered by FIB and high-resolution FESEM instruments can be used without compromising either technique. The beams can also be used simultaneously in a single-point operation. This mix-and-match capability allows the user the freedom to select the excitation method, imaging technique used and the analysis preferred depending on what is available from the specimen. This affords a level of instantaneous investigation that was not previously possible. However, the effectiveness and precision of a dual-beam instrument is highly

CHARACTERIZATION

dependent on the way the instrument is designed and operated. The design of an instrument with co-located ion and electron beams, each with its own requirement for electrostatic beam steering and focusing optics, is a non-trivial exercise. High-resolution imaging places stringent requirements on vibration isolation, and the ability to move thinned samples inside the instrument requires precision in mechanical placement and alignment, combined with high levels of repeatability.

FIB systems are used for an increasingly wide variety of materials including ceramics, polymers, superconductors, piezo-electrics and many different types of compound semiconductors. Some aspects of the FIB-SEM process offer unique advantages for compound semiconductors. The most commonly used foil size ($20 \times 10 \times 0.1 \mu\text{m}$) makes this process ideal for looking at structures fabricated on the surface of any type of semiconductor substrate and for analyzing thin films or surface treatments. Compound semiconductors are generally more sensitive than silicon to crystalline damage at the surface when prepared using FIB techniques. During the final ion-beam polishing stages of making a TEM foil with a single-beam FIB instrument, it has become common practice to avoid imaging the face of the foil with the ion beam to minimize any unnecessary crystalline disturbance. The effect of this practice means that the foil surface cannot be quality checked by imaging after the final polish.

Although high-quality foils are possible with both single- and dual-beam instruments, only the dual-beam systems can give direct feedback through the use of their electron-beam imaging capability during this final sensitive part of the foil production process. This extra degree of control permits thinner, higher quality foils to be made routinely, with a higher degree of confidence in the final results. Optimization of the final polishing methodologies in both FIB and dual-beam instruments means that high-quality foils with a thickness of 50–100 nm can be produced routinely, with no observable crystalline modification in the final specimen. The facility to take electron images in immersion (ultra-high resolution) mode while milling is possible because the electron and ion columns have been designed so that the beams are coincident at the sample stage's eucentric tilt axis, which is only 5 mm from the electron-beam lens.

Figure 2 shows a TEM image of part of a TEM foil sectioned from a GaAs/InGaP HBT structure in a single-beam instrument. The

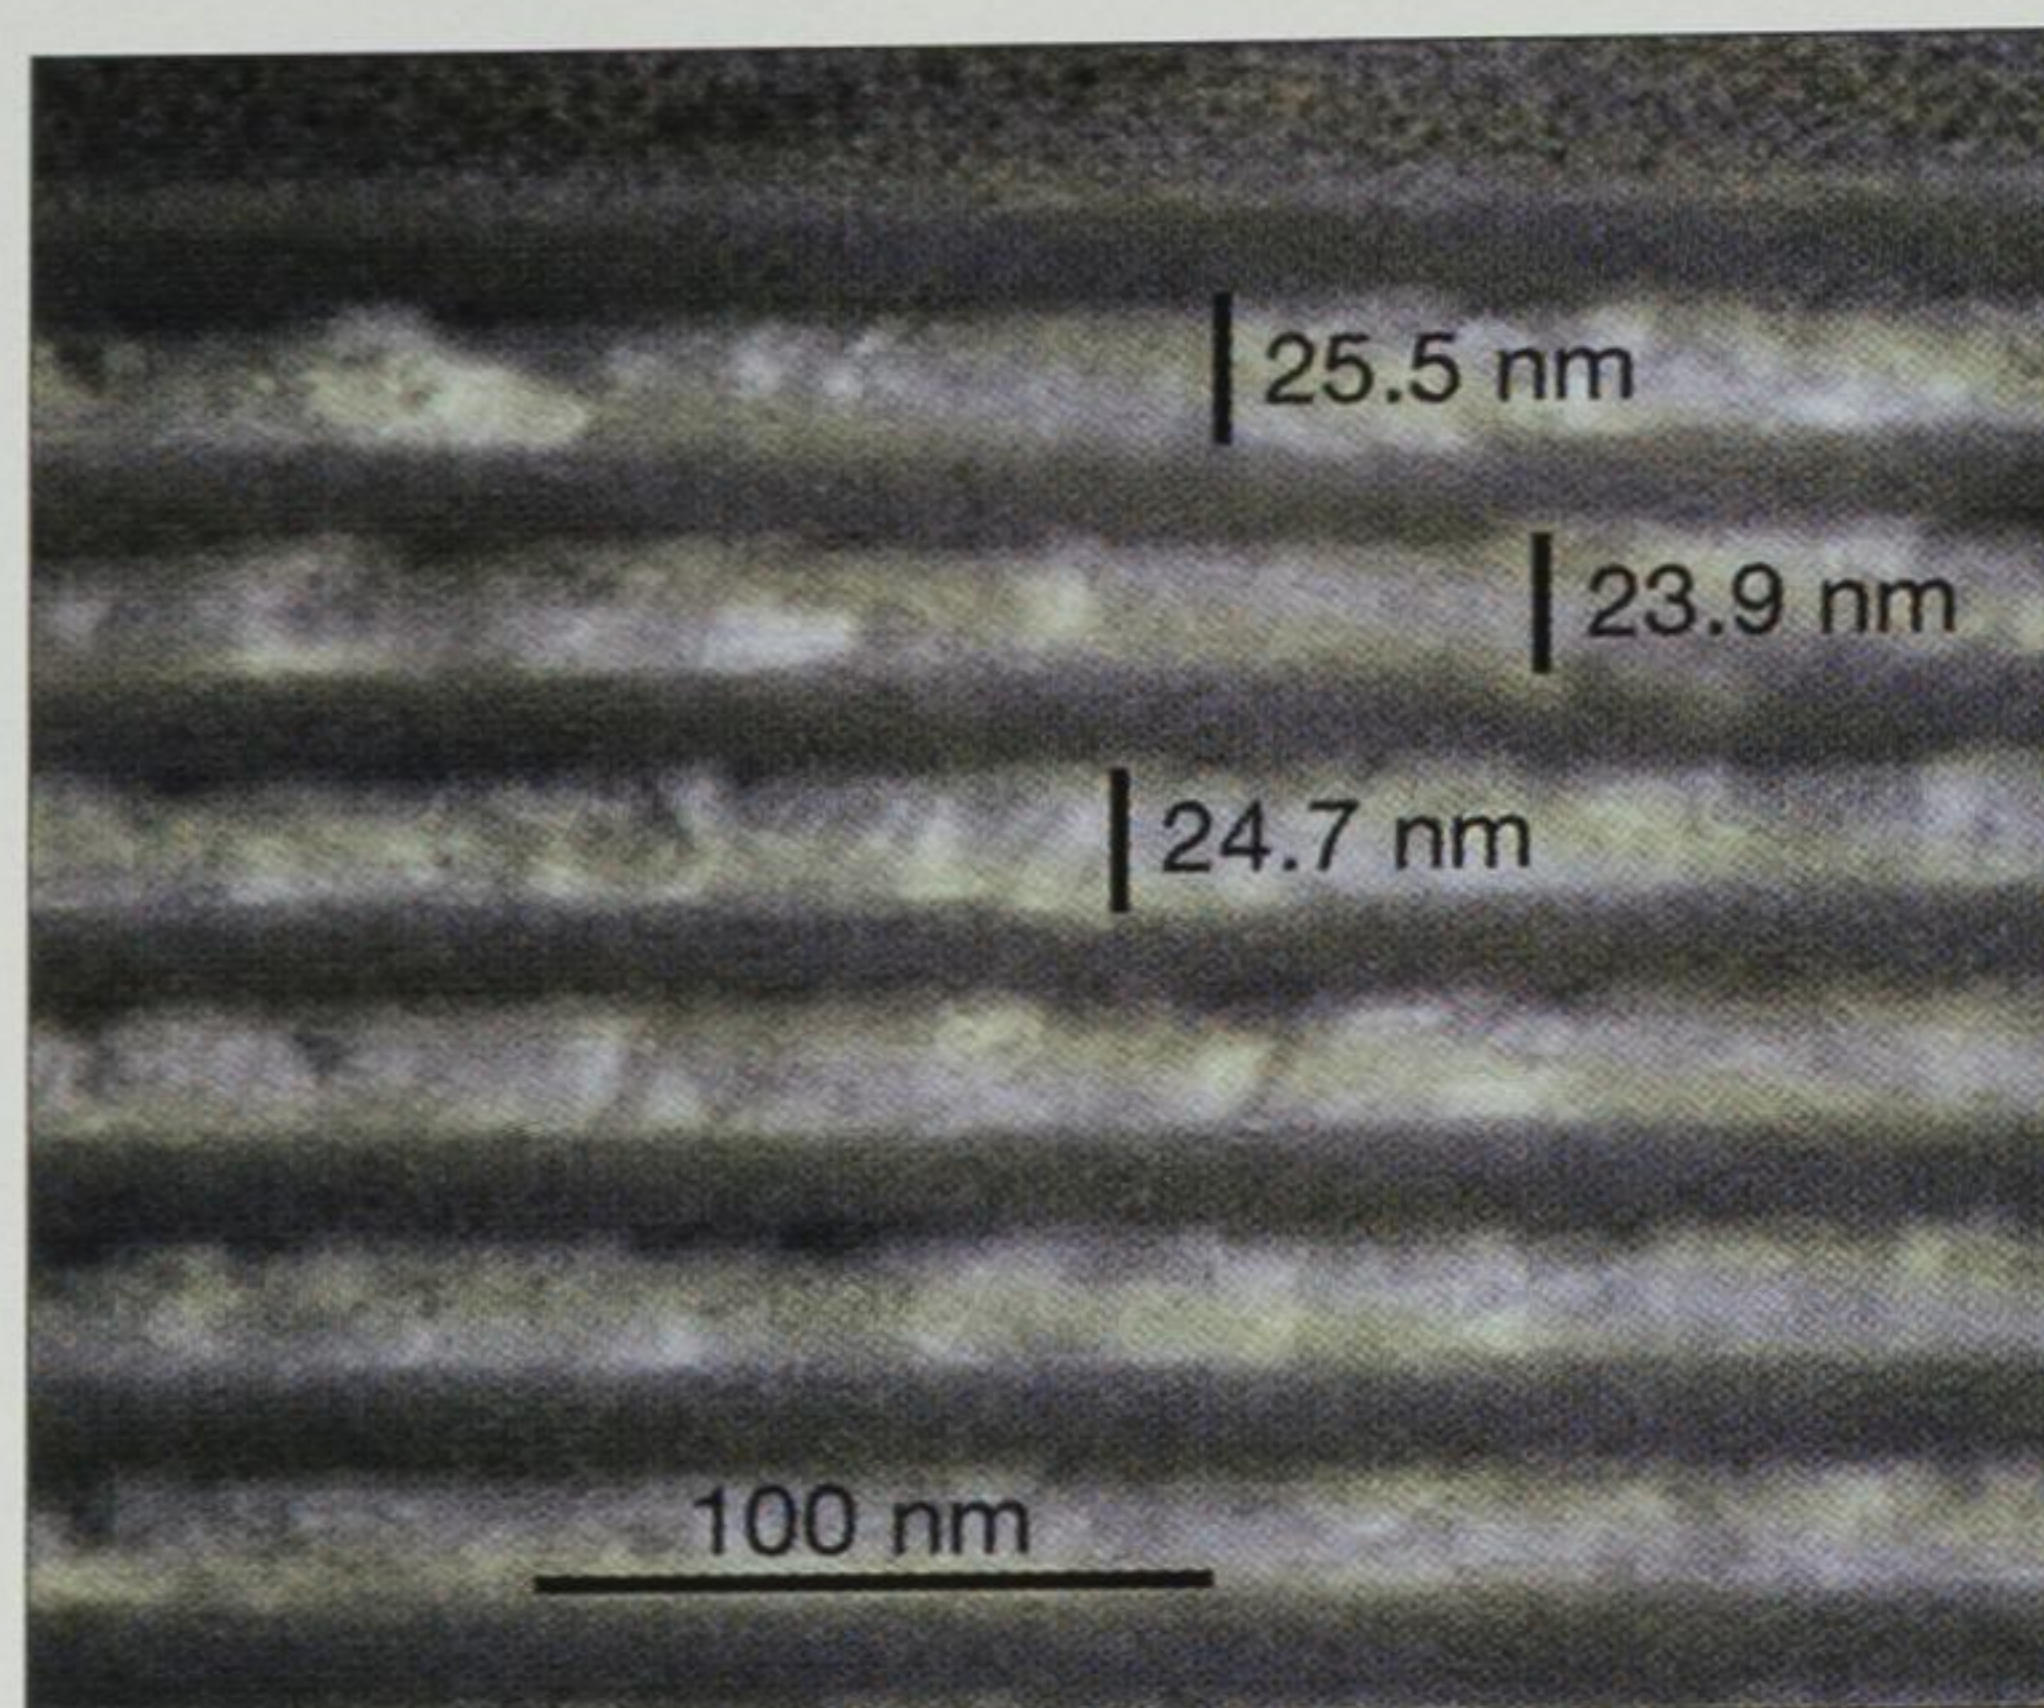


Fig. 3. A DualBeam STEM image of a GaAs/AlGaAs QW laser structure. The foil was prepared using a dual-beam system and the final surface is clear of redeposited material.

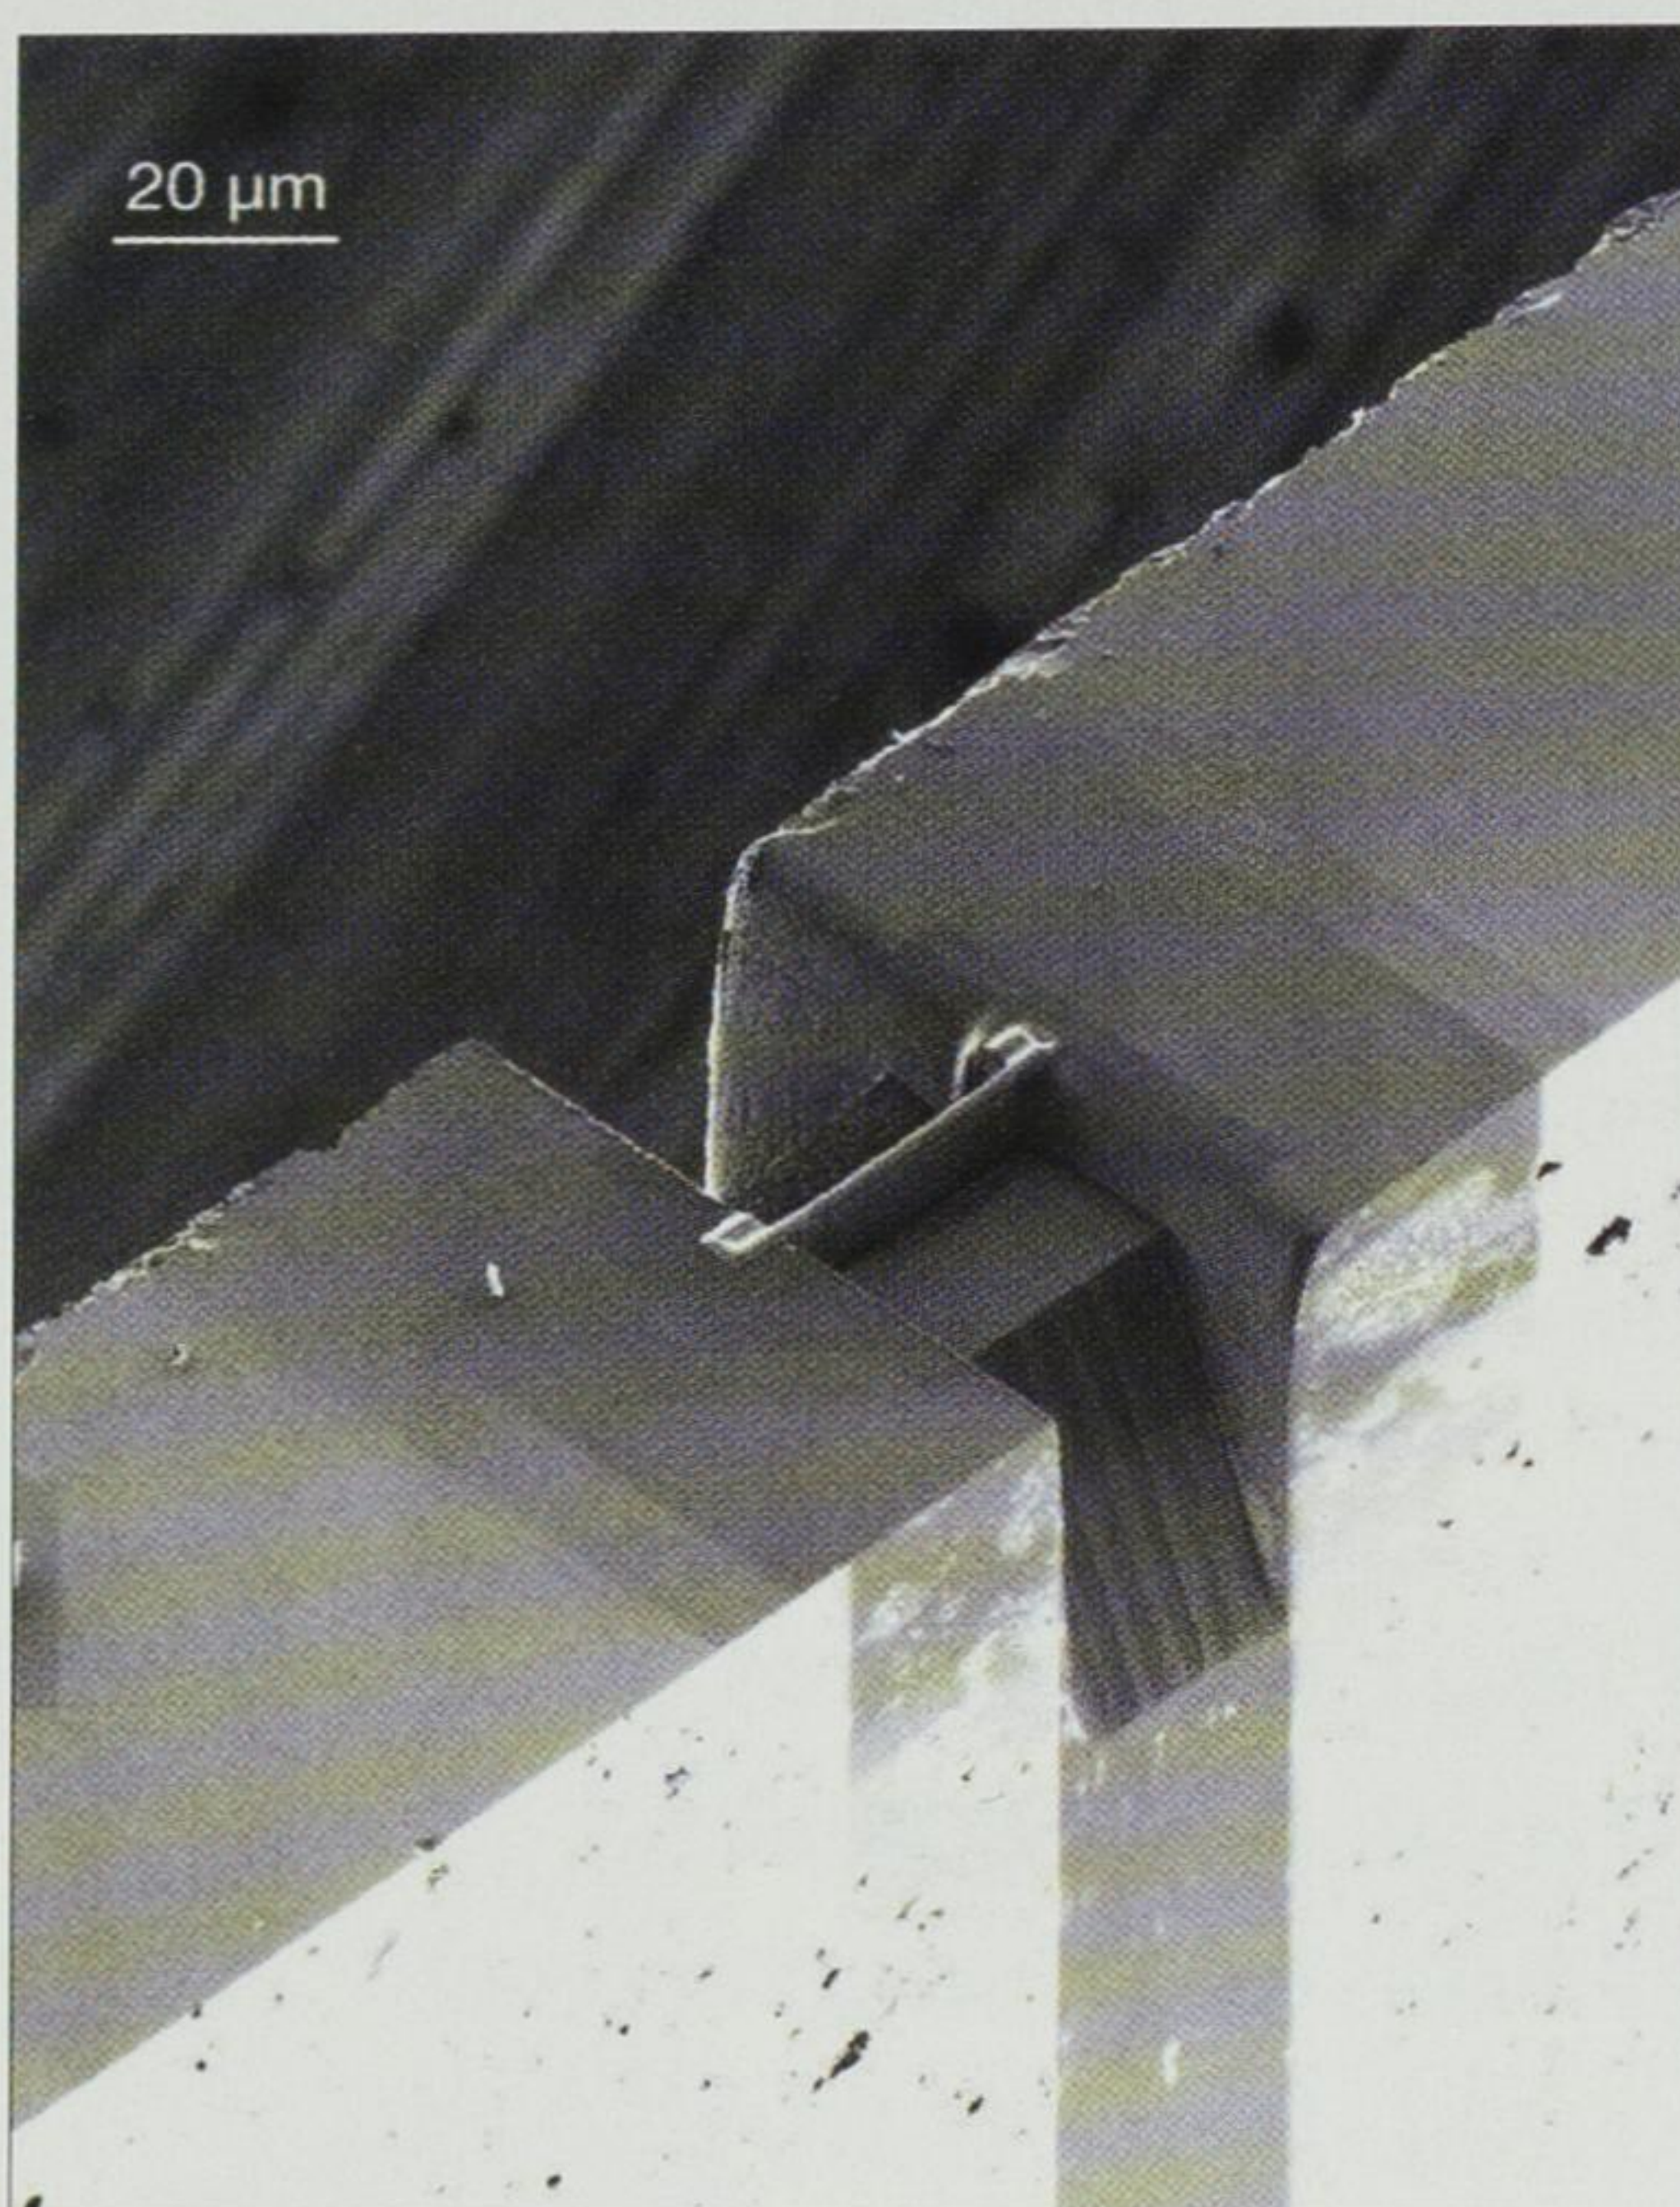


Fig. 4. The sample in this image was mechanically pre-thinned before being placed into a FIB system where the thin foil in the center was machined.

speckled appearance is the result of milled material that has been redistributed during the final polishing step. This might have been avoided or removed if the system operator had been aware of it. Figure 3 is a GaAs/AlGaAs QW laser structure prepared in a dual-beam instrument, which permits the final foil quality to be guaranteed and even examined (here by STEM) before transfer for TEM analysis.

Advances in detectors

Electron detectors are an area where technological advances are now yielding significant improvements in analysis capabilities. STEM imaging using conventional FESEM

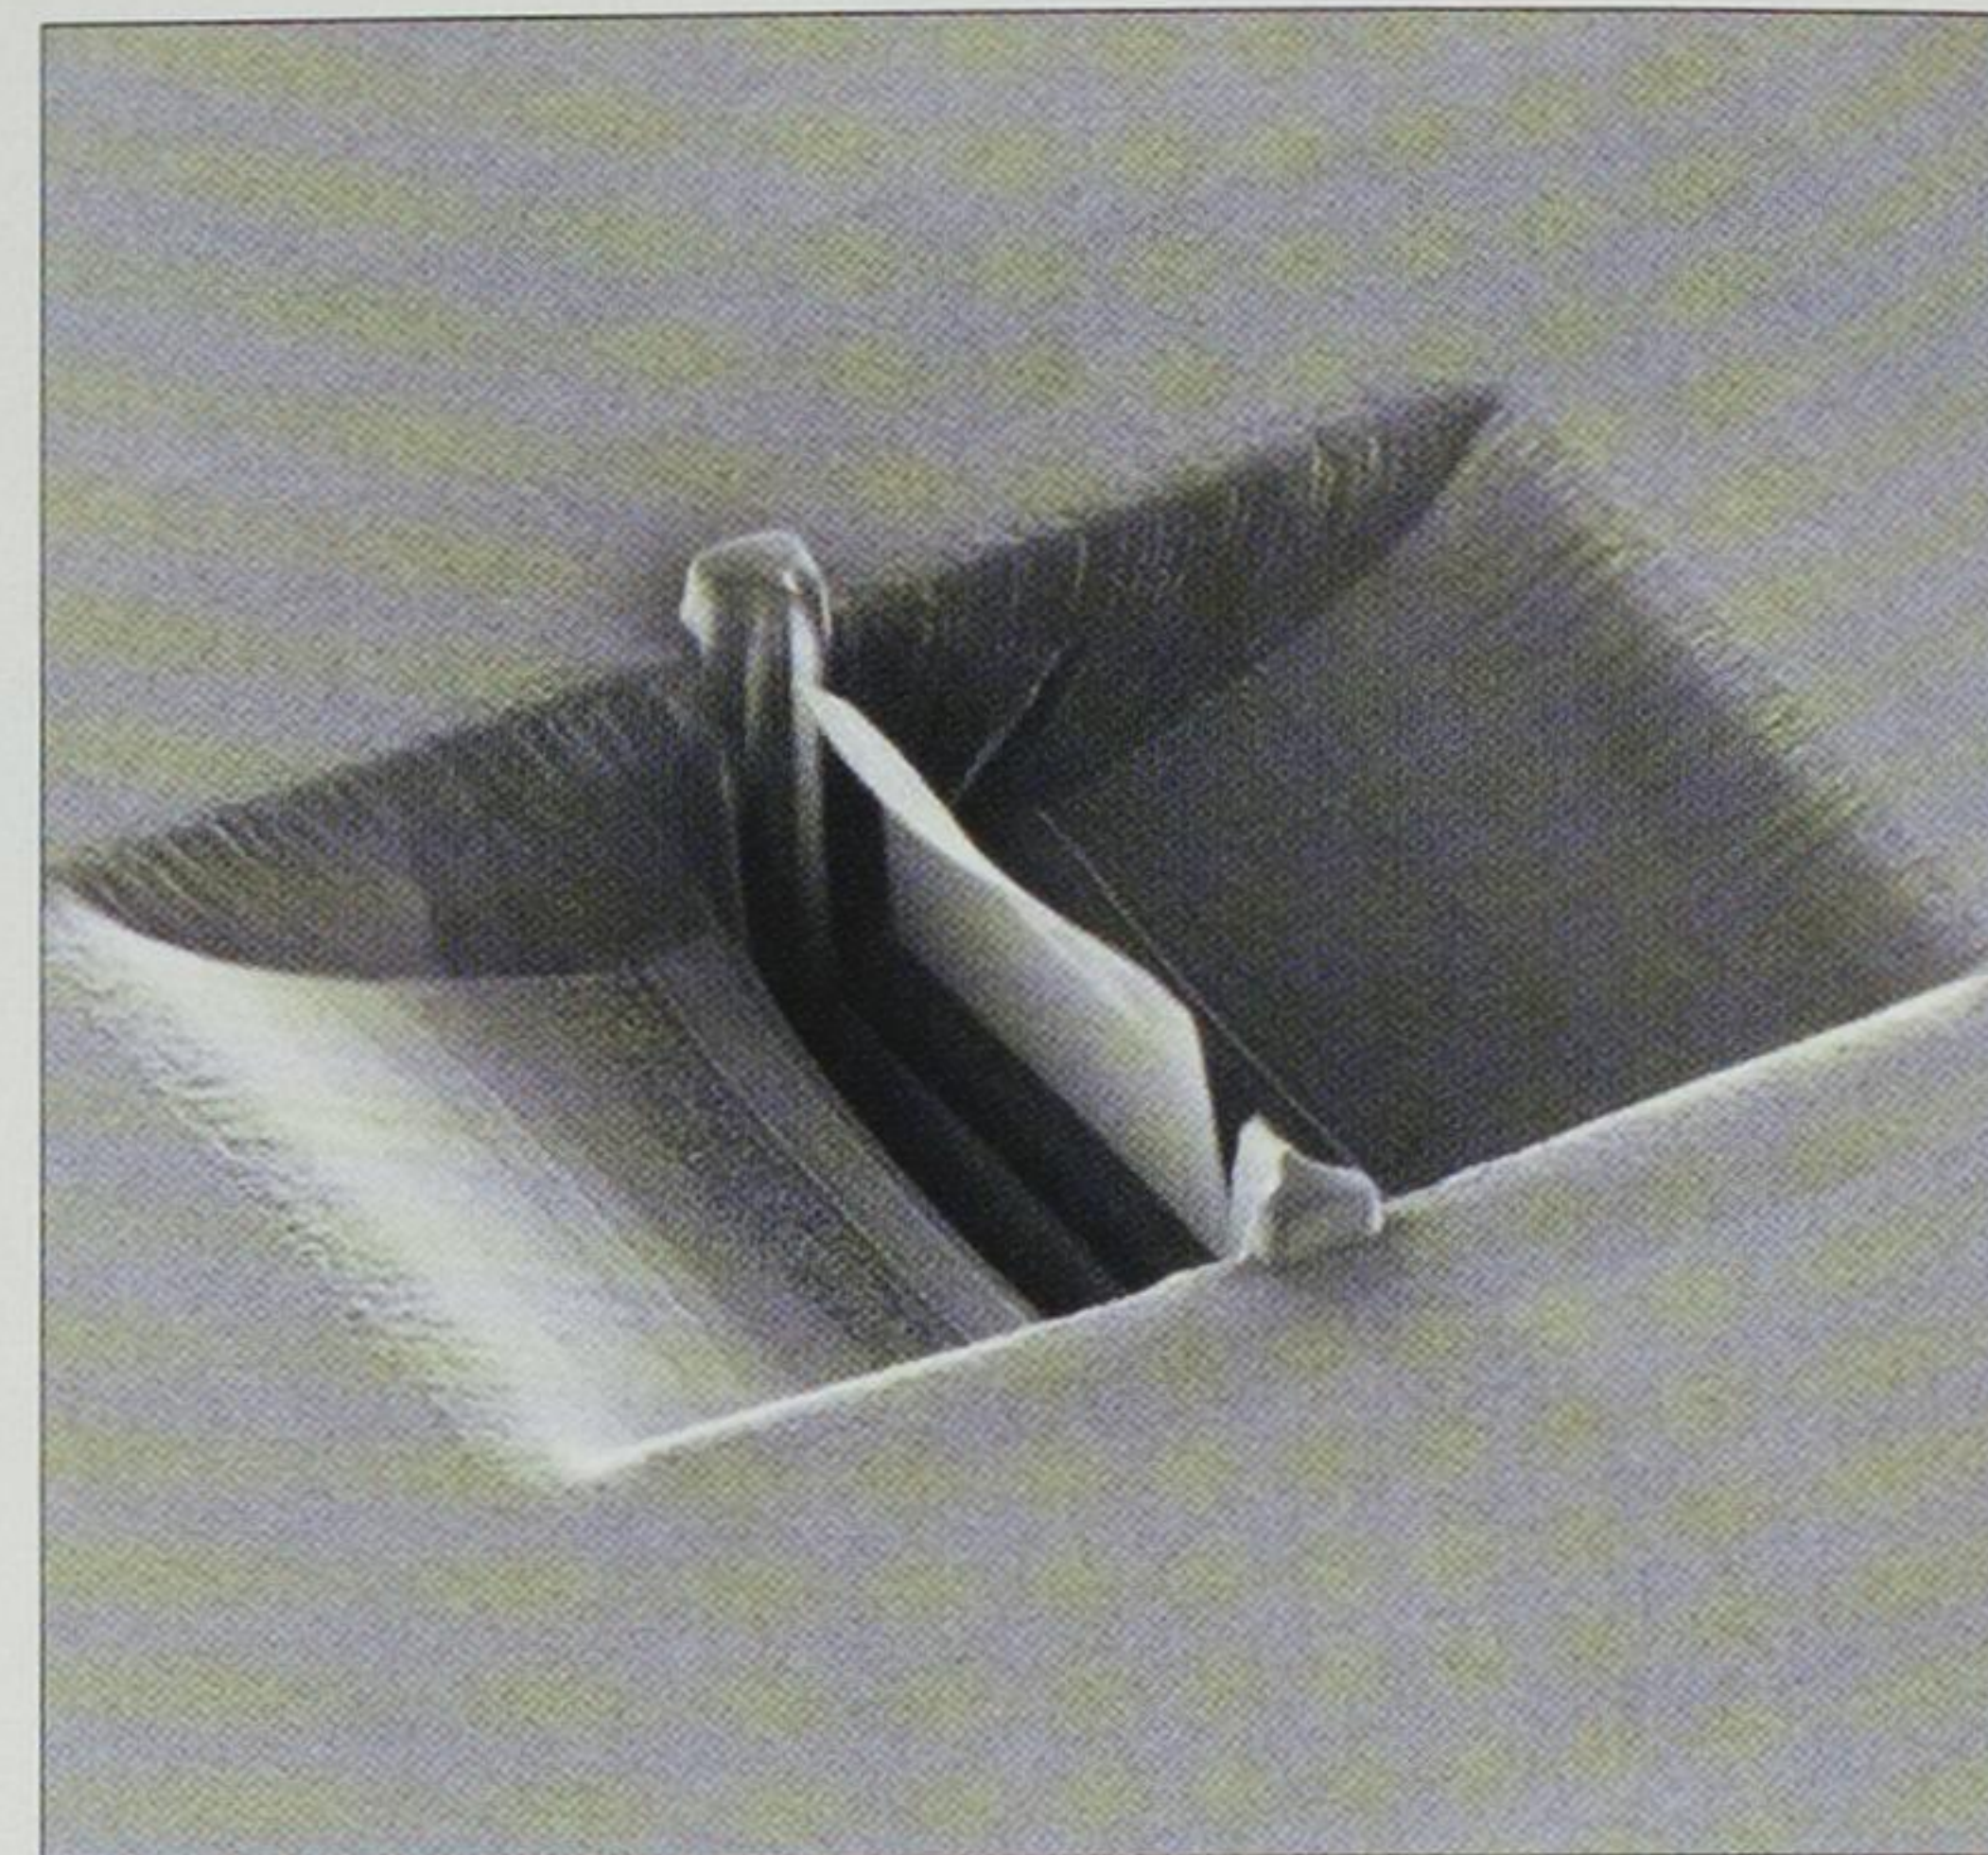


Fig. 5. Image showing a FIB-prepared TEM foil before *ex situ* extraction.

accelerating voltages can be added to new FESEM or DualBeam instruments. Thin samples can therefore be examined in transmission mode inside a DualBeam instrument. This has had several effects on the analysis procedures currently in routine use. Firstly, TEM can now be reserved for only the most challenging of investigations. Secondly, all samples for TEM can be pre-imaged in transmission mode to ensure that they are of the correct quality and thickness before any TEM time is used. Finally, many routine investigations can be solved without using valuable TEM instrument time, as the improved resolution (0.6–1.0 nm) offered by *in situ* STEM detection will be sufficient to provide the answers in many cases.

STEM detection does not permit diffraction information to be obtained, but it does permit good metrology information to be gathered because of the high levels of materials contrast seen with this technique. Low-contrast imaging can be a problem with transmission mode studies of thin specimens. This pre-examination and filtering of samples means that a significantly higher level of efficiency can be introduced to the analysis. Many more samples can be produced and successfully analyzed, and more information can be obtained in a shorter amount of time without a significant increase in costs or by having to change the existing laboratory equipment.

Advances in sample management

Several strategies are employed for extracting thin-foil TEM samples prepared by FIB. Conventional (old style) FIB-TEM sample preparation involved removing the material from whatever packaging it was enclosed in

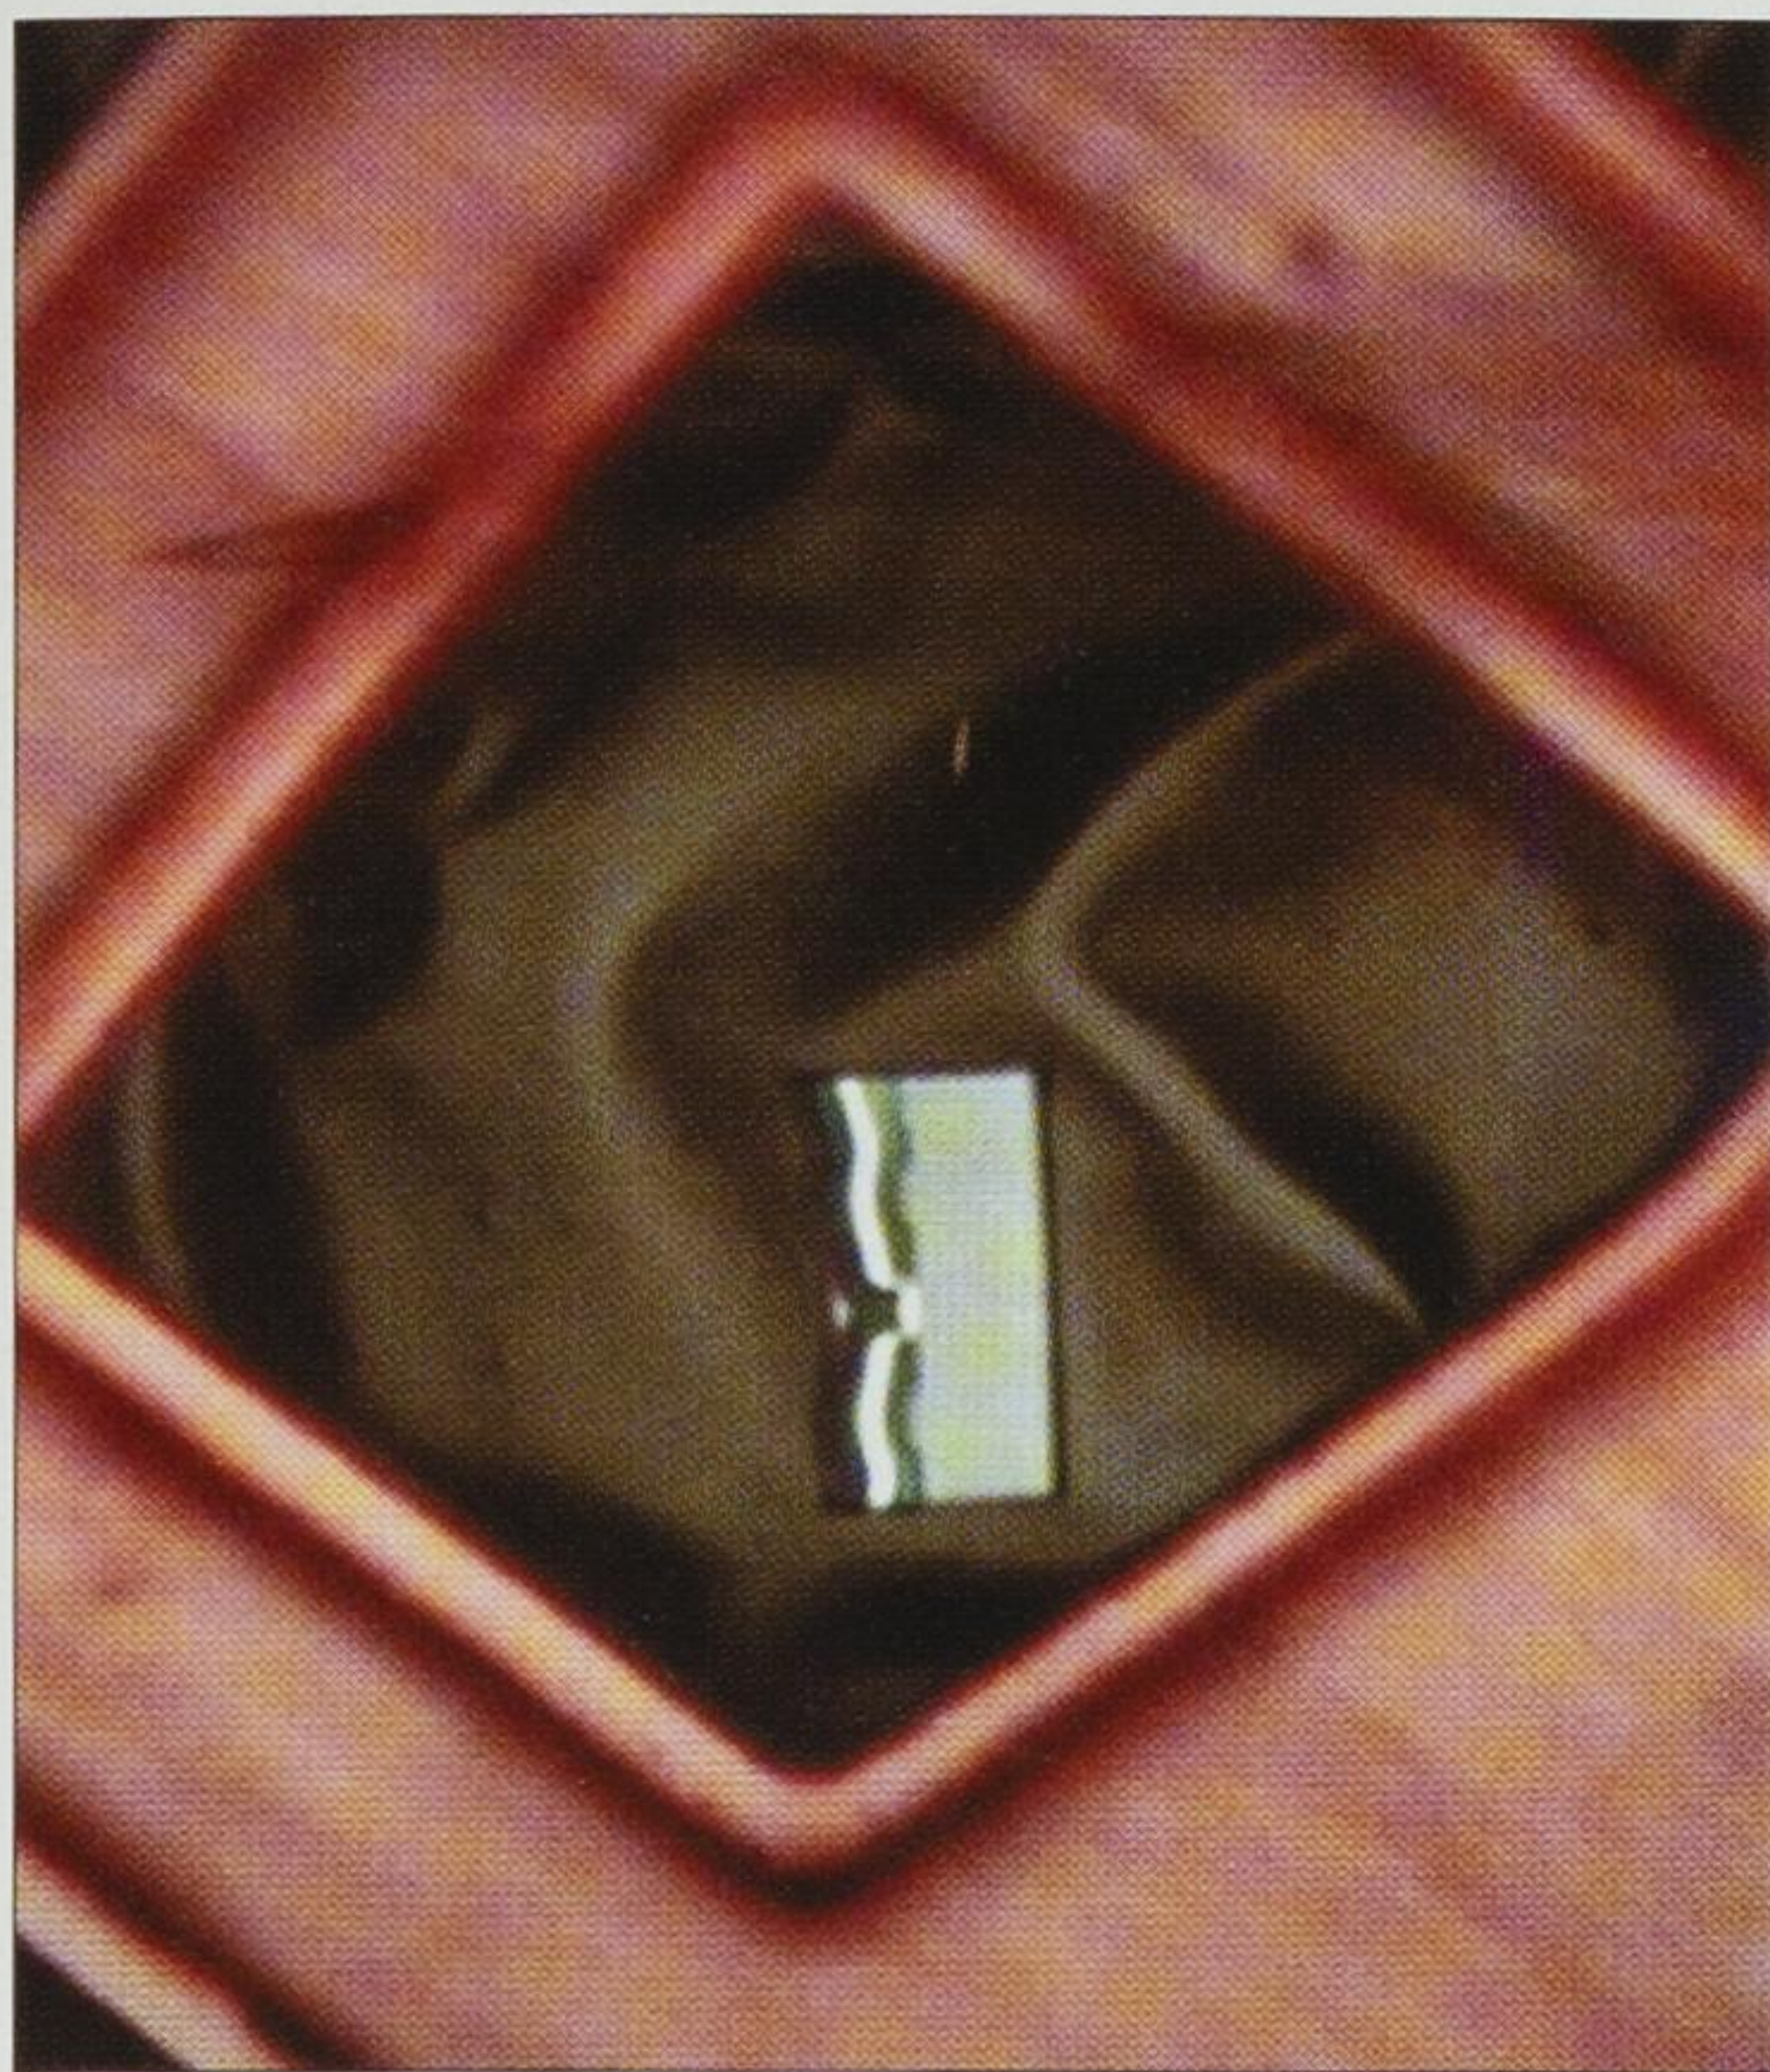


Fig. 6. Image showing a FIB-prepared foil in a copper TEM sample grid.

and then cleaving up the sample and grinding it down to less than 50 μm thick. This pre-thinned slice is then attached to a modified TEM sample grid and mounted in the FIB instrument prior to ion-beam thinning (see figure 4). After FIB processing, the grid was then removed from the FIB vacuum and transferred to the TEM for analysis. This procedure took 2.5–3 hours and required considerable operator skill.

Ex situ extraction is currently the most widely used technique. Any sample can be mounted and loaded into the FIB instrument with no mechanical preparation. Samples do not even need to be removed from packaging, as long as access to the top surface of the sample can be achieved with the ion beam. A thin foil can then be cut out by the ion beam, leaving it free standing in a FIB-milled trench on the surface of the sample (see figure 5). This sample is then removed from the instrument and with the use of an optical workstation, an electrostatic needle is used to extract the thinned foil and transfer it to a support film (normally holey carbon) on a copper TEM grid (see figure 6). This extraction technique requires a little experience before success rates of equal to or greater than 95% can be achieved routinely. However, it is highly effective and can be used on an enormously wide variety of materials, even ones with poor structural rigidity such as compressed powders and samples with voids or cracks. Unfortunately, exposing the sample to the atmosphere during transfer to the TEM can be problematic for materials such as those with a high aluminum content, which

can suffer from immediate degradation when exposed to atmosphere.

In situ extraction has been made possible by the addition of a micromanipulator to transfer the sample to a TEM grid and a further manipulator, known as a FlipStage, which flips over the sample onto the STEM detector. As a result, all of the steps from sample preparation through to STEM analysis can take place without ever removing the material from the vacuum in a DualBeam tool. This technique requires a lower level of operator training to complete, and has a success rate as high as *ex situ* extraction for an experienced operator. The procedure relies on the specimen being able to support itself (so powdered or brittle samples are less suitable), but it does permit re-thinning by the ion beam for specimens that require it.

Elemental mapping


By allowing thinned samples to be examined *in situ* using the SEM function in a DualBeam instrument, it becomes possible to use other techniques that are available to SEM users. The energy dispersive X-ray (EDX) unit, which is mounted on most SEMs for elemental mapping, is an excellent example. The volumetric effect that reduces the mapping resolution to about 1 μm for thick samples is removed when analyzing thin foils. EDX mapping of foils using this *in situ* method can achieve spatial resolutions of 35–50 nm. When these elemental results are then combined with the 0.6–1 nm high-contrast STEM imaging, we have some complementary analysis capabilities that are fast and very useful, and on a sample that can be made from bulk material without any mechanical preparation at all.

Tools such as the Strata DB235 bring together a total sample preparation and high-resolution imaging and analysis capability on a single-chamber system. Such an instrument complements existing sample-preparation techniques and also reconfirms TEM as a high-end analysis instrument. It enables the rapid production of many more thin samples and takes on a high proportion of the routine analysis work, providing efficiency improvements at all stages of the analysis process. ●

Lloyd Peto is the business development manager for FIB and DualBeam products at FEI Company, The Aztec Centre, Aztec West, Bristol BS32 4TD, UK.
E-mail Lloyd.peto@uk.feico.com.

NEW PRODUCT FOR NITRIDES GROWTH! THE VALVED RF SOURCE PROVIDES RAPID AND REPRODUCIBLE FLUX MODULATION AND UNSURPASSED FLUX UNIFORMITY OVER LARGE WAFERS

- Allows a mechanical control over the useful range of N concentration in GaAsN while the source parameters remains constant.
- Permit to stop or to use the N species with no delay.
- Unsurpassed N uniformity.
- Permit to use a well degassed source at any time during the growth period.
- Models for Nitrogen, Oxygen, Ammoniac, Hydrogen ...
- Easy to install on a DN63CF (4") flange.
- Powered by standard customer and competitor electronics.
- Models for R&D and Production MBE systems.

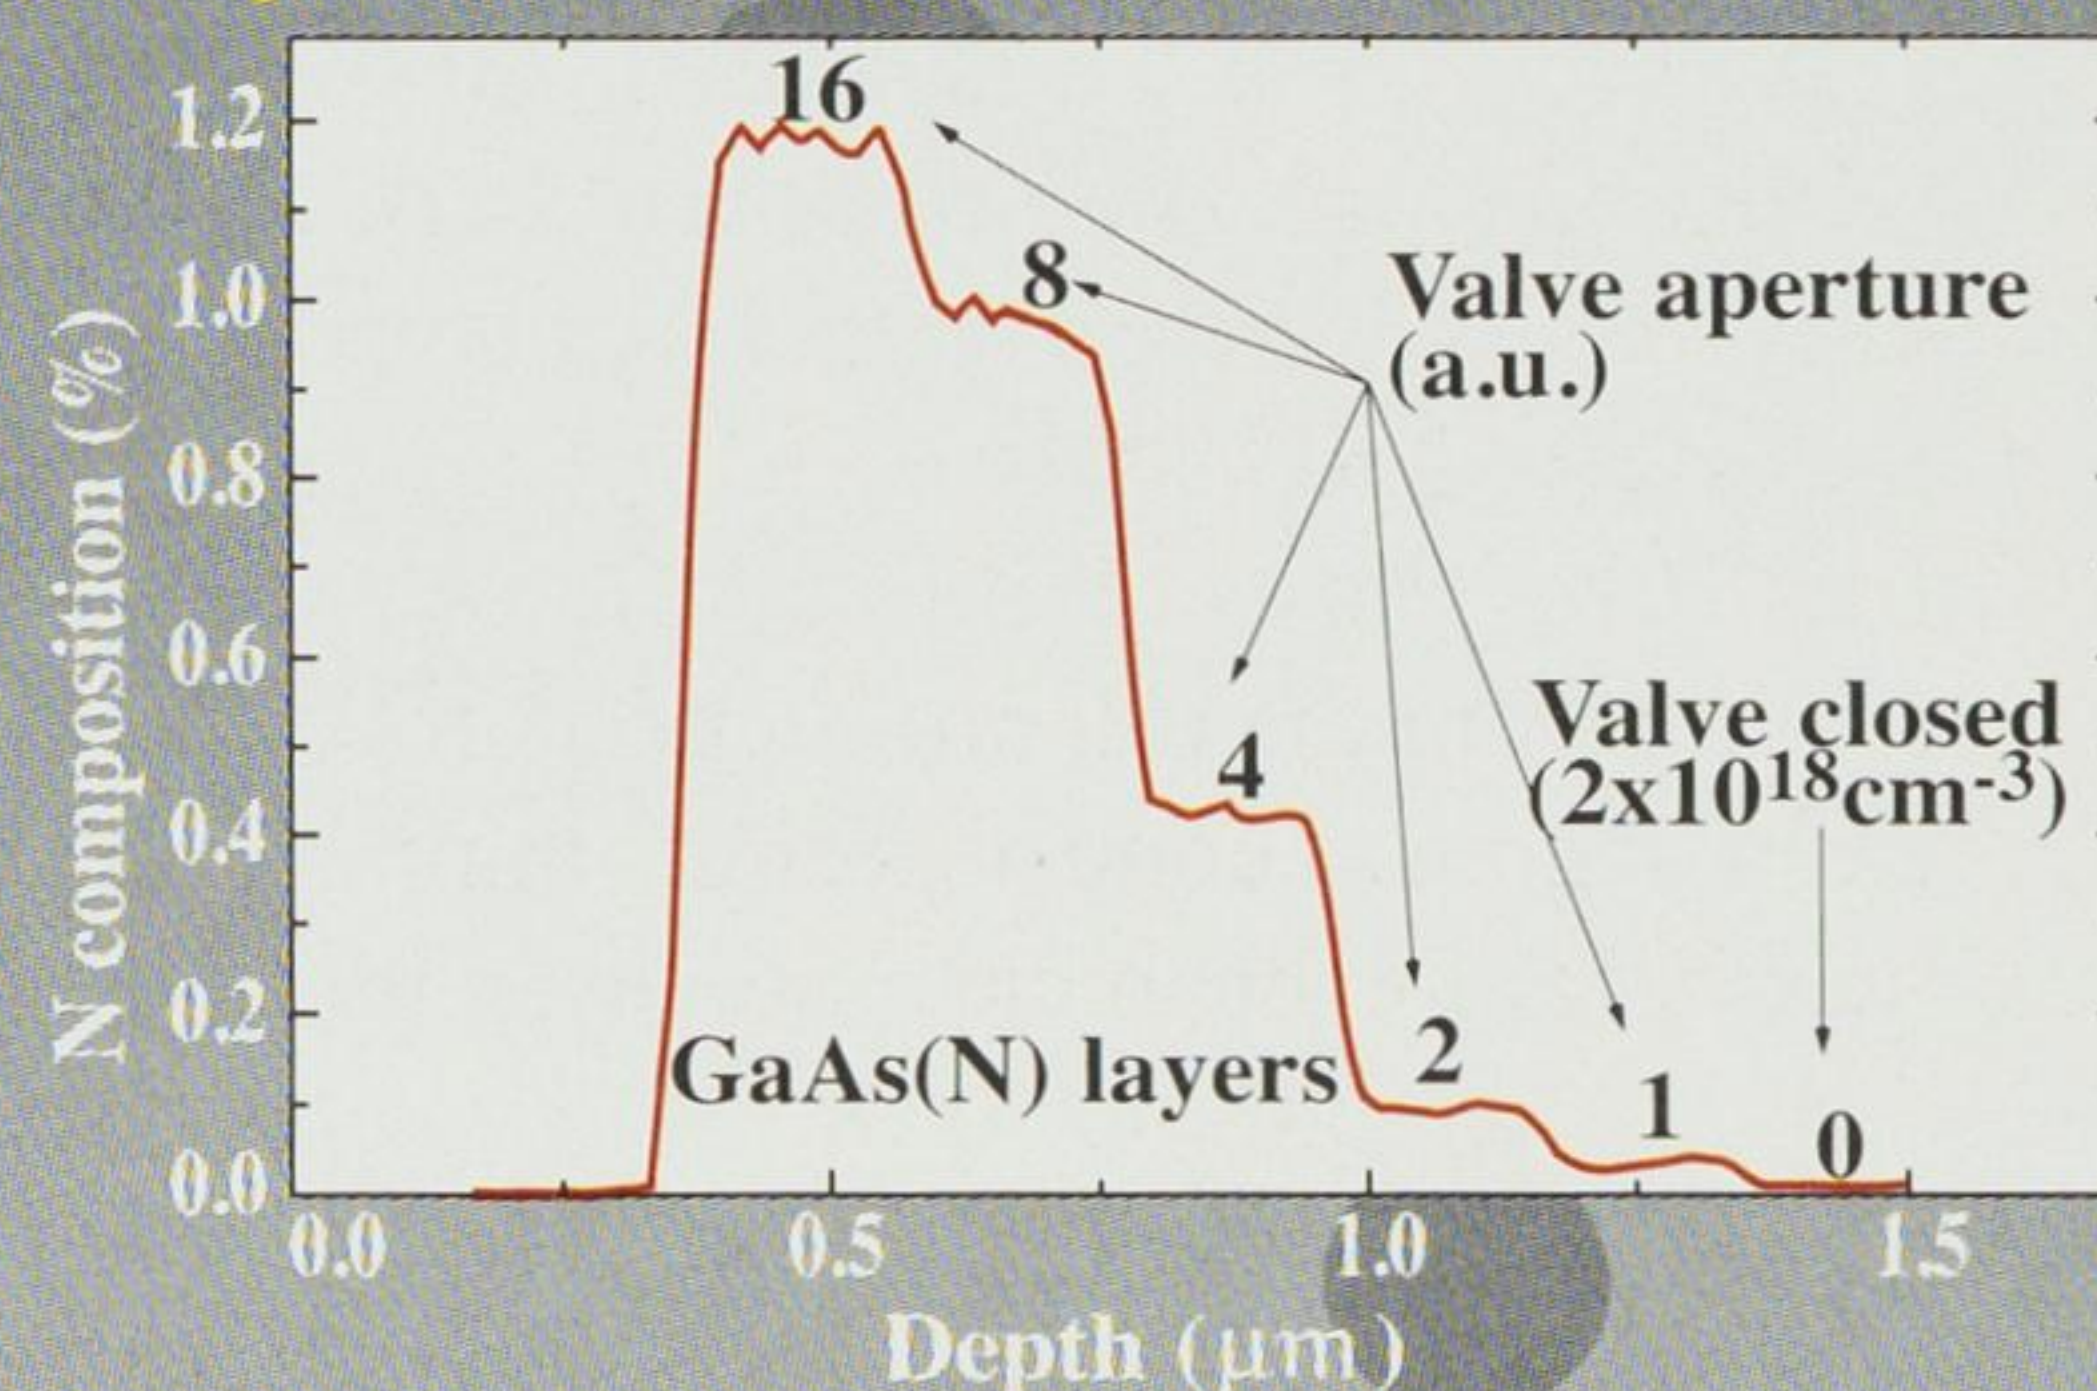

Compared to a standard RF Plasma Source this New Source gives an easiness of control similar to an arsenic Valved Cracker Cell!
See more results on Addon-mbe.com

ADDON
Créative Epitaxie Equipement

Fax : 00 33 (0) 1 39 15 56 36
E-mail : mbecells@imaginet.fr


EMF have developed **TITAN**

The next logical step in MOCVD Innovation

Titan's Cell

The Development team at EMF employed the latest CFD computer modelling to design a cell with ideal flow dynamics


- Uniform deposition results in higher yields
- Atmospheric operation minimises precursor consumption
- Load Lock option for increased throughput
- IR lamp heating for rapid temperature cycling

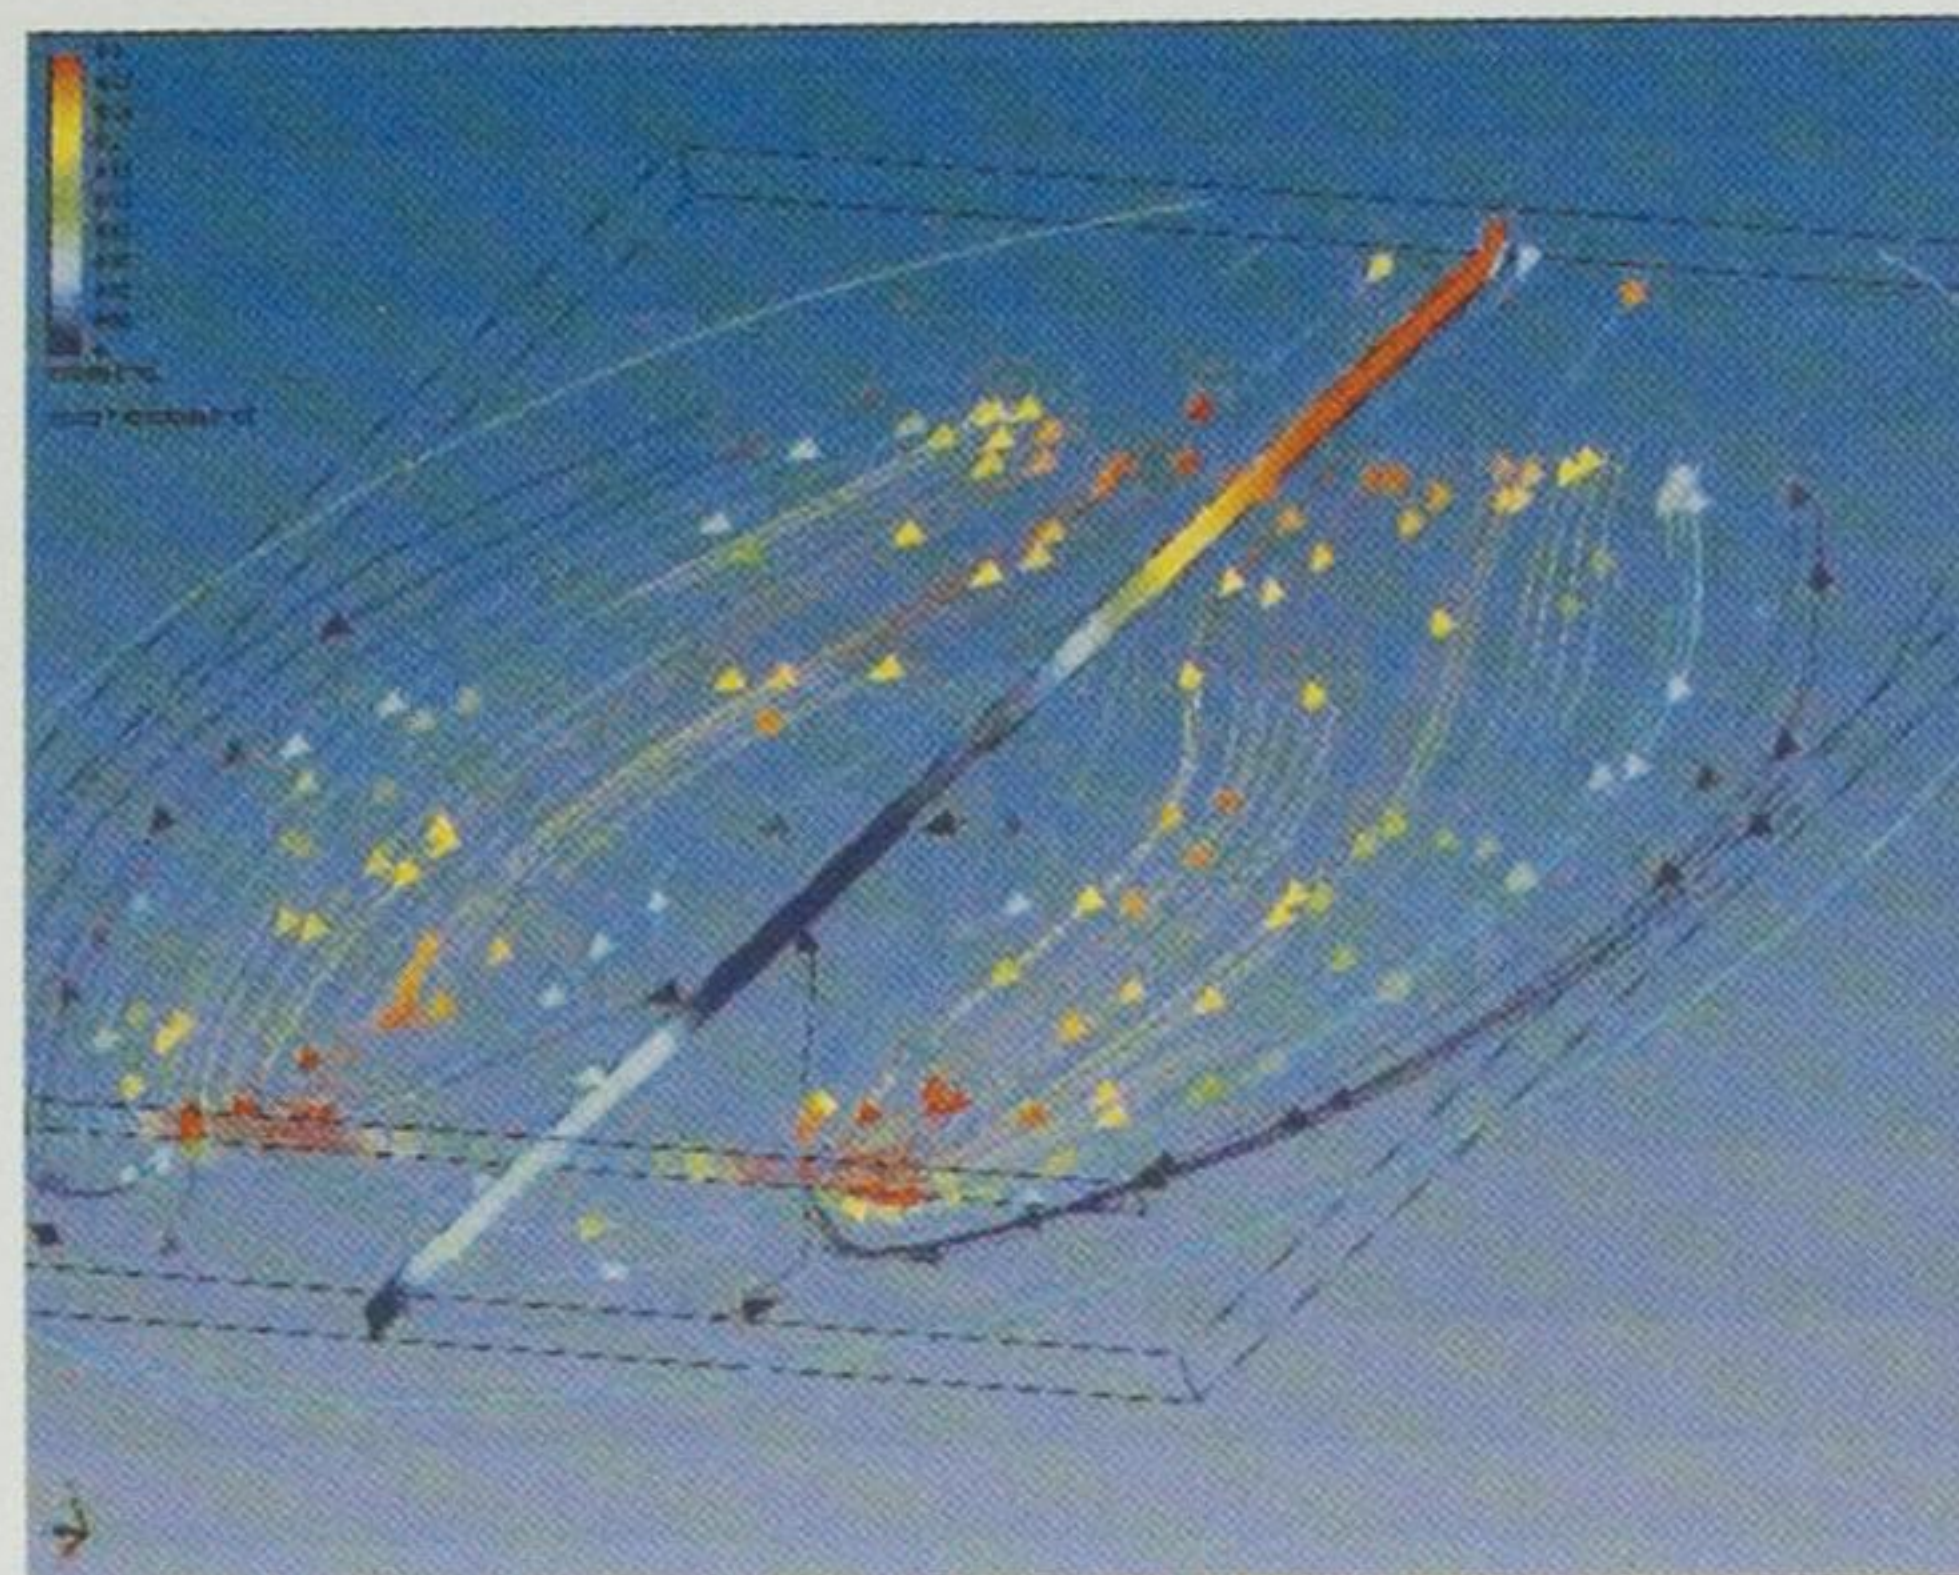

Titan Console

Ergonomically designed, the multi screen console controls all aspects of the digital closed loop system. Growth parameters and reactor are instantly accessed via the touchscreen virtual keyboard.

- Constant process monitoring with automatic error correction
- Full Digital operation for reproducible process
- MO flow rate control for consistent process
- Remote system diagnostic for improved uptime

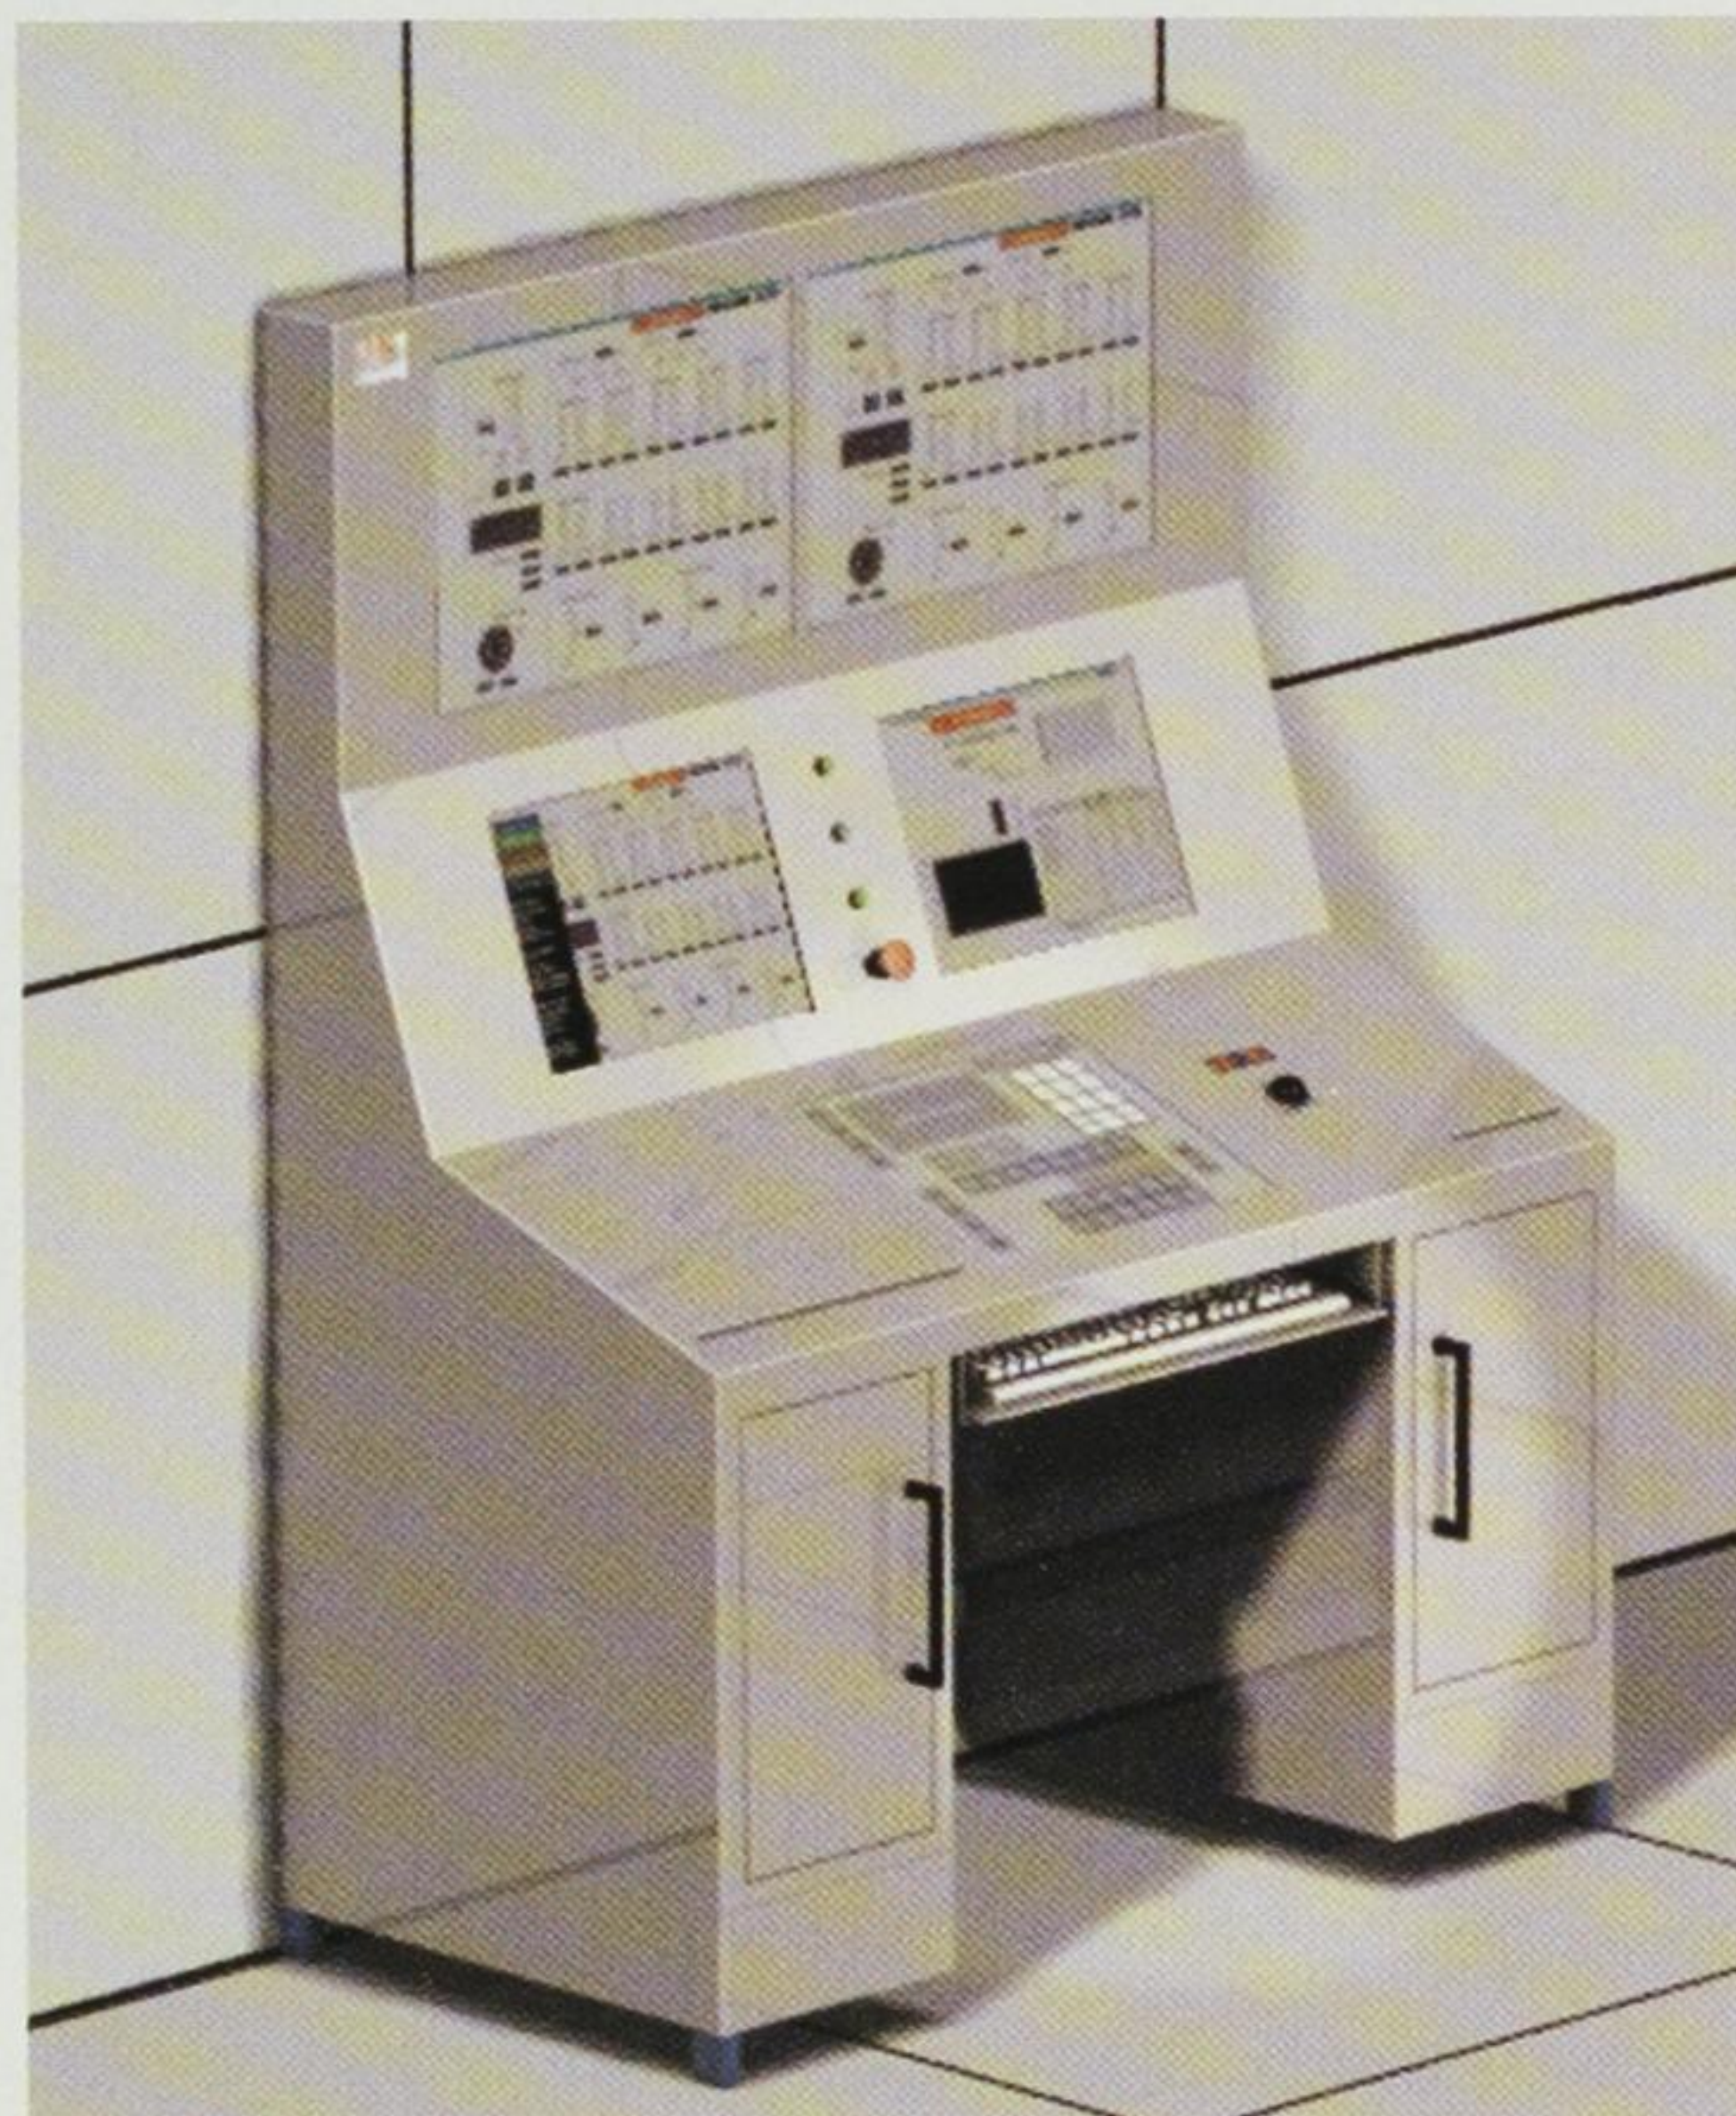

For more information contact mocvdsales@emf.co.uk

EMF
III/V Innovators

EMF Limited

Unit 5, Chesterton Mills, French's Road, Cambridge. CB4 3NP, England

Telephone: +44 (0)1223 352 244 Facsimile: +44 (0)1223 352 444


Email: jd@emf.co.uk Web: www.emf.co.uk

A person wearing a full-body white protective suit, including a hood and gloves, is working inside a large, white industrial machine. The machine has multiple glass-paned doors, some of which are open, revealing internal components like wiring, pipes, and various mechanical parts. The person is holding a small, cylindrical component with a label. The machine is labeled "TITAN" in large, bold, black letters at the top right. The overall scene suggests a high-precision manufacturing or research environment.

TITAN

TITAN - THE MOST ADVANCED CLOSED LOOP MOCVD SYSTEM

TIRED OF SECOND-GUESSING YOUR DEVICE DESIGNS?

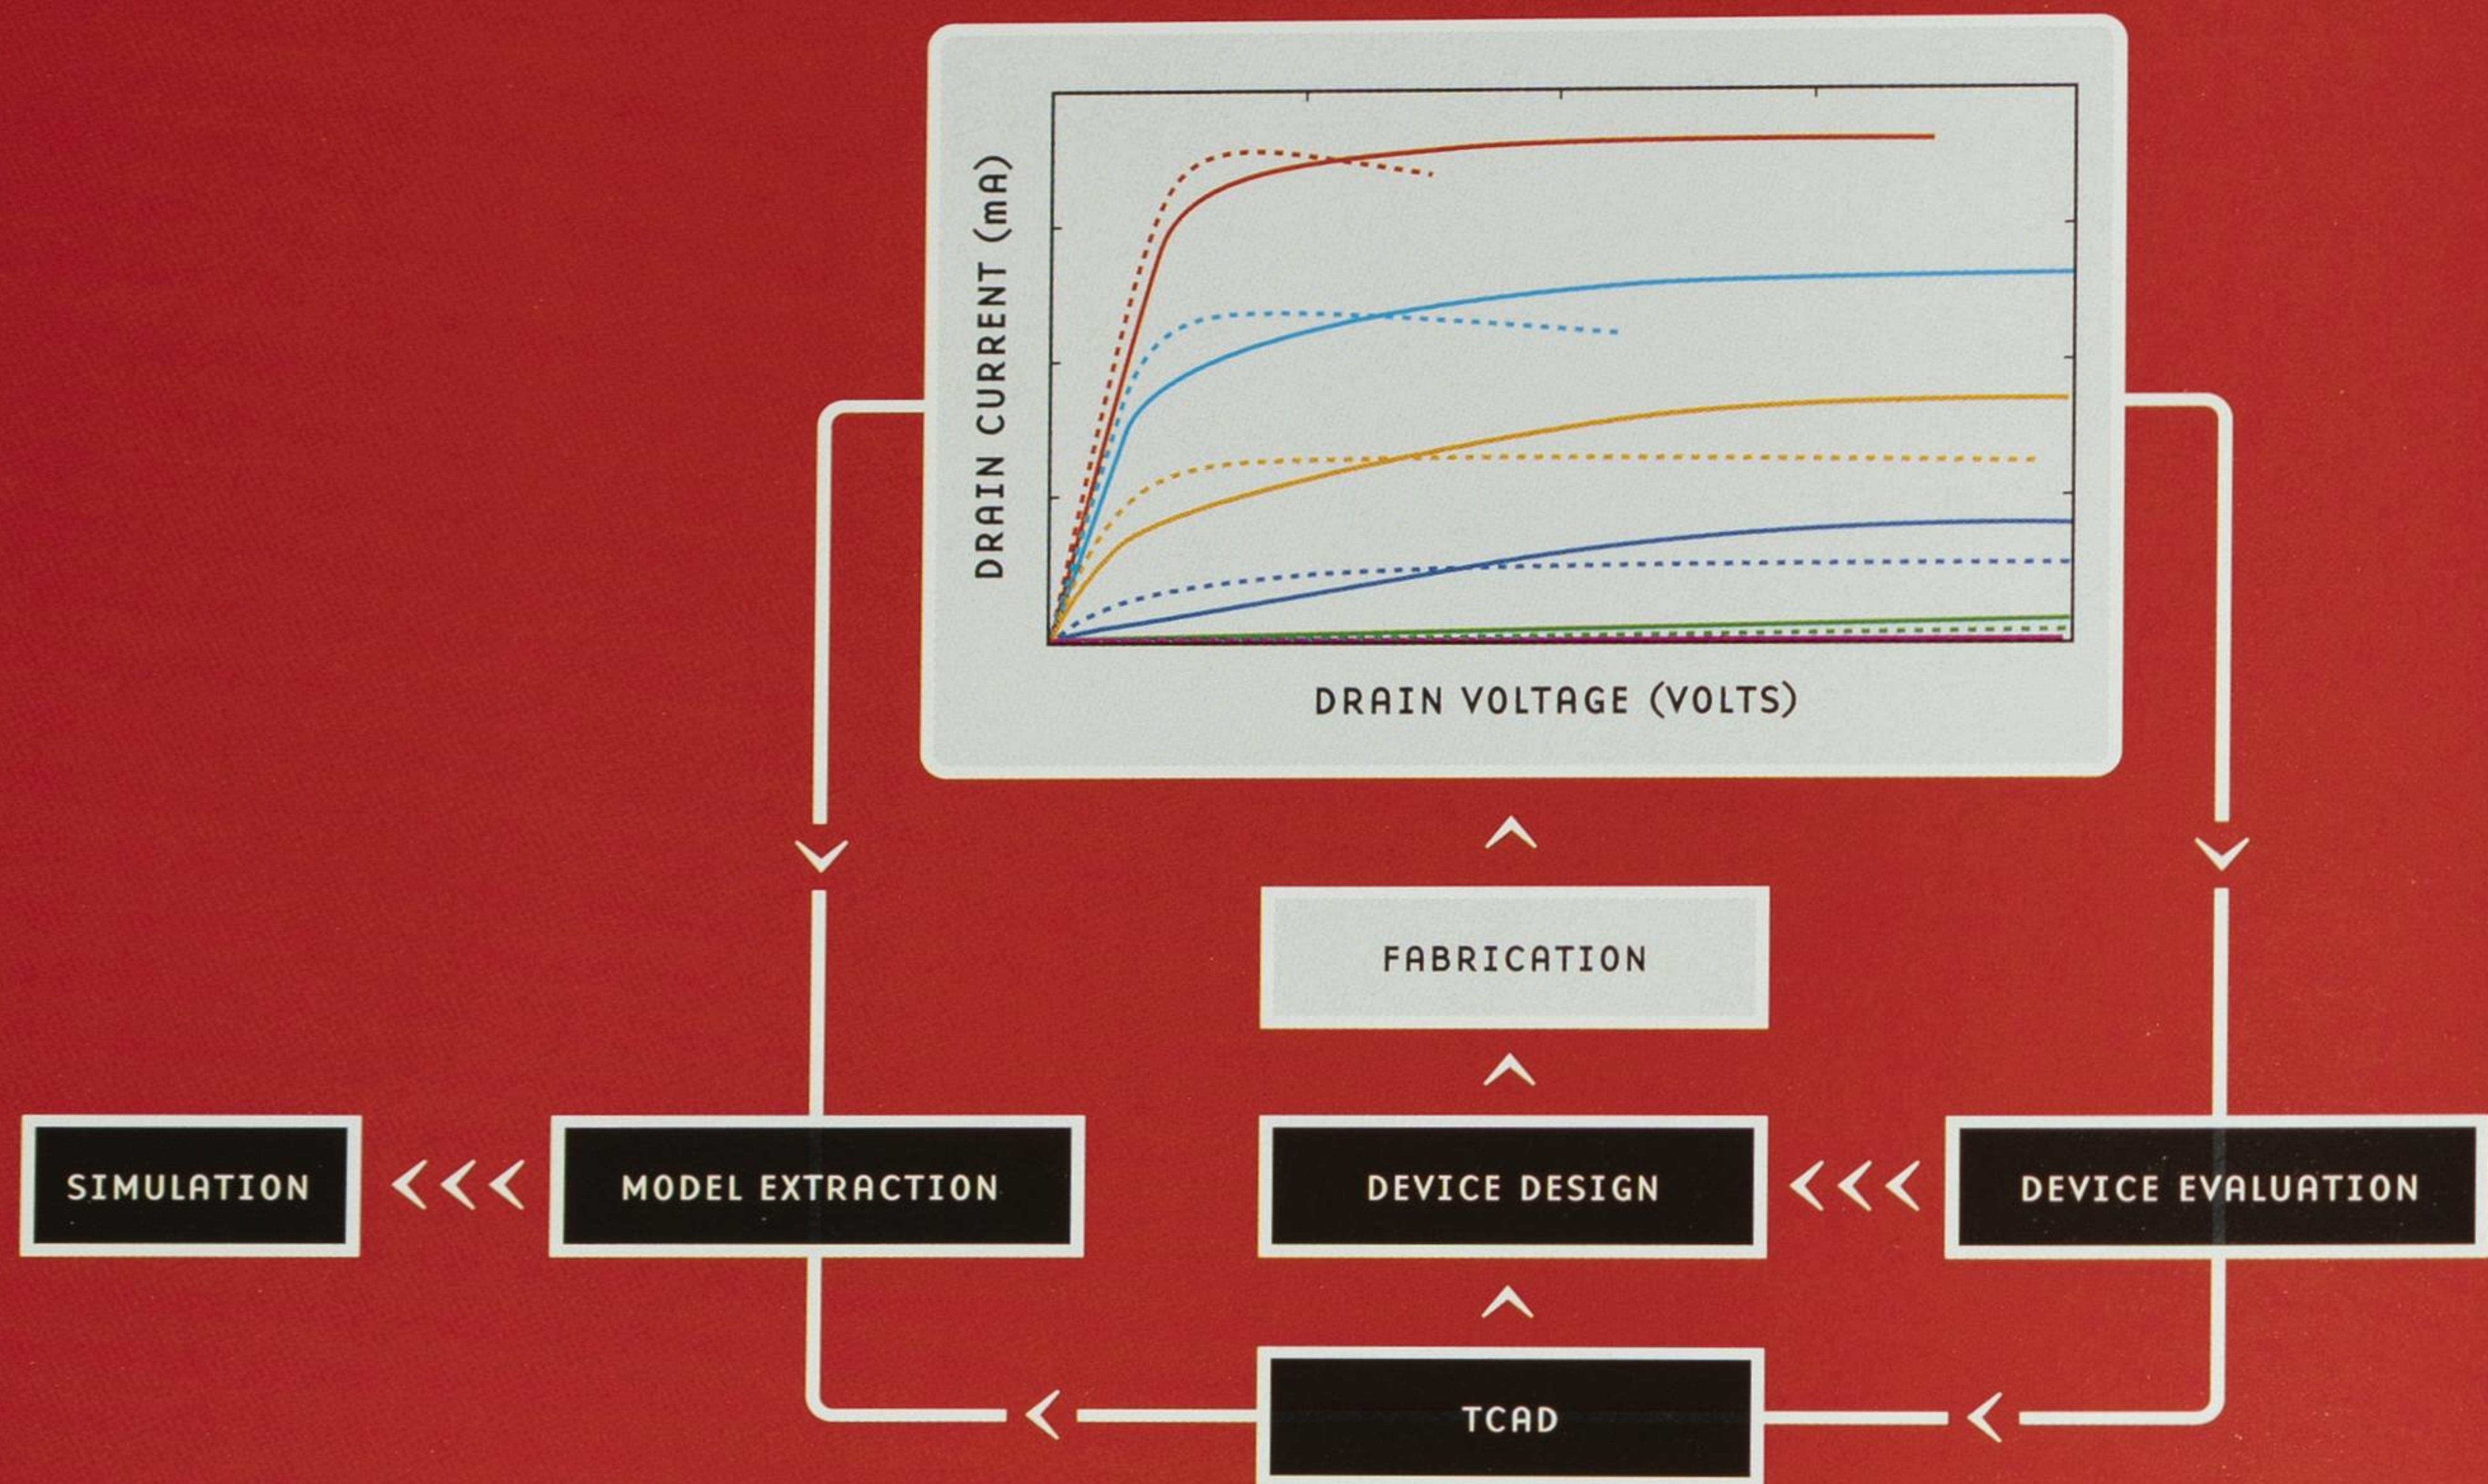

DISCOVER DiVA.
THE DIFFERENCE BETWEEN PRETTY SURE—AND POSITIVE.

DiVA™ First in pulse.

Creating devices for today's state-of-the-art processes is challenging. Because DiVA gives rapid and accurate access to the true high-frequency characteristics of a device, you can gain unique insight into the factors that will affect its real-life performance. This insight will result in better design decisions and fewer surprises. Make DiVA, the first and only dynamic I-V analyzer, part of your process flow.

Call or log on today for more information:

US: 1-800-900-0955, UK: +44 (0) 1904 715500, diva@accentopto.com, www.accentopto.com/diva


ACCENT™
Accent Optical Technologies

Using photoluminescence for characterizing wide-bandgap materials and devices

Using a pulsed short-wavelength laser improves the accuracy and usefulness of photoluminescence for characterizing wide-bandgap semiconductors, according to **Colm Mac Mahon** and colleagues.

A great deal of research is currently focused on wide-bandgap materials, specifically on the III-nitrides and SiC for applications such as LEDs, laser diodes and photodiodes. The combination of high electric breakdown field and high saturation velocity also makes these materials suitable for high-temperature and high-power RF transistors. The importance of these materials is highlighted by the involvement of DARPA, which has recently launched a program called the Wide Bandgap Semiconductor Technology Initiative (WBSTI) to help accelerate improvements in material quality and device performance. Materials characterization plays a crucial role in such development efforts, and photoluminescence (PL) studies can reveal much about epitaxial structures before expensive device processing steps are carried out (*Compound Semiconductor* March 2001 p68).

PL studies of wide-bandgap materials are complicated by effects that are not seen, or that are uncommon, in other material systems. The PL from the quantum well (QW) structures required for LEDs and lasers is influenced by the quantum confined Stark effect (QCSE) and elemental clustering. These phenomena are discussed below, and their influences are explained using real data. The type of laser used in PL studies has a great influence on these effects, allowing improved correlation between PL and electroluminescence (EL), which is crucial for manufacturers of LEDs and lasers.

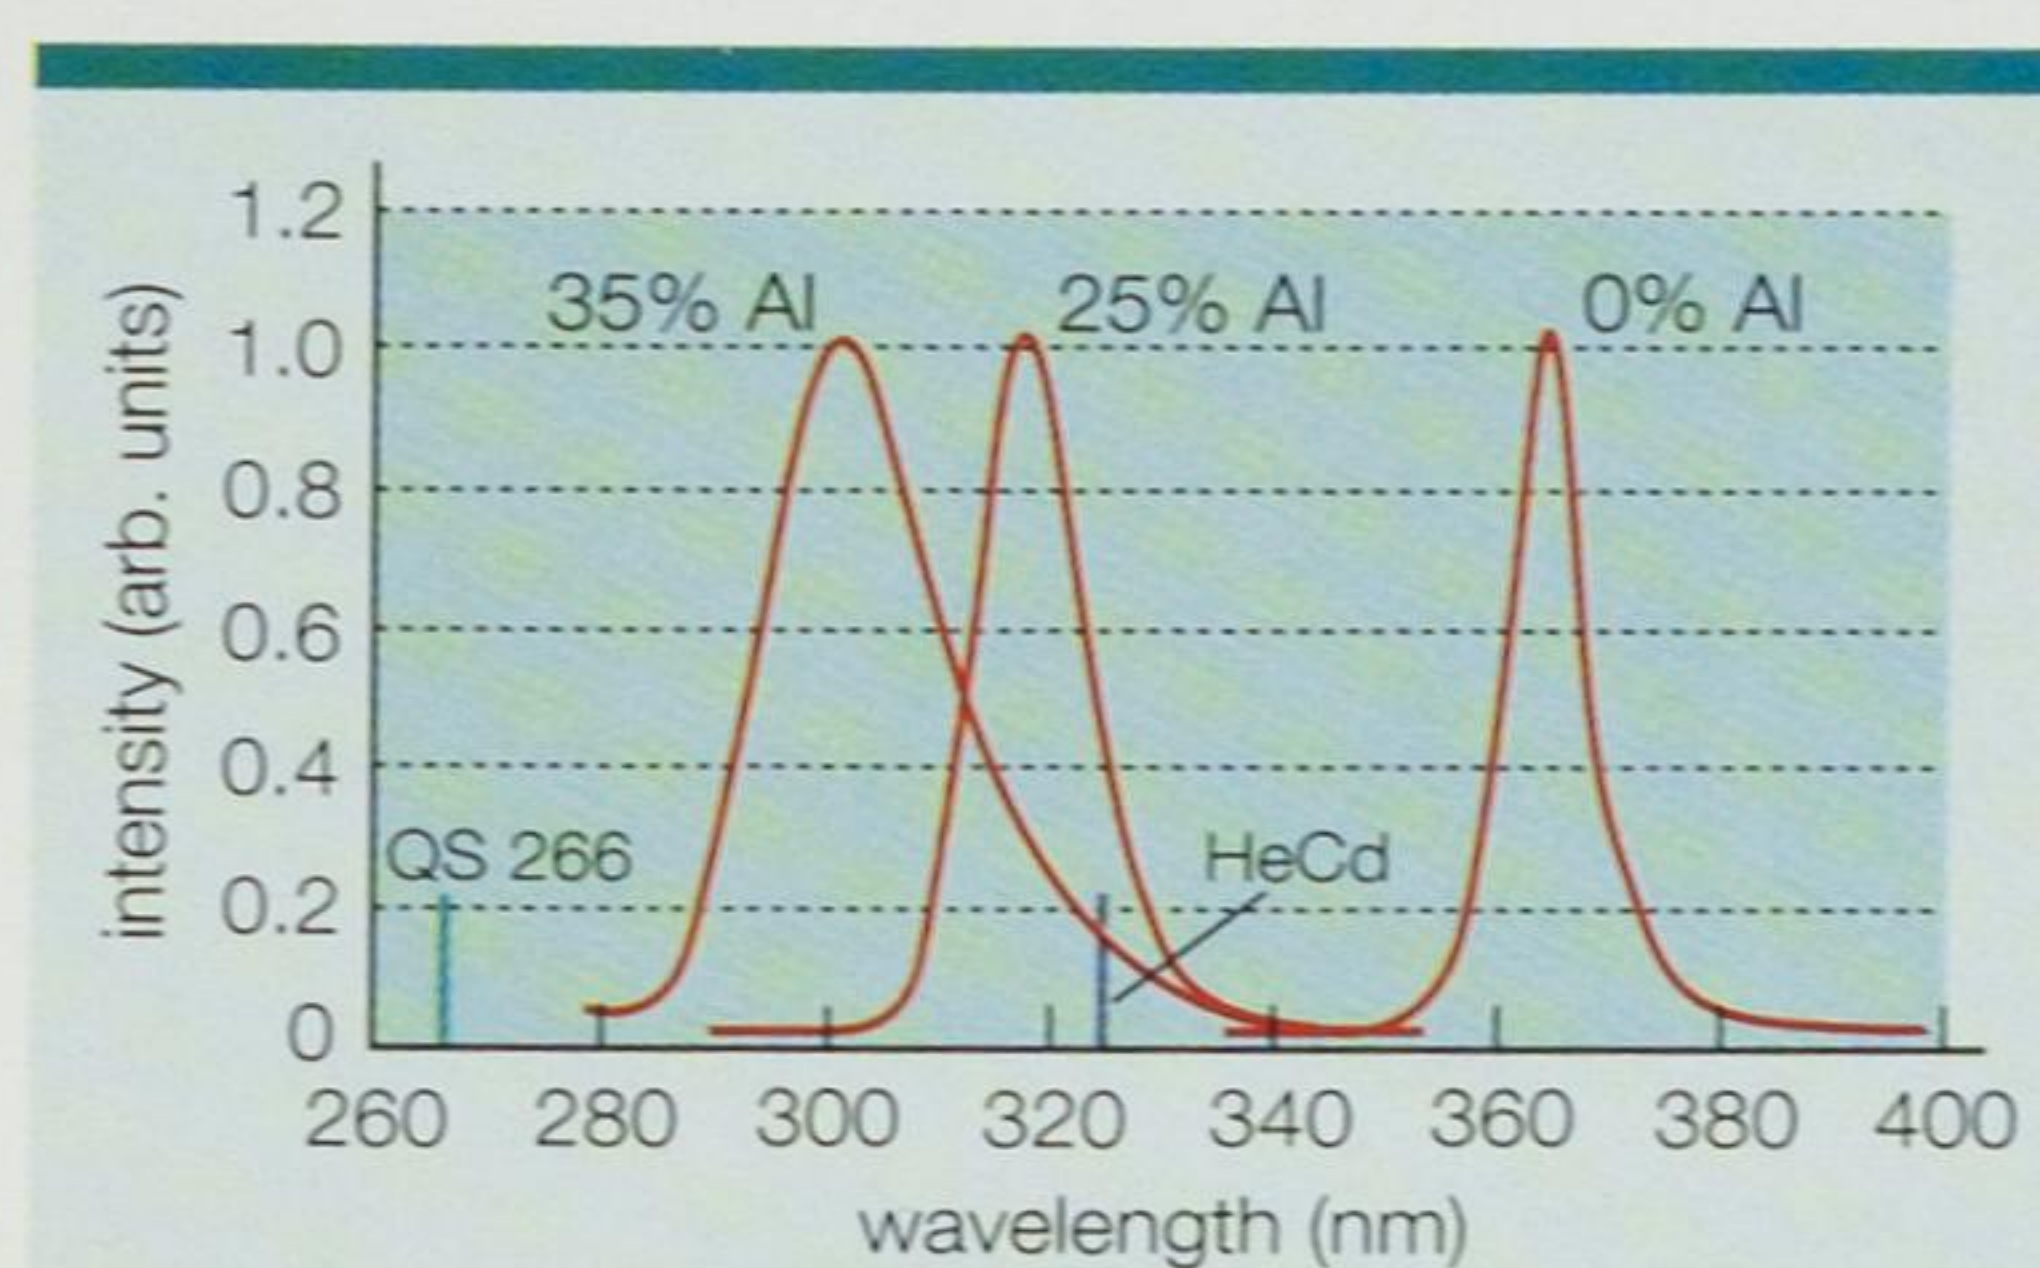


Fig. 1. Linescans taken with an Accent rapid PL mapper of $\text{Al}_x\text{Ga}_{1-x}\text{N}$ for $x = 0, 0.25$ and 0.35 using QS 266 nm laser. Emission wavelengths for the QS 266 nm and 325 nm HeCd lasers are marked.

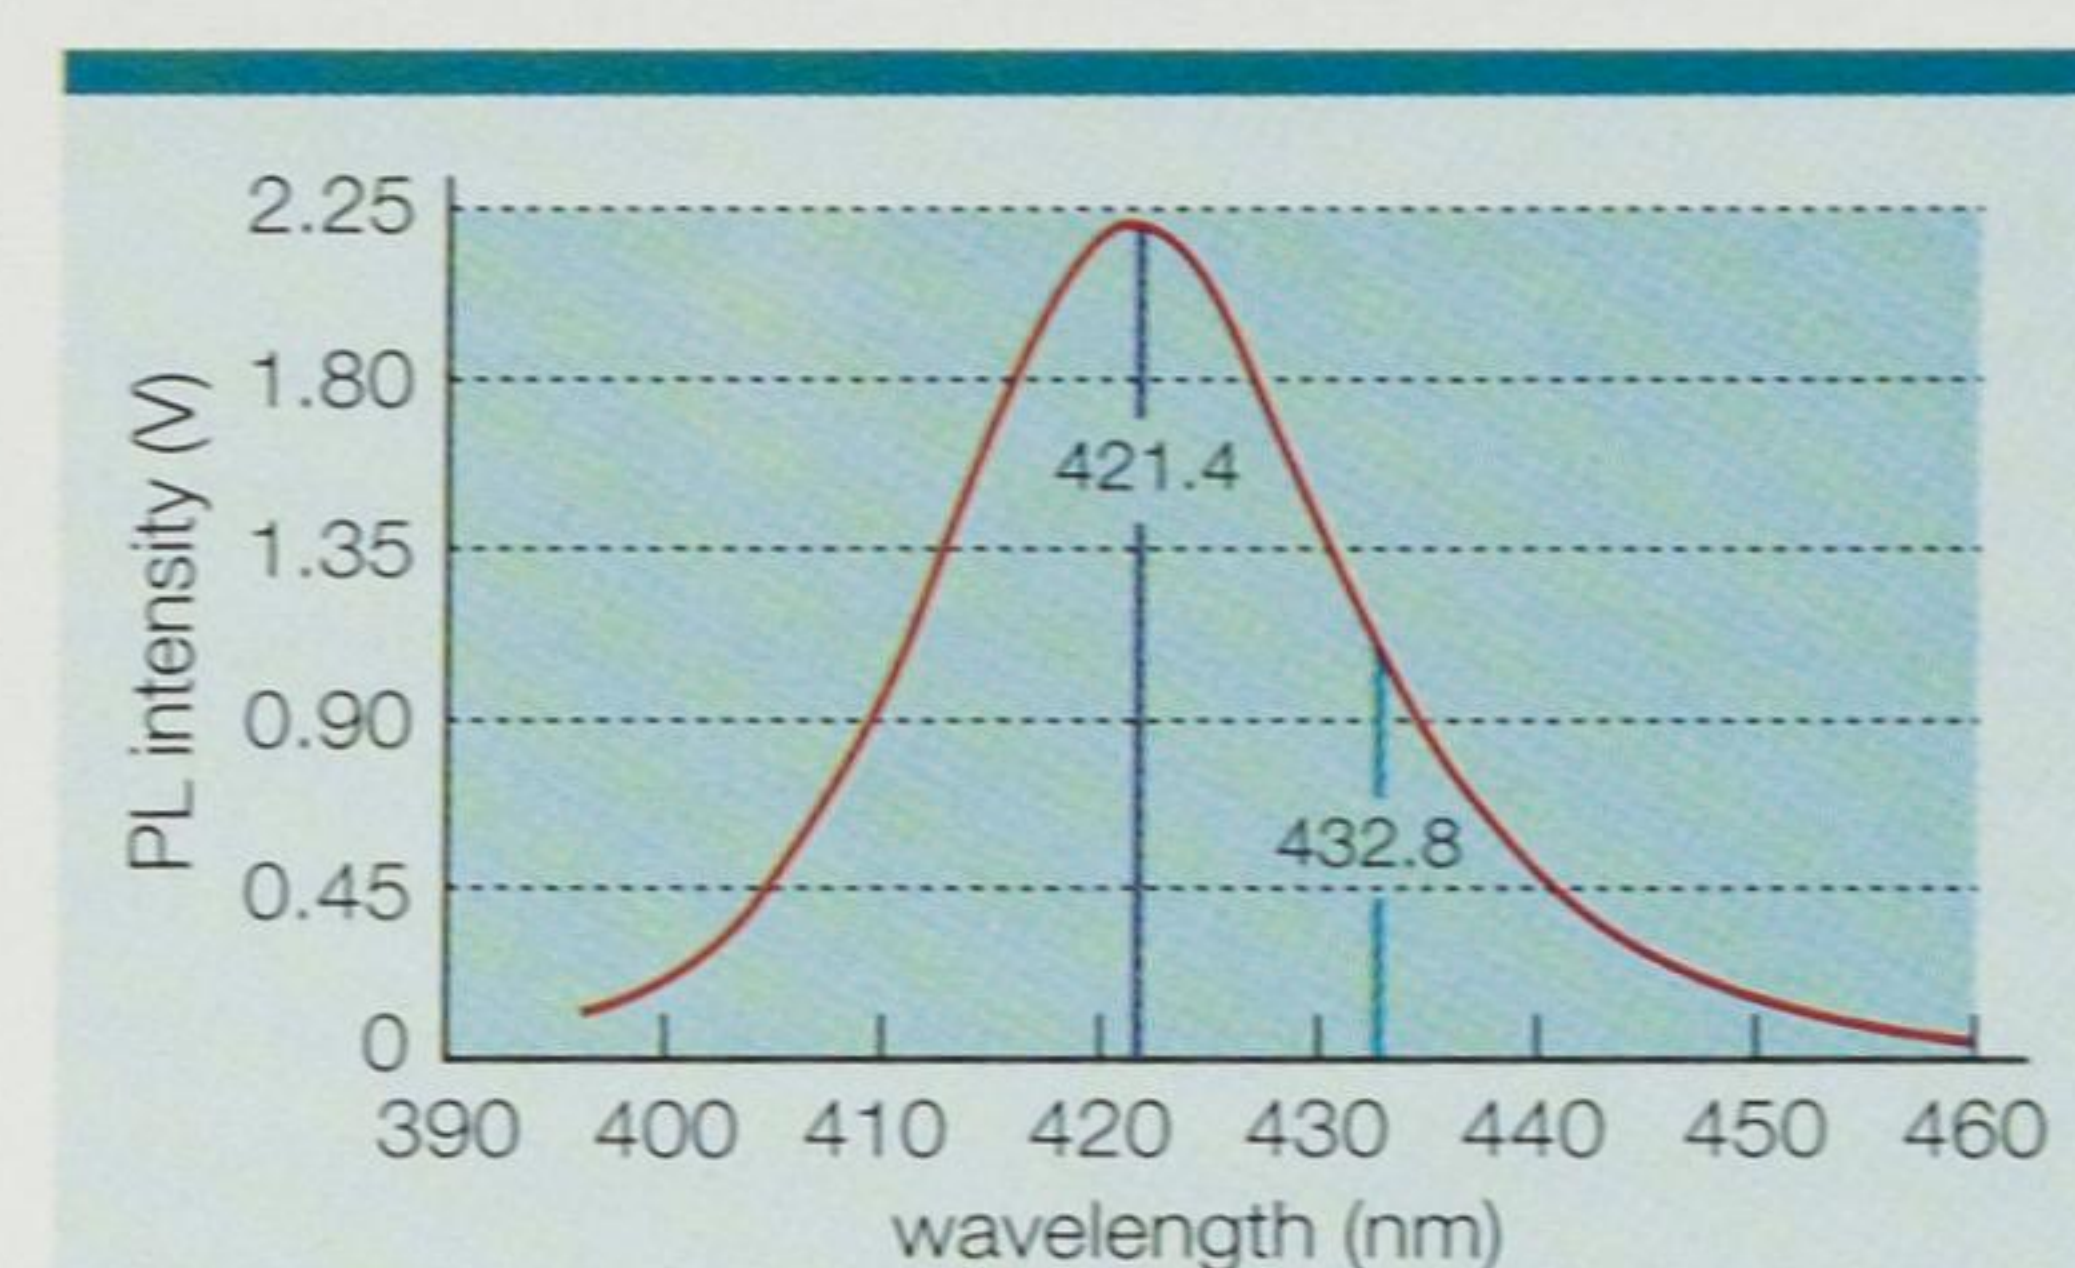


Fig. 2. A line spectrum showing the dominant wavelength (432.8 nm) seen by the eye as calculated from a CIE diagram for a PL spectrum with a peak wavelength of 421.4 nm.

Pump laser parameters for wide-bandgap PL

Laser parameters	CW HeCd 325 nm or Nd:YAG 266/355 nm	QS 266 nm
power/energy	50 mW	1 μJ
pulse width	CW	500 ps
repetition rate	CW	10 kHz
average power	50 mW	10 mW
peak power	50 mW	2 kW

Table 1. Comparison of the typical parameters of CW and QS lasers for use in the PL characterization of wide-bandgap semiconductors.

Materials and choice of laser

For PL to occur, the laser excitation needs to have a higher energy than the bandgap of the material under investigation. There are currently a number of lasers available that are suitable for the PL characterization of wide-bandgap semiconductors. The continuous-wave (CW) options include the Ar^+ ion (244 nm), Nd:YAG (266 nm), HeCd (325 nm) and Nd:YAG (355 nm). There is also a Q-switched (QS) Nd:YAG option, which emits a pulsed beam at 266 nm. A comparison of the typical parameters of the CW and QS lasers for use in PL characterization is shown in table 1.

CW lasers for use in wide-bandgap characterization tend to be large, and are mounted outside the PL system. Fiber-optic coupling is necessary to get the light to the sample being measured. Over time, fiber-optic coupling can

lead to decreased laser power due to fiber degradation, which means frequent coupling changes. CW lasers also have long warm-up and cool-down periods, are expensive and have a short lifetime. The CW 325 nm HeCd commonly used in the characterization of wide-bandgap materials is not suitable for materials with higher bandgaps and for structures requiring high laser power densities. While high power densities can be achieved by focusing the spot to a smaller size ($<10 \mu\text{m}$), for lasers with an output power above 50 mW, heating effects influence the emission wavelength and in extreme cases may cause thermal damage.

An alternative to the CW 325 nm HeCd laser is the QS 266 nm laser, which at a relatively large spot size can still deliver a peak power density in the kW range as shown in

CHARACTERIZATION

table 1. High excitation density is needed to generate PL when the layer of interest is between highly doped p- and n-type layers, as is the case in laser diode structures. It is also required for devices with a thick cap layer that absorbs the incident radiation, for example when looking at the base region of HBTs. Other advantages of the QS 266 nm laser are its shorter wavelength, longer lifetime, lower power consumption and cost. In addition, its smaller size means that it can be mounted internally in PL systems.

High-content Al devices

The bandgap energy of AlGa_xN increases with Al content, and consequently these materials require shorter wavelength excitation to create PL. The short wavelength of the 266 nm laser allows PL characterization using the Accent Rapid Photoluminescence Mapper (RPM 2000/4000) of all wide-bandgap materials of interest, and is particularly useful for high Al content Al_xGa_{1-x}N. The peak wavelength variation of Al_xGa_{1-x}N with various Al concentrations, obtained using a 266 nm laser, is shown in figure 1. The HeCd laser is only capable of measuring low Al concentrations in GaN. In comparison, the maximum Al concentration measurable using the 266 nm laser is 35%, which is suitable for most present applications. Al contents of up to 25% are currently being used in GaN-based HEMTs.

Stokes shift

The emitted PL wavelength from a material is always longer than the absorbed wavelength, and the difference between these is known as the Stokes shift. The Stokes shift increases with increasing doping, and the energy difference between absorption and emission is due to charge relaxation to lower energy levels. In InGa_xN/GaN QW structures, it is also possible for In-rich regions to form due to phase separation at the interfaces, which leads to a band-tailing effect. Real devices electroluminesce because they are pumped hard with an electric current. High-power lasers are required to photoexcite carriers to the highest energy levels, which can lead to undesirable heating effects. By using a QS laser, these heating effects can be reduced, while maintaining a high power den-

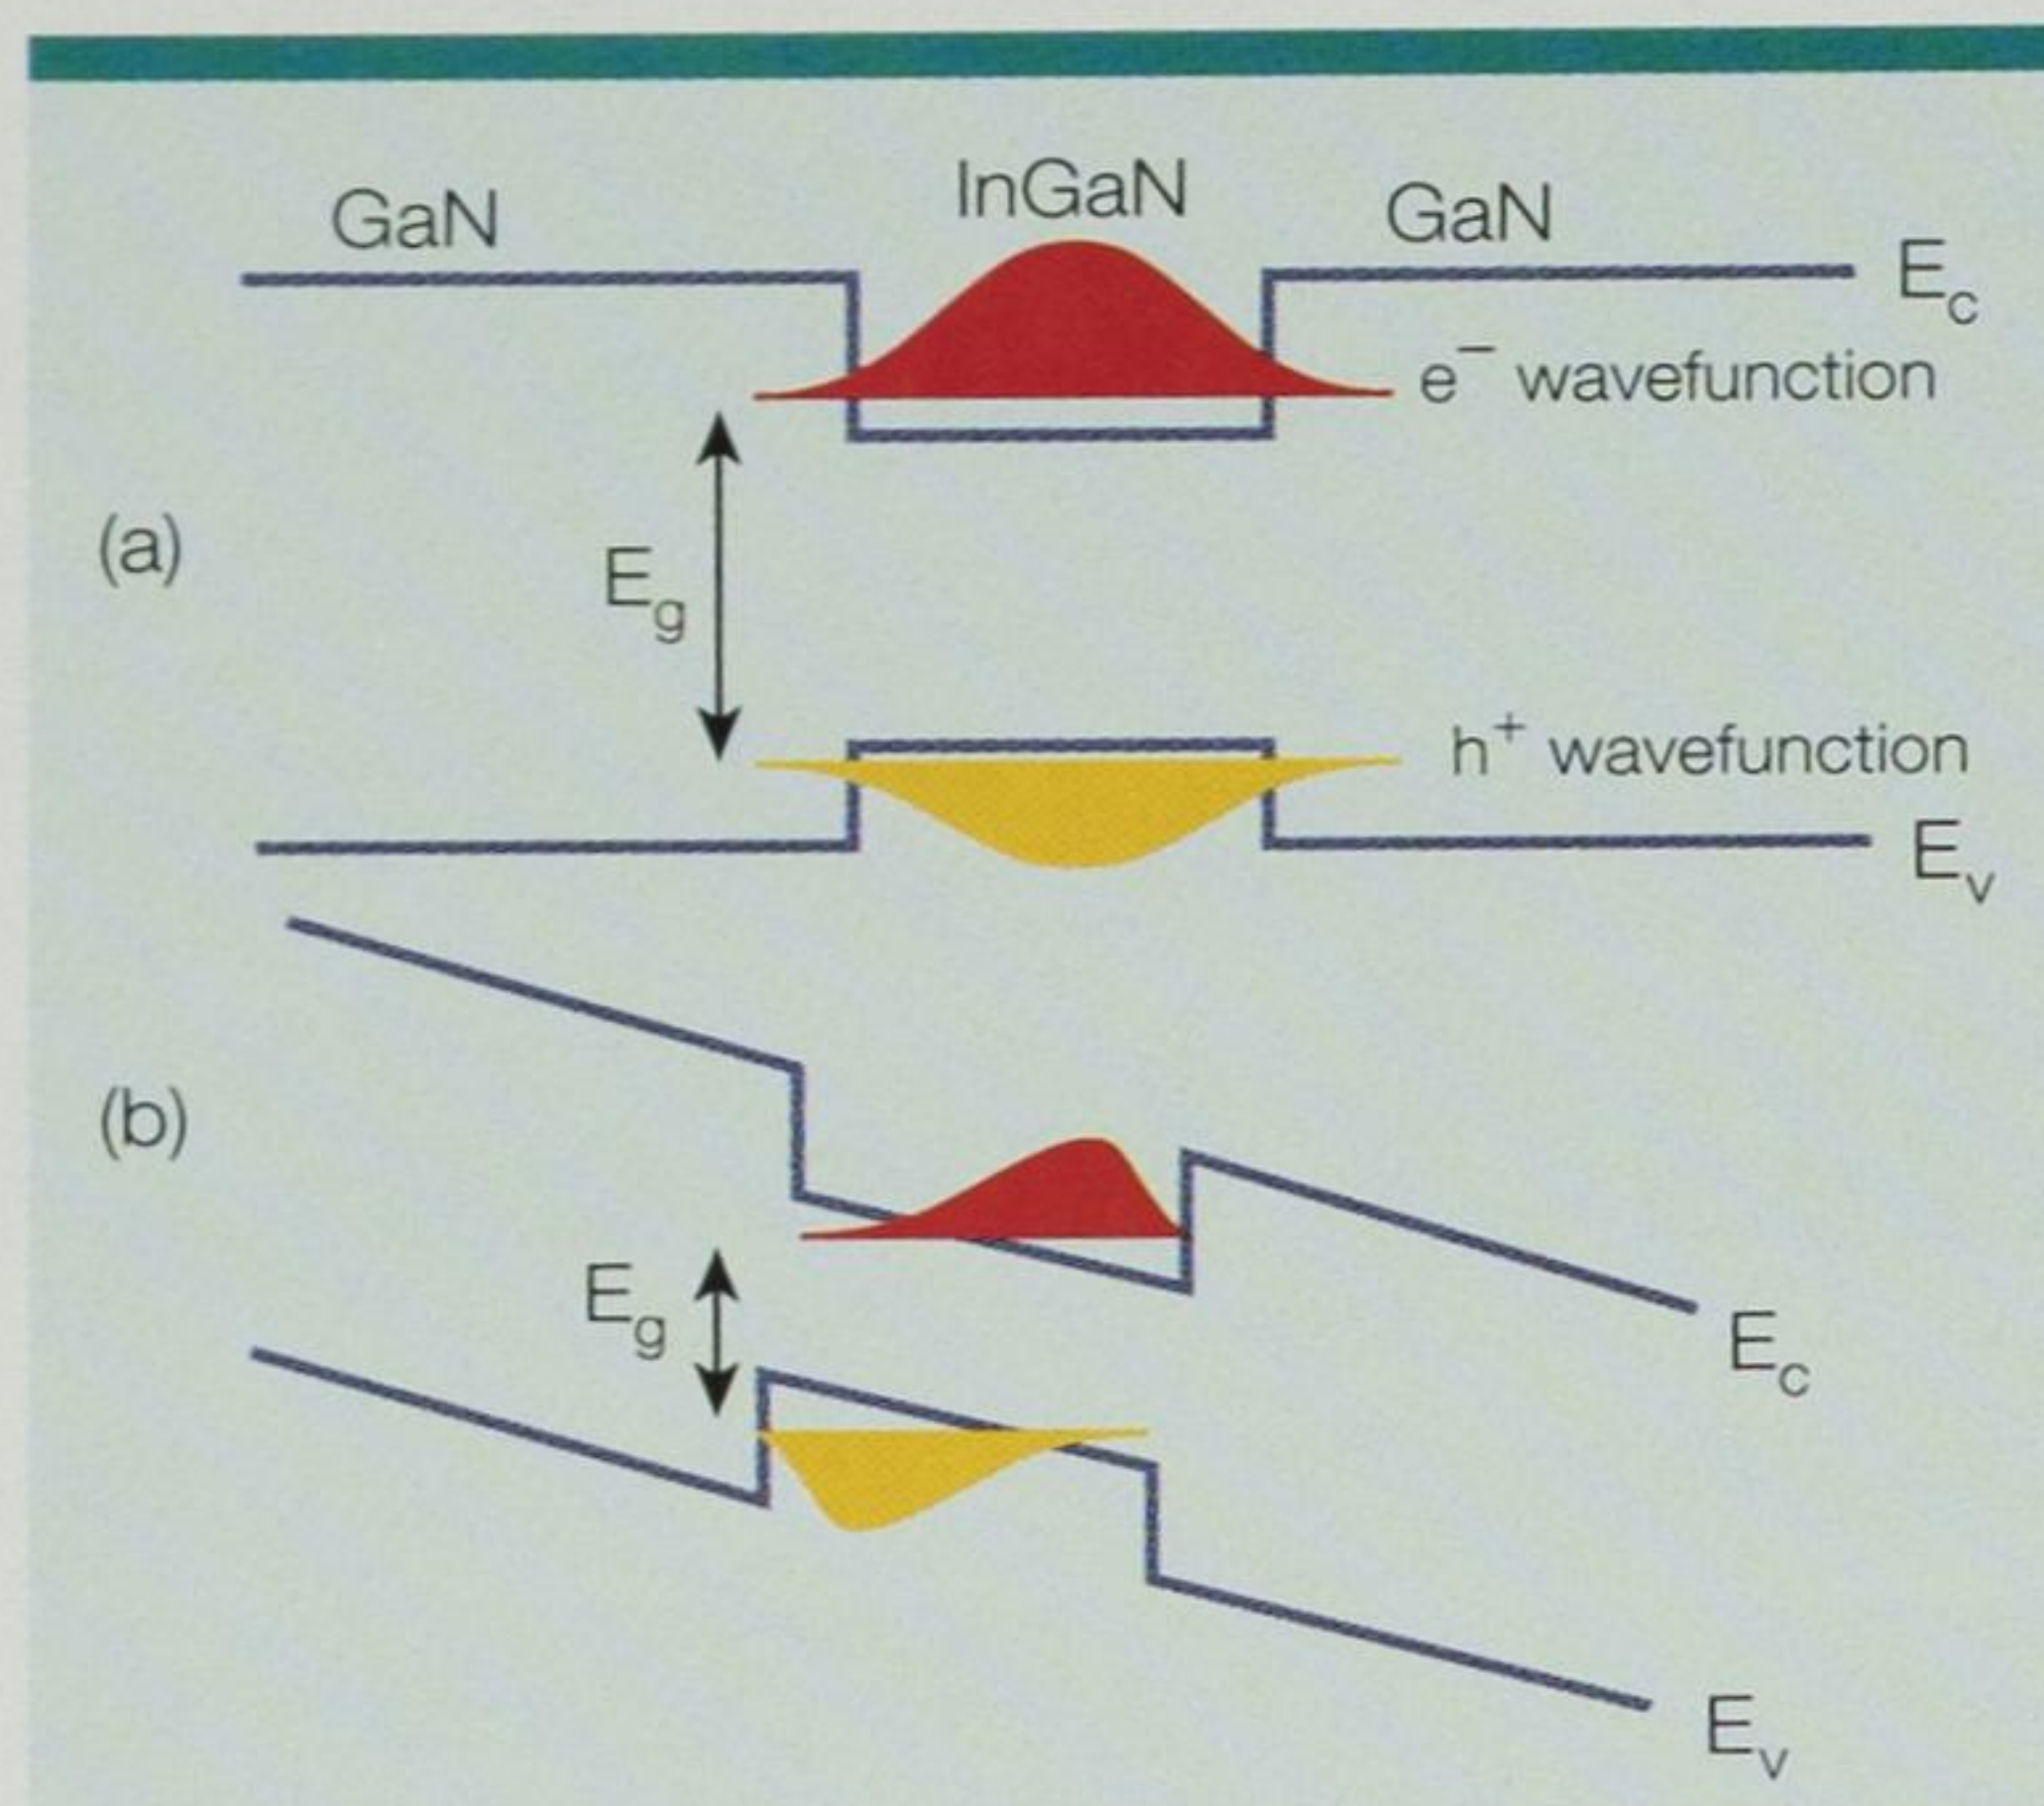


Fig. 3. Non-piezoelectric (a) and piezoelectric (b) InGaN QW. The band bending in (b) gives rise to the QCSE, which causes the emission wavelength to shift.

There are a number of lasers currently available for use in wide-bandgap material characterization, and it is important to match the correct laser with the right application.

sity. Consequently the wavelength shift is also reduced, giving a more accurate comparison between PL and EL measurements.

Dominant wavelength

A key issue for manufacturers of LEDs for displays, indicator lights and general lighting applications is the colour of the LED. The peak wavelength determined using a CCD detector is different to the dominant wavelength seen by the eye, due to their different spectral responses. The dominant wavelength from the measured PL spectrum can be calculated by using a chromaticity (CIE) diagram. When a straight line is drawn from a reference point (usually $x=0.333$ and $y=0.333$) and the measured colour CIE xy co-ordinate, the intersection with the boundary of the CIE diagram is defined as the dominant wavelength. The distance between these co-ordi-

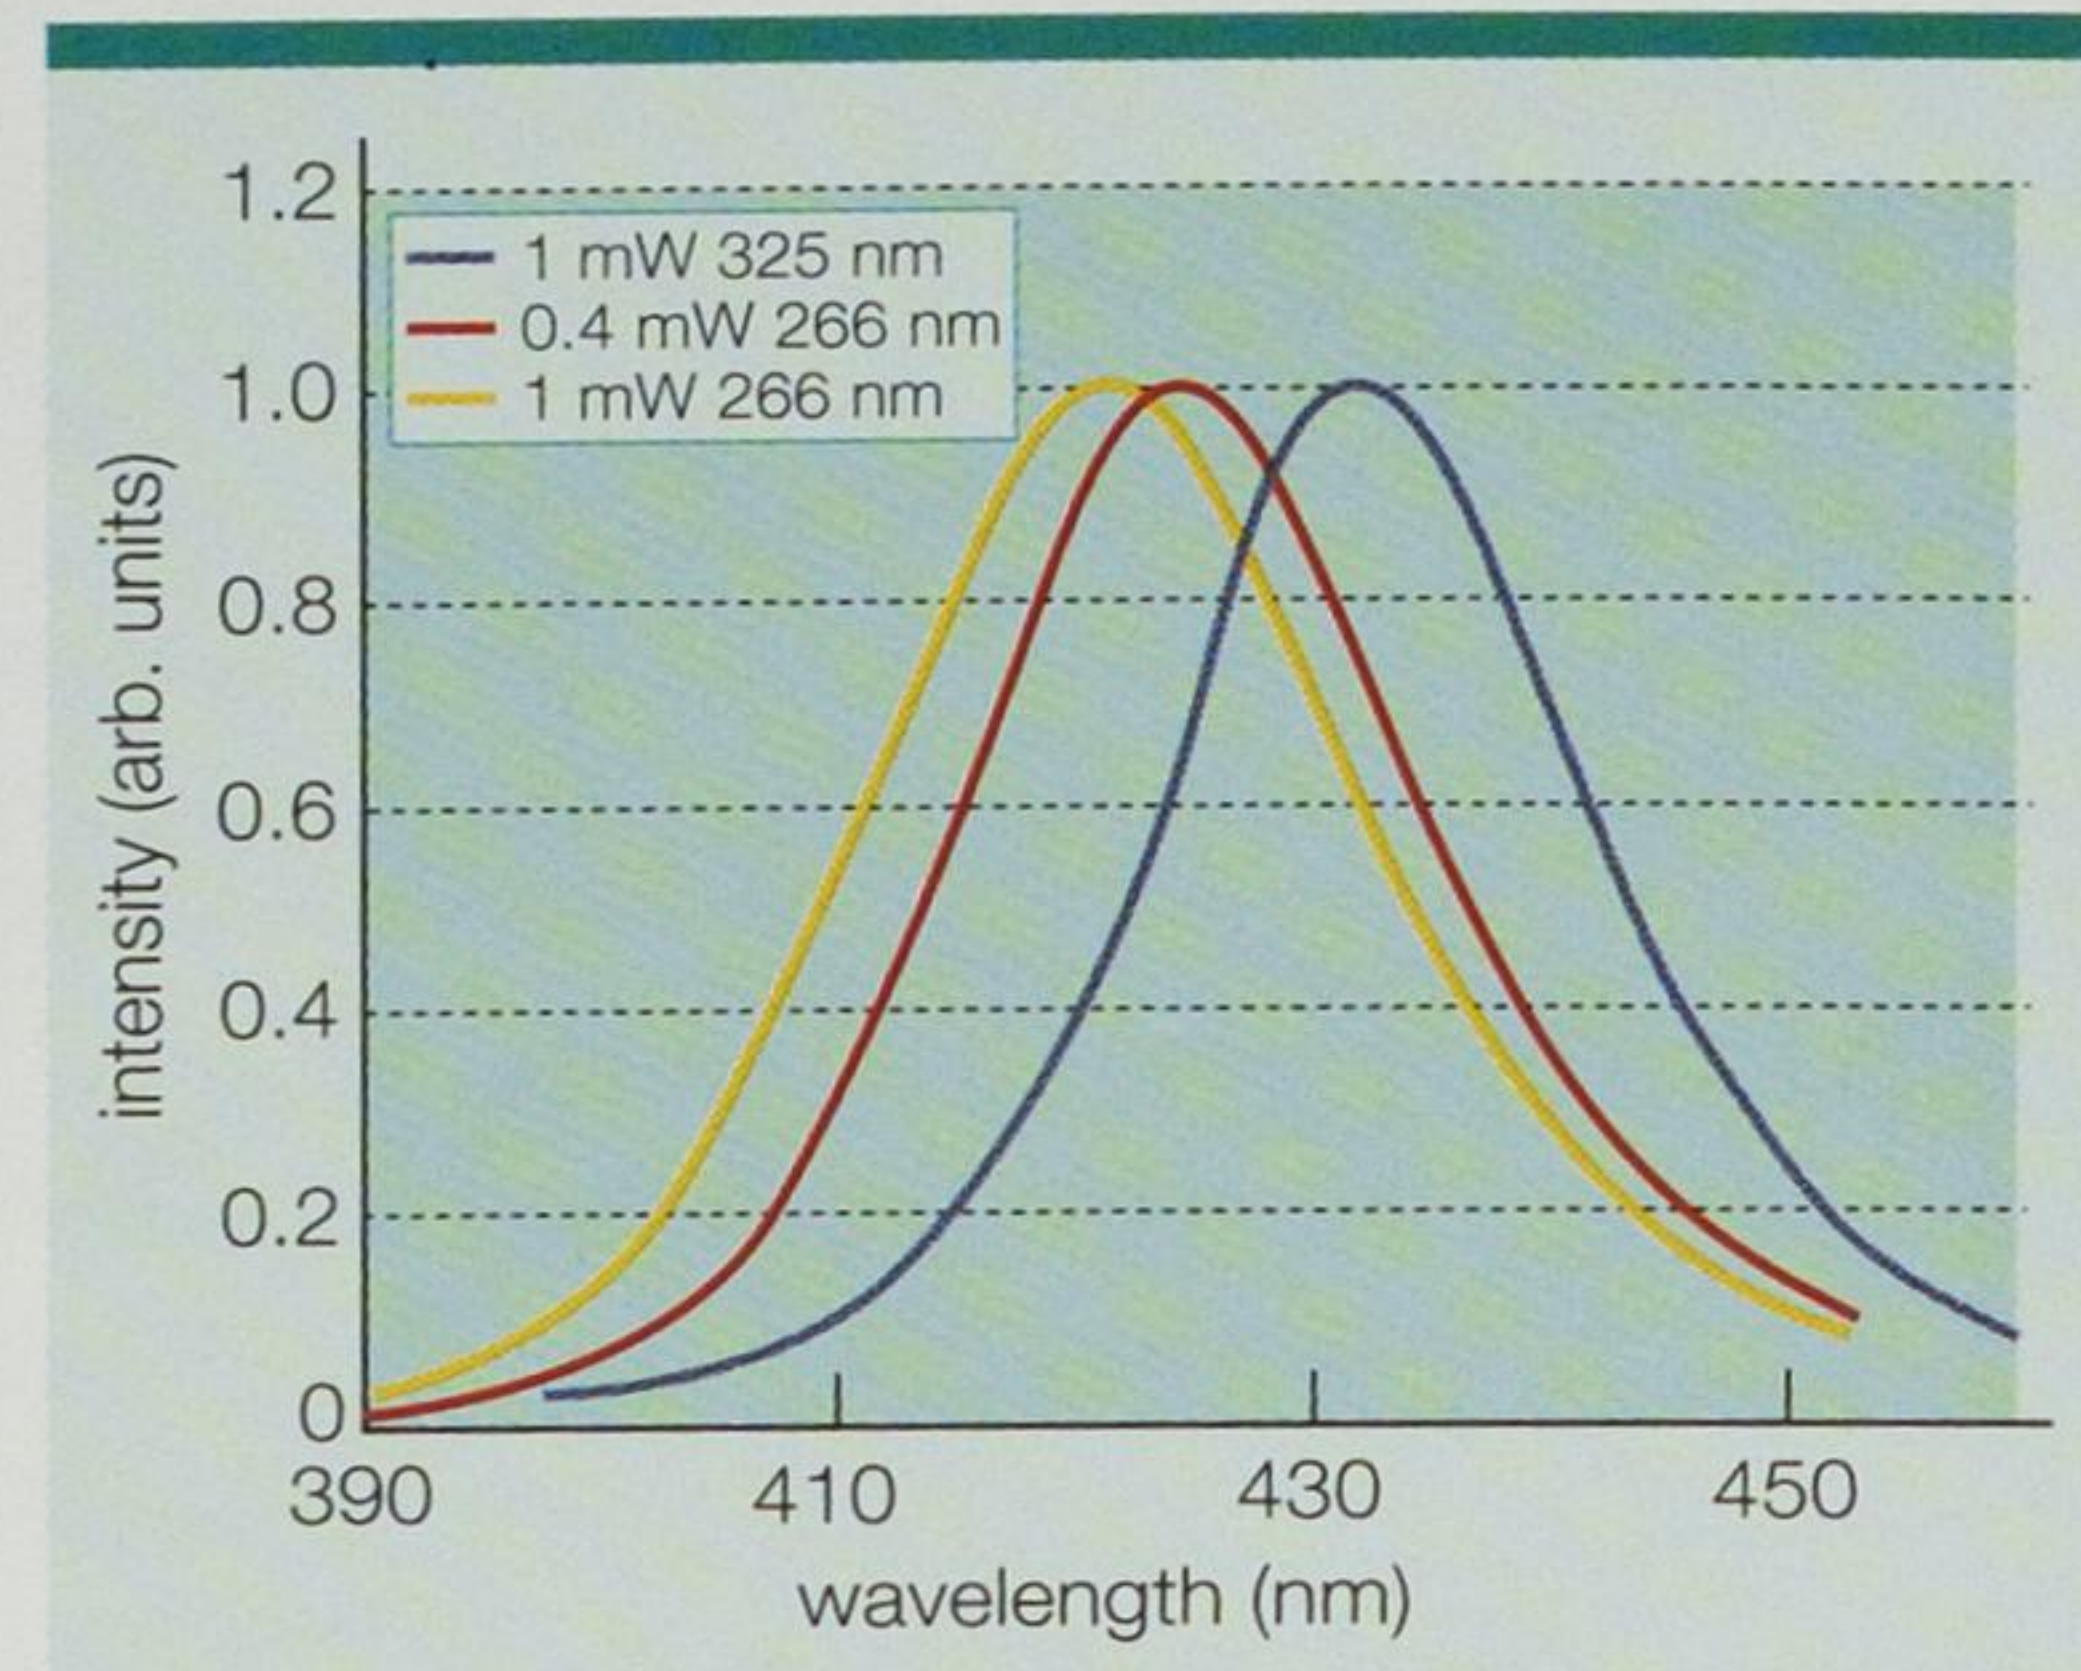


Fig. 4. PL comparison of an InGa_xN sample using QS 266 nm and CW 325 nm lasers. As the power density of the QS 266 nm laser is reduced, there is a shift to a longer wavelength emission.

nates and the dominant wavelength on the diagram is a measure of saturation, which gives an idea of how pure the PL is. Accent's Accucolor software enables the colour of the LED to be determined by calculating the dominant wavelength and saturation on an LED wafer prior to device processing. In figure 2, there is a difference of 11 nm between the measured peak wavelength of the PL curve and the dominant wavelength (432.8 nm), calculated from a CIE diagram, which would be seen by the eye.

Quantum confined Stark effect

InGa_xN/GaN and AlGa_xN/GaN MQW structures can exhibit large piezoelectric polarization due to the lattice mismatch between InGa_xN/AlGa_xN and GaN. This polarization results in large internal electric fields. In figure 3, the band energy diagram and electron/hole wavefunctions are shown for an InGa_xN QW for the non-piezoelectric (a) and piezoelectric (b) situations. Wurtzite QW structures can also exhibit a spontaneous polarization, even without strain, due to the difference in polarization across the heterointerface, which also causes an internal electric field. The band bending which occurs as a result of the piezoelectric and spontaneous fields is known as the QCSE. As a consequence of the QCSE, the energy gap narrows and the wave-function overlap is reduced, resulting in a shift of the emission wavelength from the QWs, weaker PL emis-

Sign up for our free weekly e-mail NewsAlert service at www.compoundsemiconductor.net/articles/news

sion and peak broadening (Nakamura 1999).

Using a QS 266 nm laser, which has a high excitation density, results in band-filling of the localized states and photogenerated carriers, which screen the piezoelectric and spontaneous fields within the QW. The effect of the QCSE is therefore reduced, and the emission peak wavelength shift and the FWHM of the peak are decreased.

The number of QWs and their thicknesses have a strong influence on the optical properties of AlGaIn/GaN and InGaIn/GaN QW structures. The PL of such structures requires a high laser power density to carefully characterize their output spectrum and reduce the impact of the QCSE. A shift of 10 nm to a shorter wavelength is seen in figure 4 when comparing the PL obtained for an InGaIn sample using QS 266 nm and CW 325 nm lasers.

Indirect materials

Indirect gap semiconductors such as SiC have a very low PL efficiencies, and therefore require high excitation densities. Integrated intensity maps can be used as a quantitative

measure of the quality of epitaxial growth. Figure 5 shows an integrated PL map (obtained with a QS 266 nm laser) of a SiC wafer, showing defects that occurred during growth. The white line marks a 3 mm edge exclusion zone. Due to the low PL efficiency of SiC, these defects would be difficult to observe using a lower power density laser.

Conclusion

There are a number of lasers currently available for use in wide-bandgap material characterization, and it is important to match the correct laser with the right application. AlInGaIn and other wide-bandgap materials require high-energy excitation for their PL characterization. High power density is required to increase PL for indirect semiconductors and structures with absorbing layers, and is also required to overcome QCSE and band-tailing effects in InGaIn/GaN QWs. Stokes shifting can also be reduced to give more accurate PL results using a high-powered laser. All of the above requirements are met using a QS 266 nm laser.

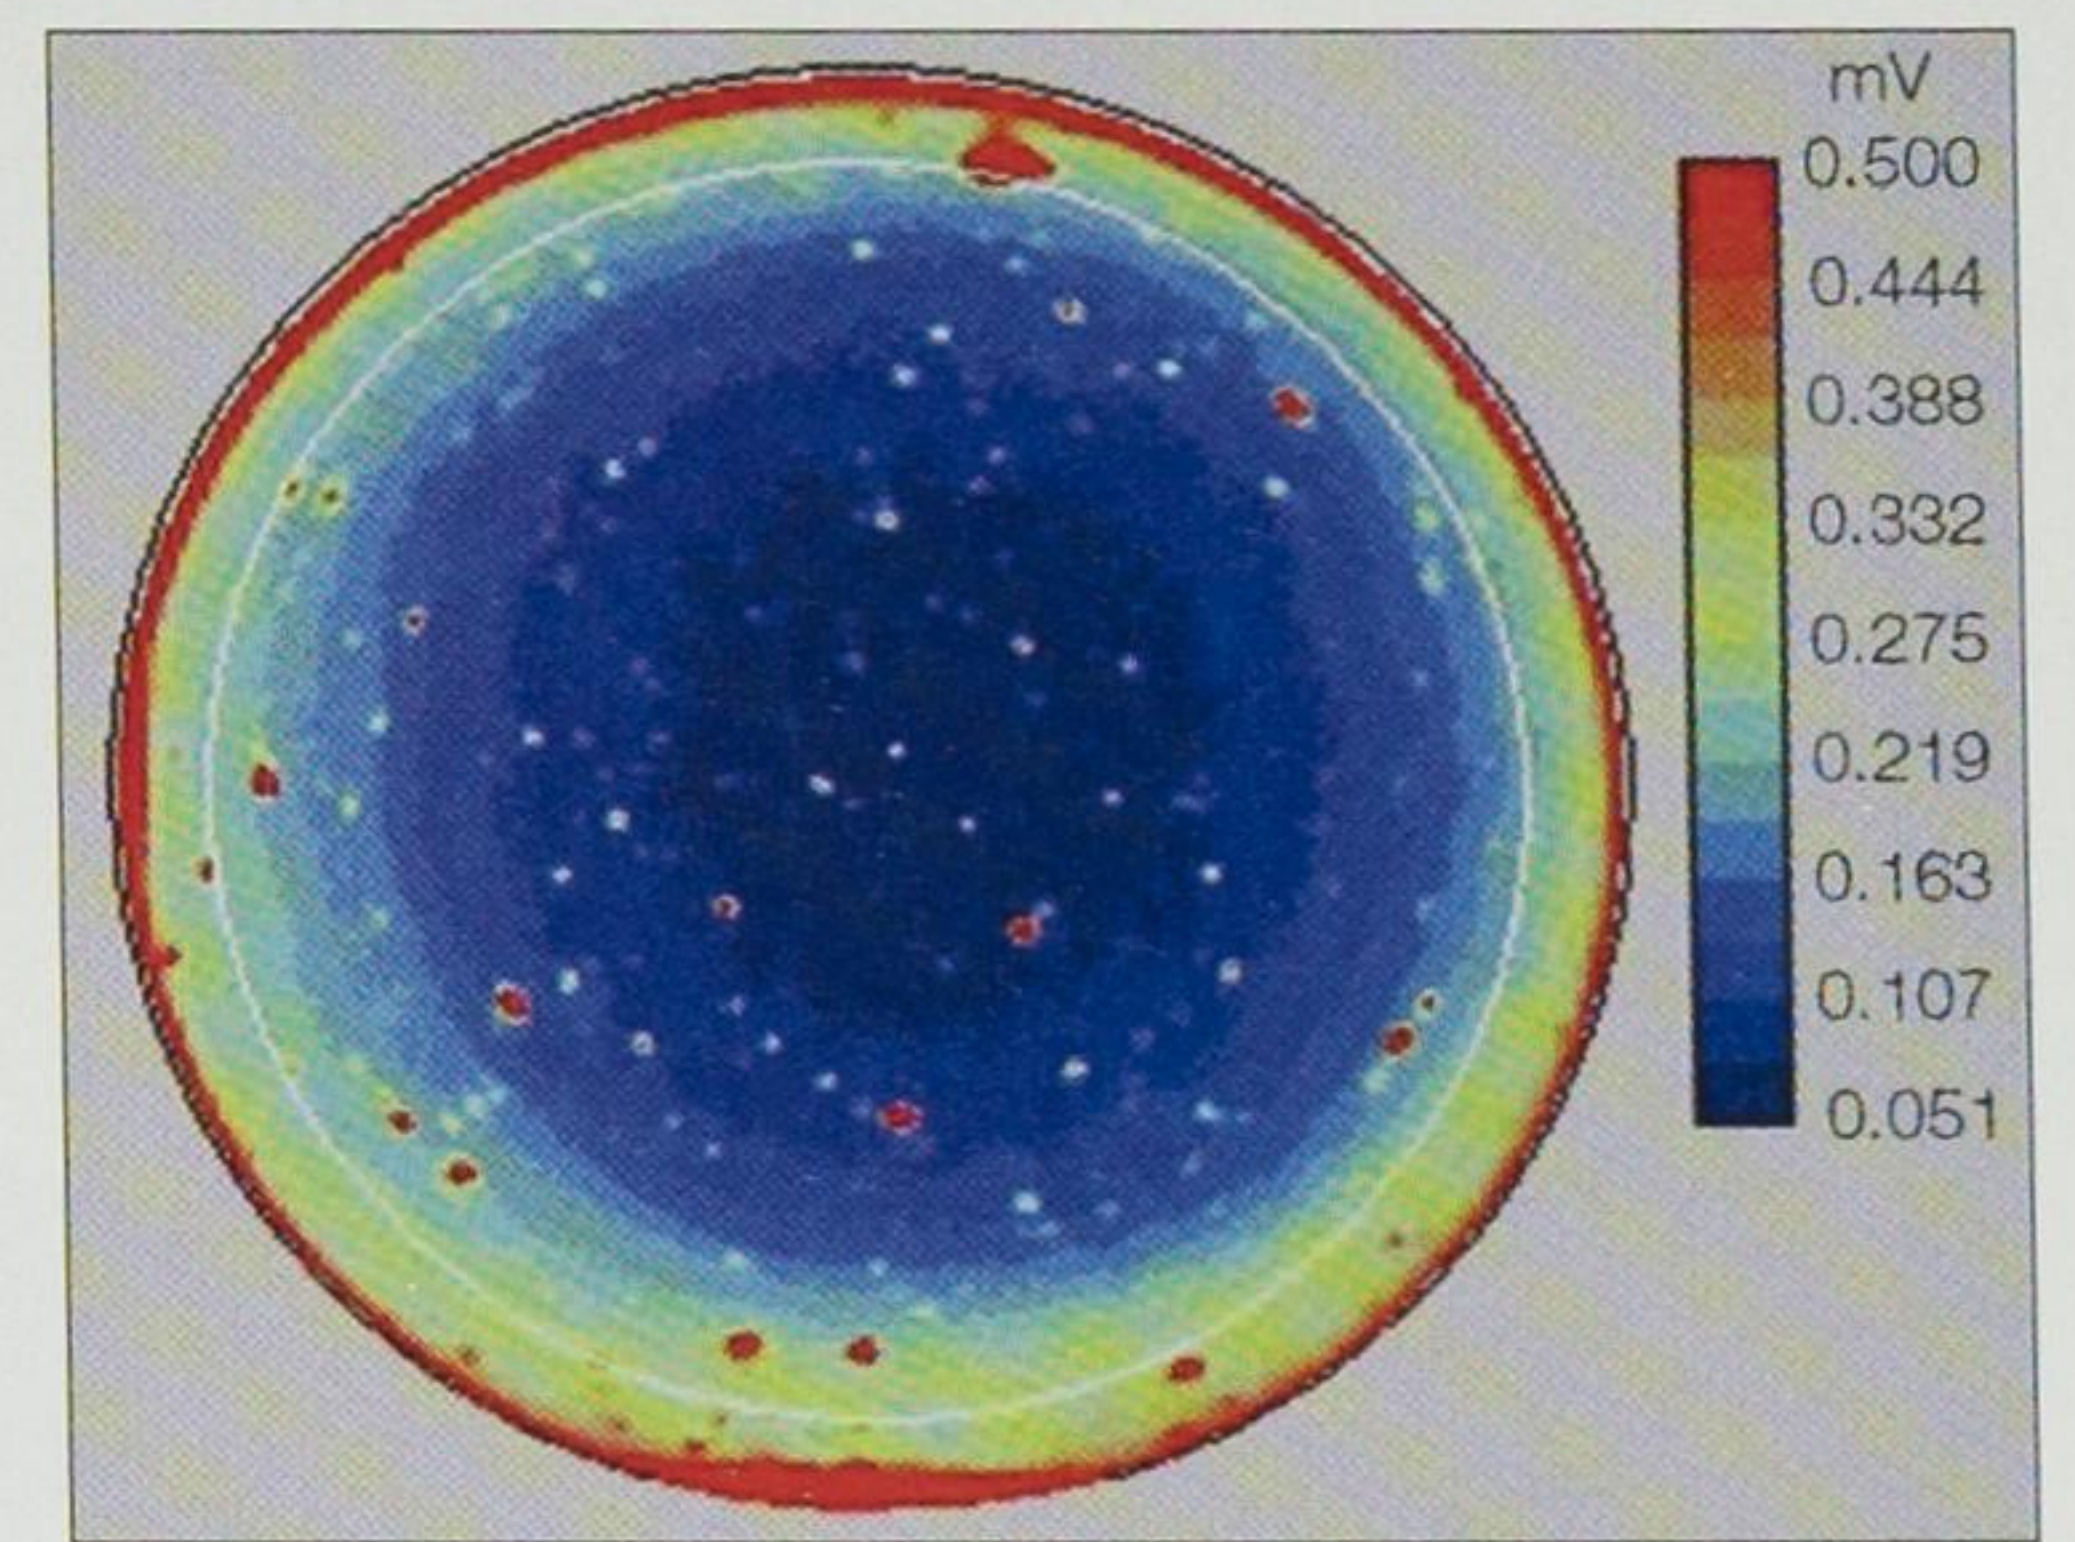


Fig. 5. PL intensity map of a SiC wafer obtained using Accent RPM 2000.

Further reading

S Nakamura (ed.) 1999 *Introduction to Nitride Semiconductor Blue Lasers and LEDs* (Taylor & Francis, London).

Colm Mac Mahon, Shouyin Wang, Clive Meaton, Muriel de la Fargue and Dale Page are with Accent Optical Technologies, Hemel Hempstead, UK. E-mail cmacmahon@accentopto.com.

Bavarian High Tech

III/V-Reclaim

GaAs
InP

The Cheapest Way to Excellent Quality.

III/V-Reclaim

Werkstraße 13
84513 Töging / Germany
Telefon: +(49) 8631-394777
Telefax: +(49) 8631-394778
E-Mail: Reclaim@t-online.de
Internet: www.35reclaim.de

- We recycle your GaAs and InP wafers (all formats and sizes)
- One and double side polished wafers
- Best surface quality for direct use in Epitaxy

- Backside thinning of fully structured wafers
- Thin wafers (100 µm)
- Single wafer processing possible
- We buy used wafers and sell recycled wafers

**Leading-edge XRF and XRD solutions
for the semiconductor industry**

Designing and building leading-edge X-ray metrology solutions has always been our focus, and we remain committed to serving the market with innovative technology for determining structural characteristics, composition and purity of materials.

Our comprehensive range of X-ray diffraction (XRD) and X-ray fluorescence (XRF) instruments can help you attain the highest levels of quality control and process efficiency.

The spectrum of metrology solutions covers the most demanding applications in the semiconductor industry, including copper metallization, SiGe, GaAs, low-k dielectrics, high-k dielectrics, Silicon-On-Insulator (SOI), ARC and extremely thin films.

We offer you upgradeable solutions for R&D, pilot runs and high-volume production, all backed up by global service and customer support.

Experience the benefits of high technology without the risks.

**PANALYTICAL:
X-RAY METROLOGY
SOLUTIONS**

PANalytical B.V.
Lelyweg 1, 7602 EA Almelo
The Netherlands
Tel: +31 546 534 444
Fax: +31 546 534 598
info@panalytical.com

www.panalytical.com

**A Spectrum
of X-ray
Metrology
Solutions**



PANalytical

BUYER'S GUIDE

CHARACTERIZATION

If you would like to advertise in future issues, contact Joanna Hook (tel: +44 117 930 1033, fax: +44 117 930 1178, e-mail: joanna.hook@iop.org).

Characterization Buyer's Guide

compoundsemiconductor.net

Company name	Web address	Telephone number	Contact information	Characterization services	Electron microscopes	X-ray diffraction equipment	X-ray fluorescence equipment	Electron spectroscopy equipment	Electron beam induced current	Focused ion beam equipment	In situ growth monitoring	Dual-beam (FIB/SEM) equipment	PL, Raman equipment	CV, Hall measuring equipment	Cathodoluminescence equipment
Accent Optical Technologies	www.accentopto.com	+44 1904 715500	Dale Page			•							•	•	
Bruker AXS	www.bruker-axs.com	+49 721 595 6063	Heiko Ress			•	•								
Cascade Scientific Ltd	www.cascade.co.uk	+44 1895 811194	Chris Mulcahy	•											
FEI Company	www.feicompany.com	+31 402 766225	B J Heijligers		•							•			
Gatan UK	www.gatan.com	+44 1865 253630	ukinfo@gatan.com					•	•						•
Lake Shore Cryotronics Inc	www.lakeshore.com	+1 614 891 2244	Vaden West	•										•	
LayTec GmbH	www.laytec.de	+49 30 318 08236	Elisabeth Steimetz	•							•				
PANalytical BV	www.panalytical.com	+31 546 534444	Folke Meijer			•	•								
QinetiQ	www.qinetiq.com	+44 1684 894280	ajpidduck@qinetiq.com	•							•				




LayTec
optical sensors for epitaxy

CCS MOCVD Systems

Your future...
is our business

- World leading supplier of MOCVD solutions
- Unique Close Coupled Showerhead (CCS) Technology
- Truly scalable reactor concept
- A range of Production and R&D systems available
- Low cost of ownership
- High yield
- Proven for a wide range of compound semiconductor materials
- Global service and support network

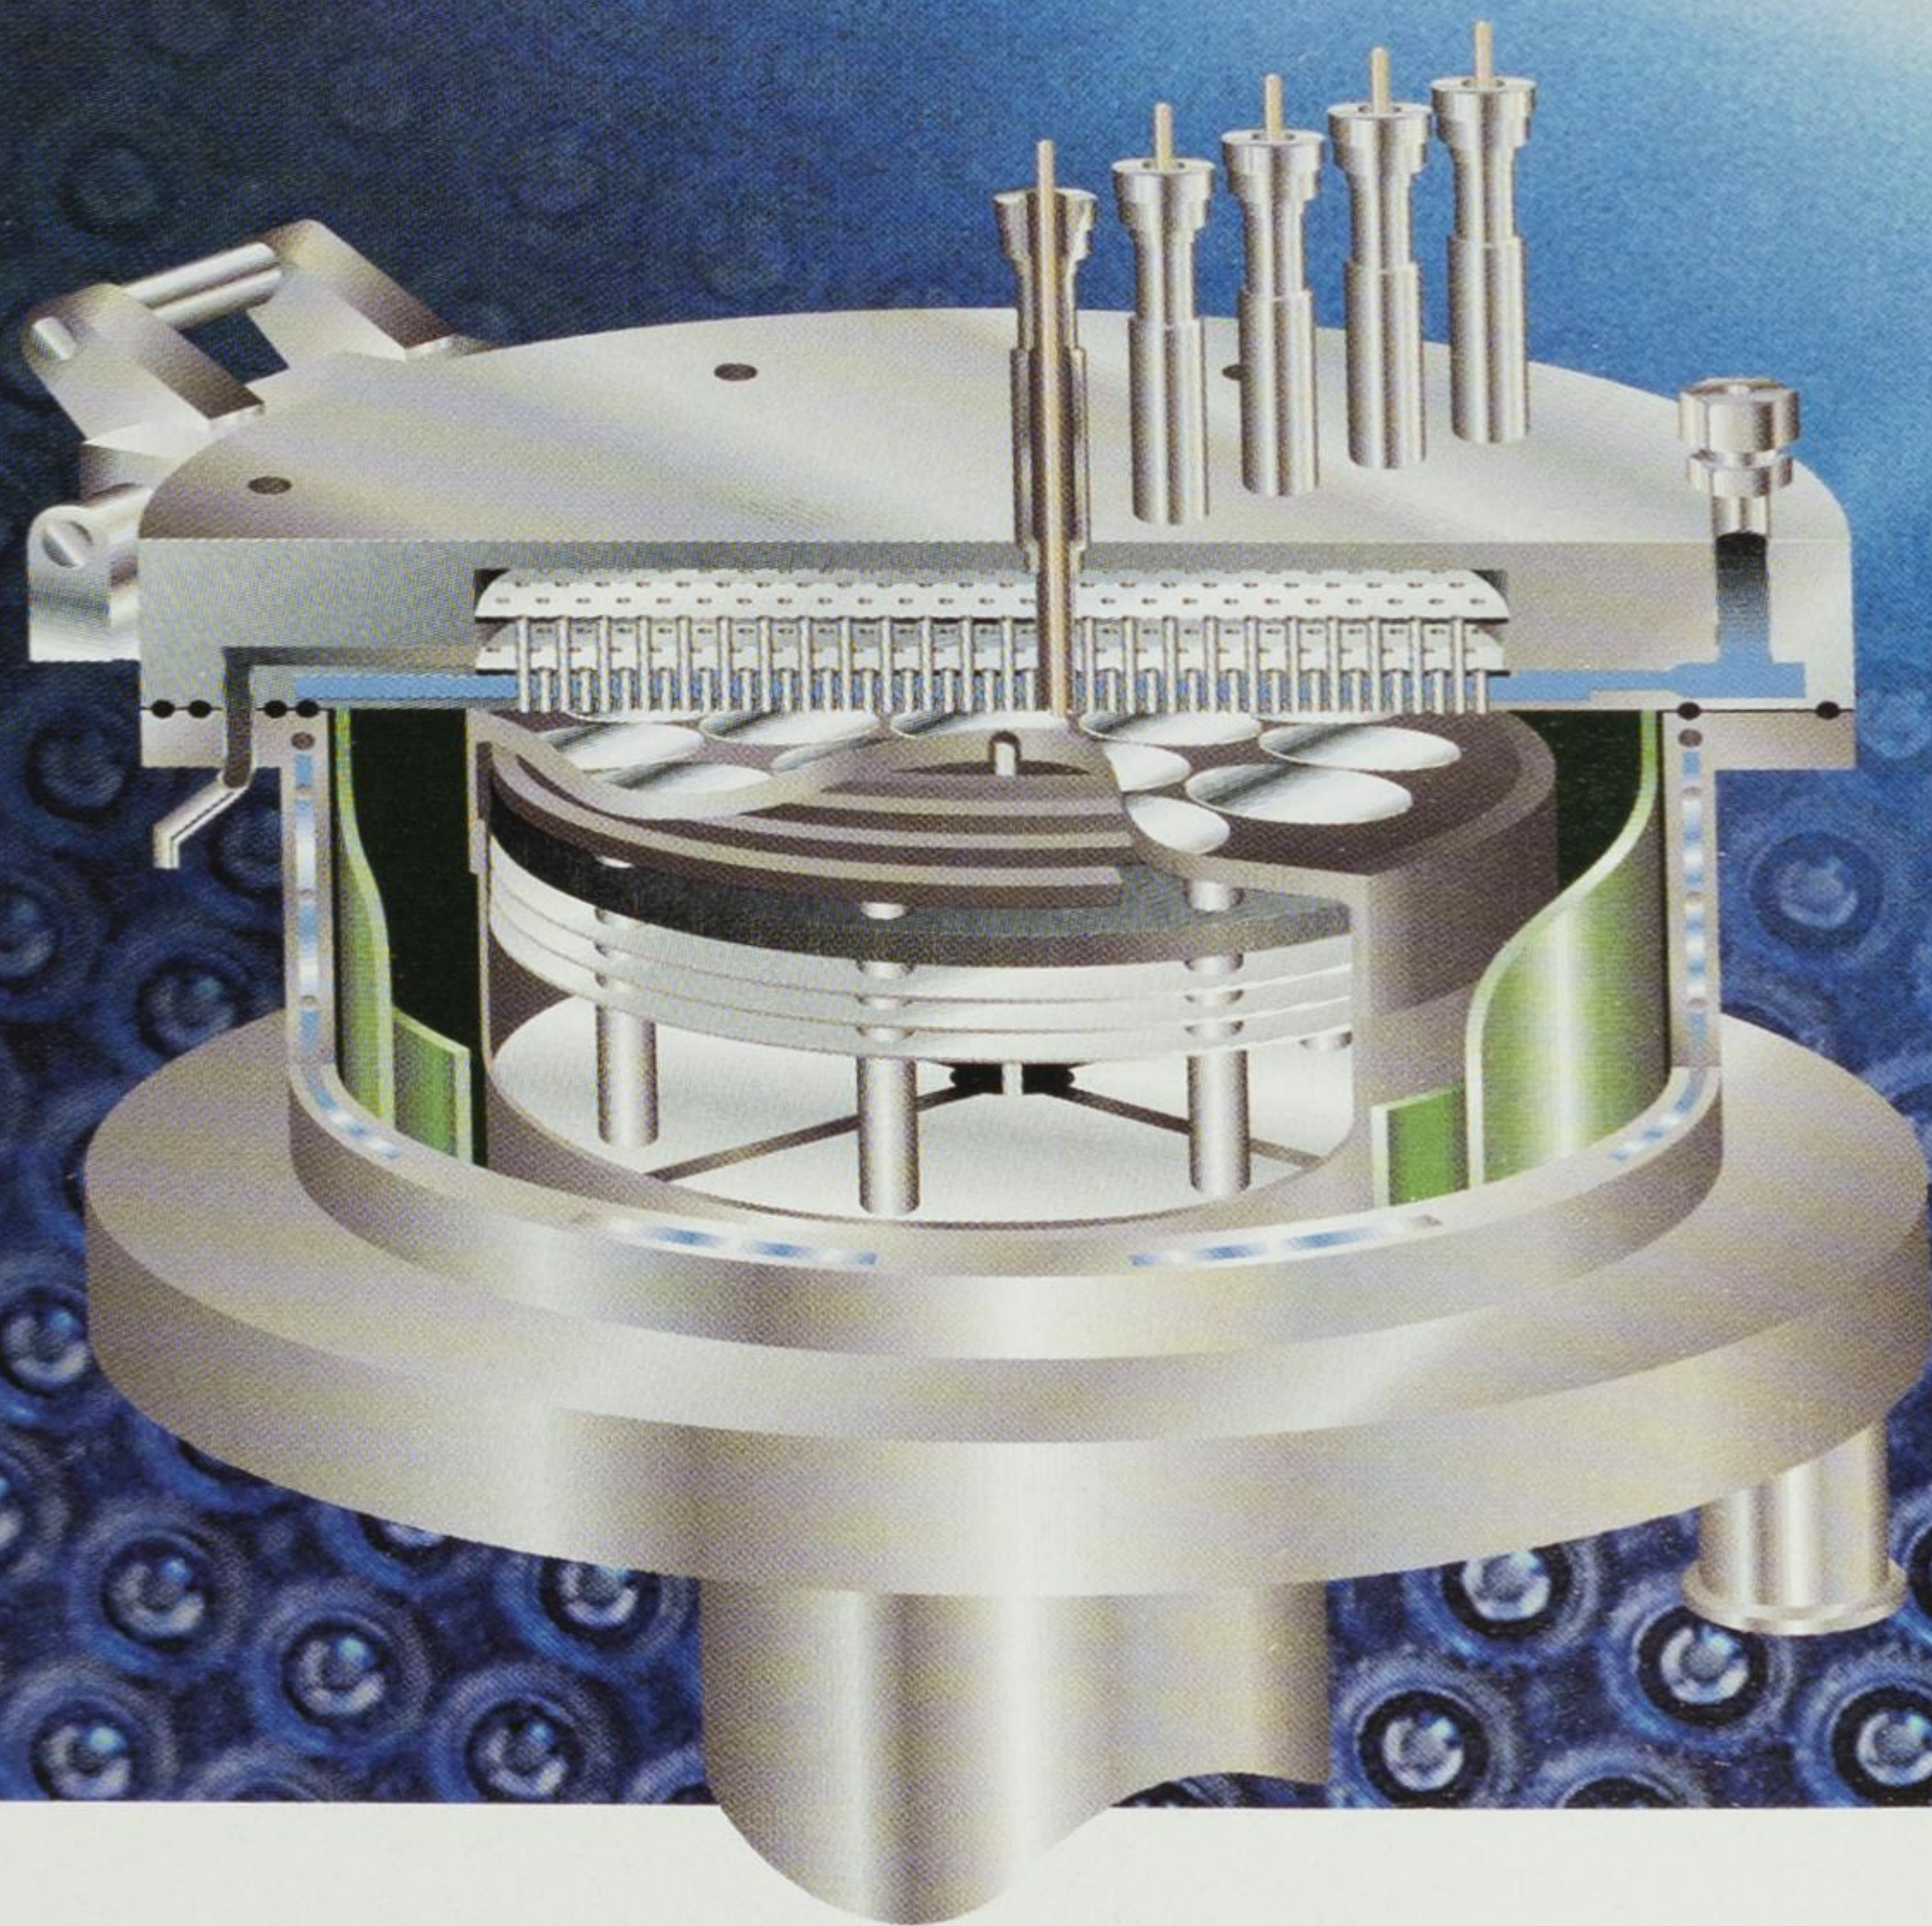

Thomas Swan Scientific Equipment Ltd

Anderson Road, Buckingway Business Park, Cambridge, CB4 5FQ. UK. Web: www.thomasswan.co.uk

Tel: +44 (0) 1223 519444 Fax: +44 (0) 1223 519888 email: sales@thomasswan.co.uk

A member of the AIXTRON group of companies



STEM provides the answers to some difficult questions

STEM is helping to reveal information about interfaces and diffusion during device processing that is almost impossible to determine using other techniques, write **Jia-Sheng Huang** and **Cathy Vartuli**.

Yield improvement, cycle-time reduction and failure analysis are key elements in microelectronic chip manufacturing. To achieve high-yield and low-cost manufacturing, materials characterization is indispensable. Although there are differences in the physics and design of III-V and silicon devices, the techniques used for materials characterization are similar. Examples of the techniques routinely used for III-V and silicon materials characterization include scanning electron microscopy (SEM), energy dispersive spectroscopy (EDS), transmission electron microscopy (TEM), Auger electron spectroscopy (AES), Rutherford backscattering spectrometry (RBS), secondary ion mass spectrometry (SIMS), X-ray diffraction and atomic force microscopy (Wolf *et al.*).

These analytical techniques cover a range of important characterization needs. However, as device dimensions continue to shrink, the need to rapidly evaluate the elemental distributions within thin films only nanometers thick has become increasingly challenging. Recently, a dedicated scanning transmission electron microscopy (STEM) system has been introduced. The Hitachi HD-2000 thin-film evaluation system operates at 200 kV and images using secondary electrons, transmitted electrons (bright field), scattered electrons (Z-contrast or dark field) and X-rays (EDS) (Hashimoto *et al.*). The use of cold field-emission coupled with its lens configuration, gives a spatial resolution of 0.24 nm in bright field. The collection angle for the EDS detector is larger than a conventional TEM, giving the STEM a 2.5 times higher sensitivity for

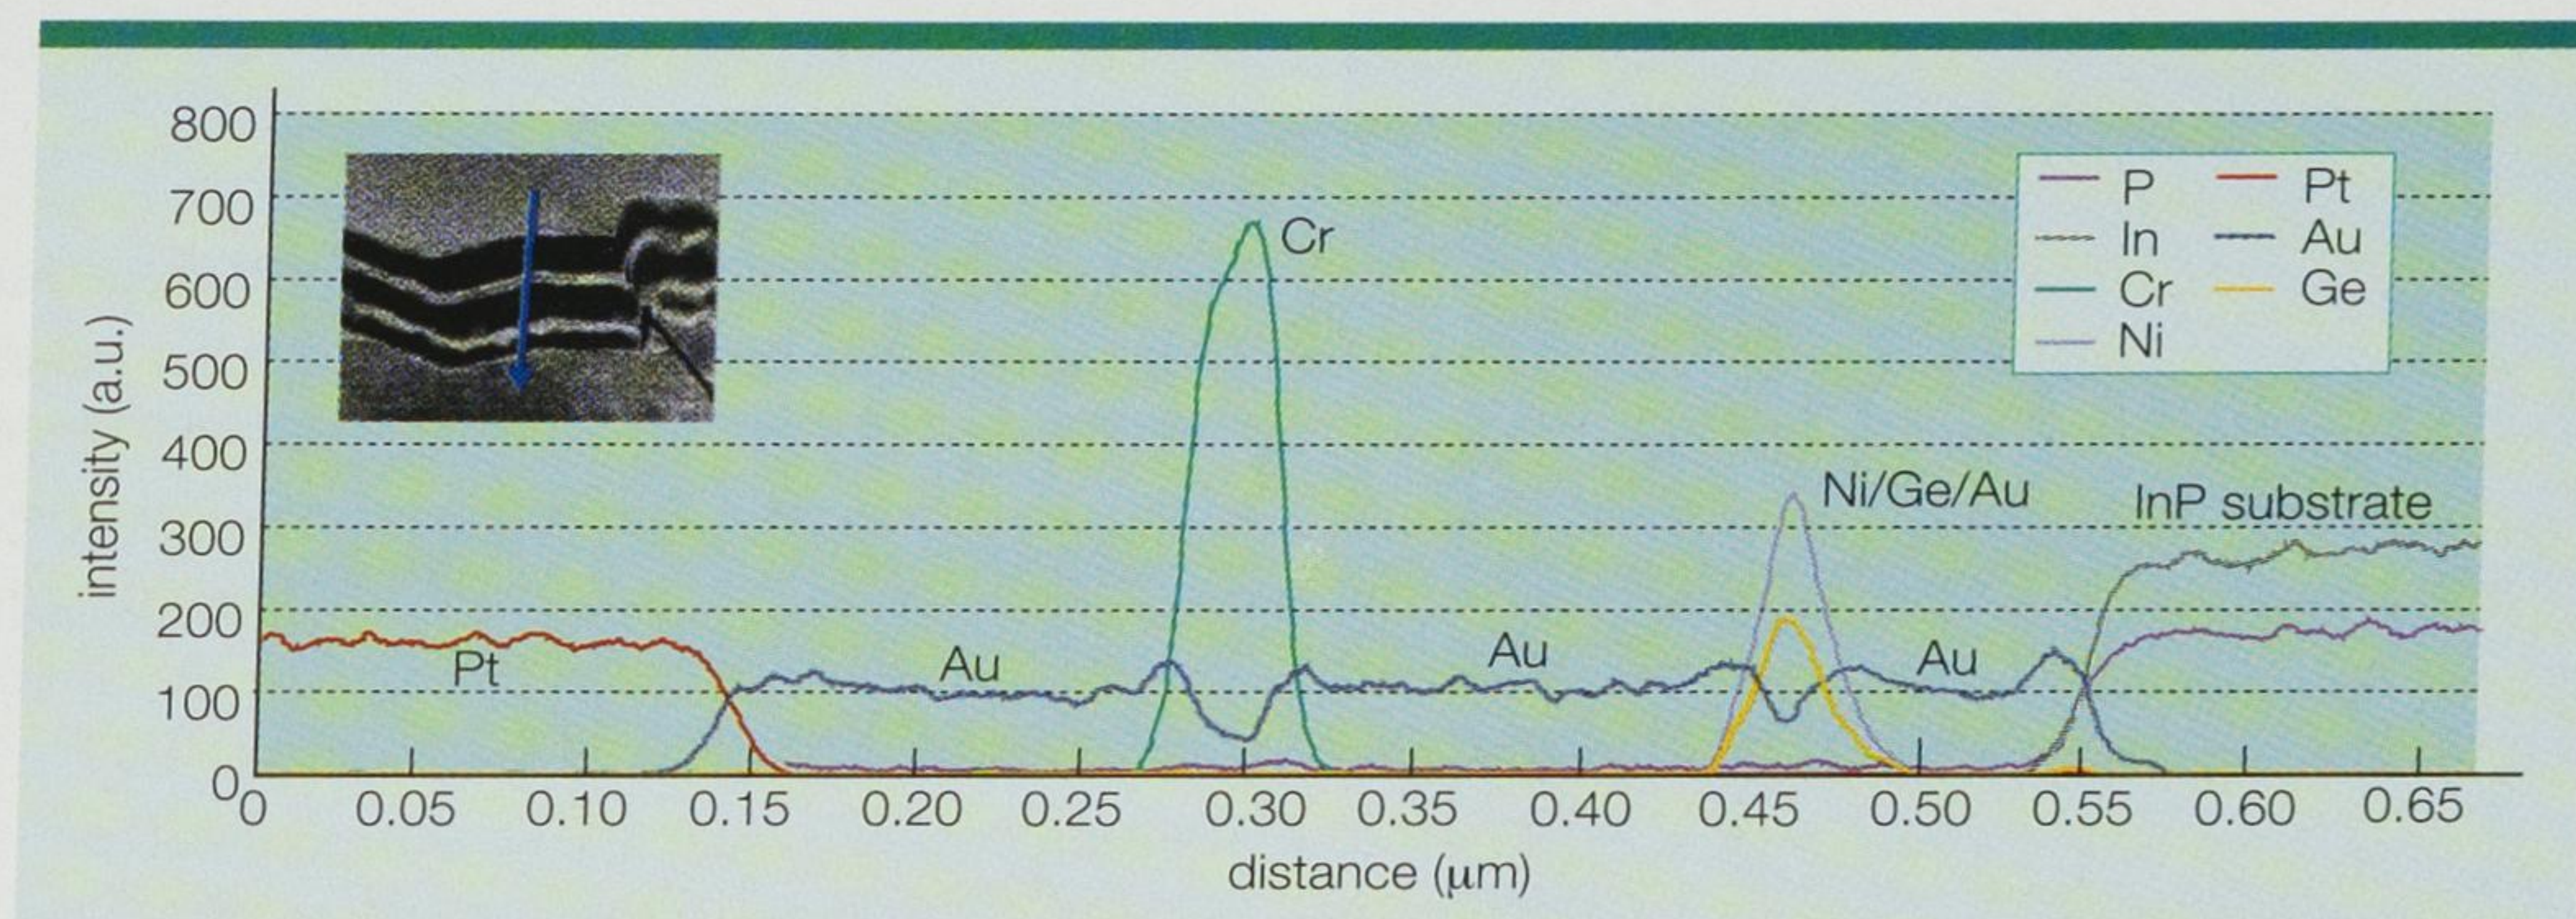


Fig. 1. The STEM spectra of a sample of n-InP/AuGe/Ni/Au/Cr/Au after alloying.

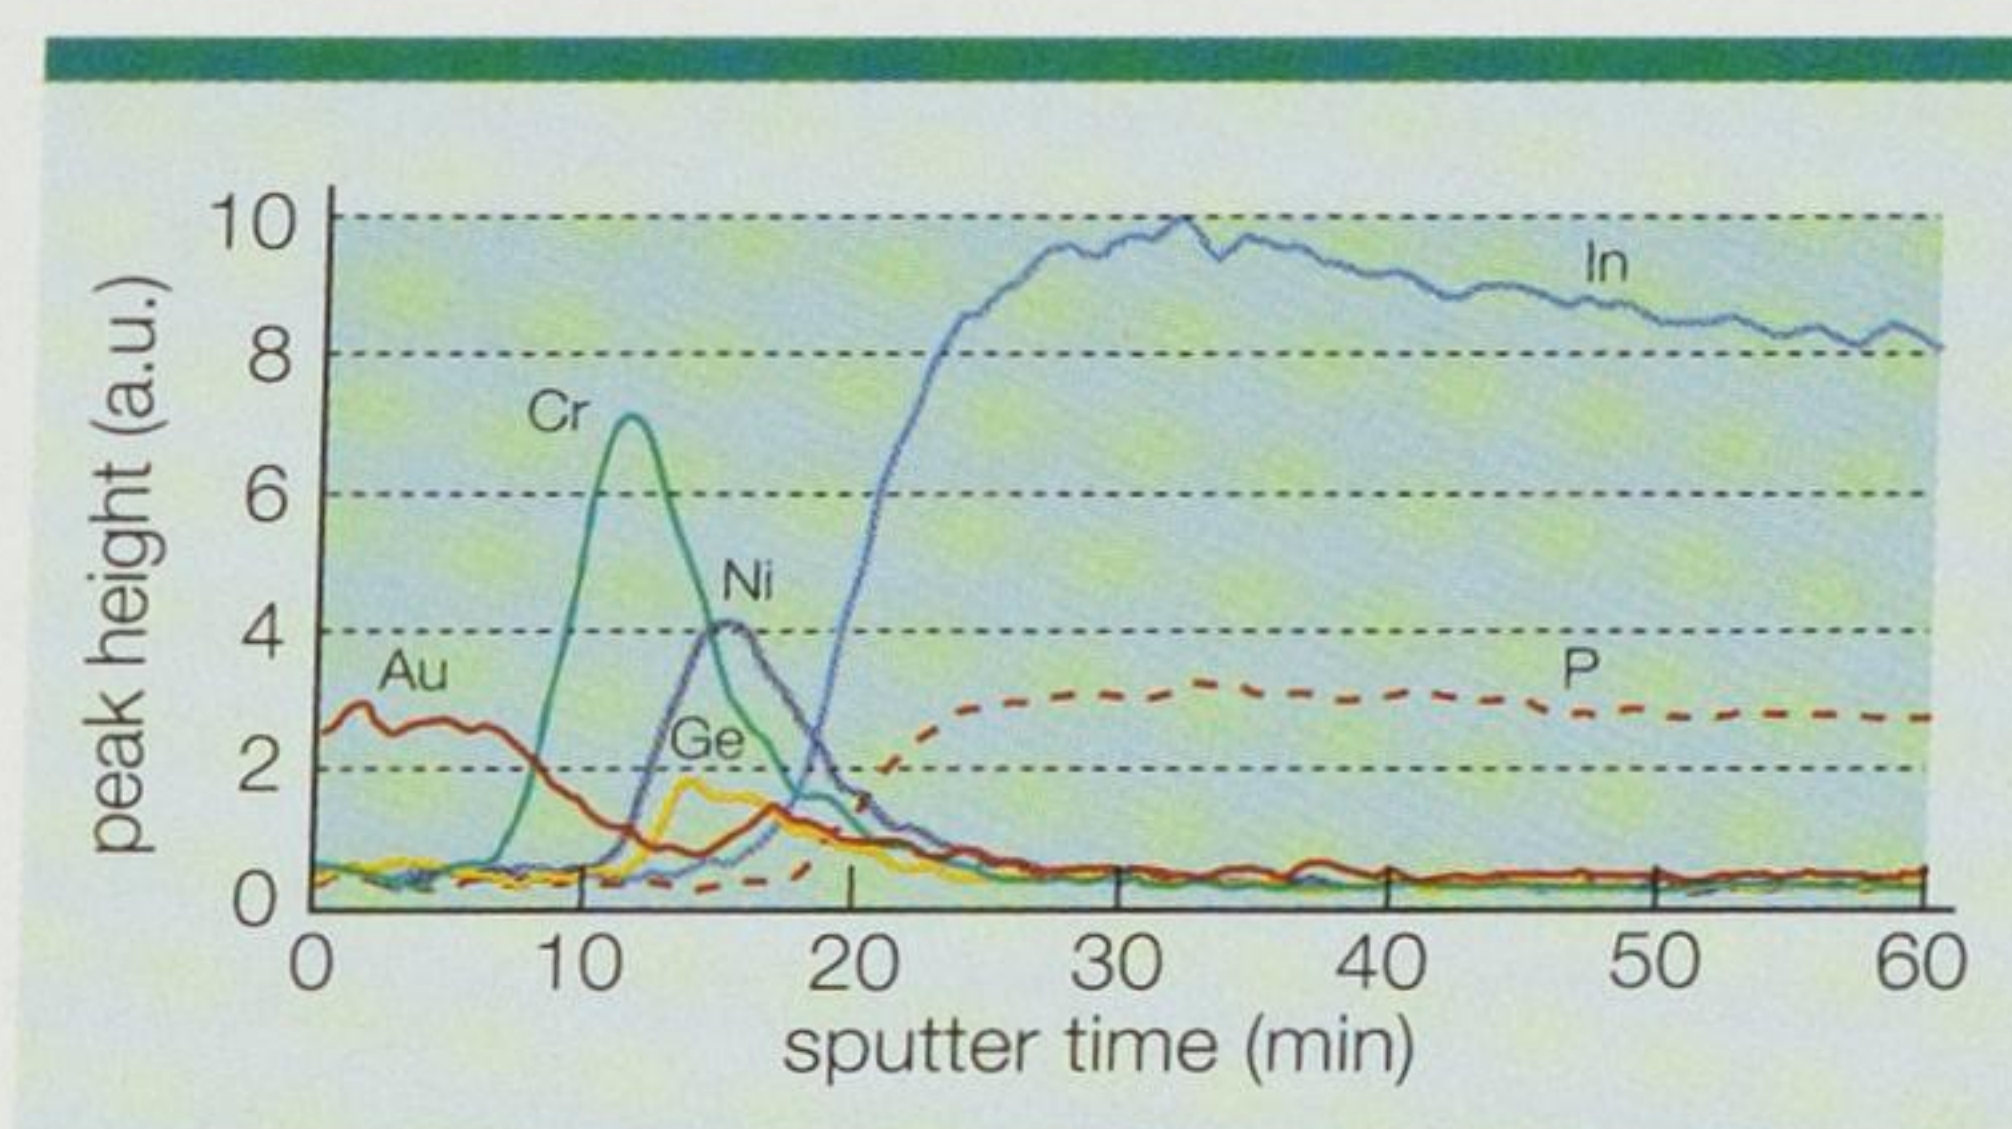


Fig. 2. AES depth profiles of a sample of n-InP/AuGe/Ni/Au/Cr/Au after alloying.

elemental analysis. The column setup allows samples too thick or rough for a traditional TEM to be evaluated, making sample preparation easier. The most powerful and unique feature of the STEM for microelectronic applications is its ability to rapidly provide high spatial resolution, high sensitivity, elemental mapping and concentration depth profiles.

The STEM technique has many applications in the characterization of III-V and silicon devices. STEM imaging can provide atomic or near-atomic spatial resolution for the study of quantum wells and dots, surfaces and interfaces, crystalline defects, grain boundary segregation and crystal tilts. Using EDS, electron energy loss spectroscopy (EELS), or Z-contrast (dark field) imaging, information about the chemical makeup of a sample or layers can be determined. Data on the sharpness of an interface, diffusion and the reaction of components can be gathered. One of the more pragmatic and alluring aspects is STEM's elemental concentration profiling for the study

of interfaces in III-V or silicon materials. In the STEM concentration profile, spatial and chemical information about layers nanometers thick, as well as diffusion distance and stoichiometry, can be clearly revealed.

Strengths and limitations

STEM EDS can provide a spatially and chemically accurate elemental profile. In comparison with the various other elemental profiling techniques, STEM perhaps offers the most accurate information about the layer thickness and diffusion distance.

For AES, *in situ* sputtering is necessary to study the depth profile of a sample. Information from the sample is gathered from the top 2 nm, making this technique extremely useful for analyzing thin surface layers. It is difficult to determine the layer thickness in concentration profiles with high precision, due to the material dependence of the sputtering rate and the ion beam induced mixing of the sample that artificially broadens otherwise sharp interfaces. In addition, volatile elements may be preferentially removed from the material during sputtering, producing a low AES reading. Finally, the ions used for sputtering can be implanted, giving an inaccurate signal.

For RBS, the depth profile is a result of all the superimposed backscattered ion signals from the elements encountered by the probing ions within the sample. This makes the correct deciphering of a raw RBS spectrum difficult. Determining the density of the materials analyzed is important for calculating

CHARACTERIZATION

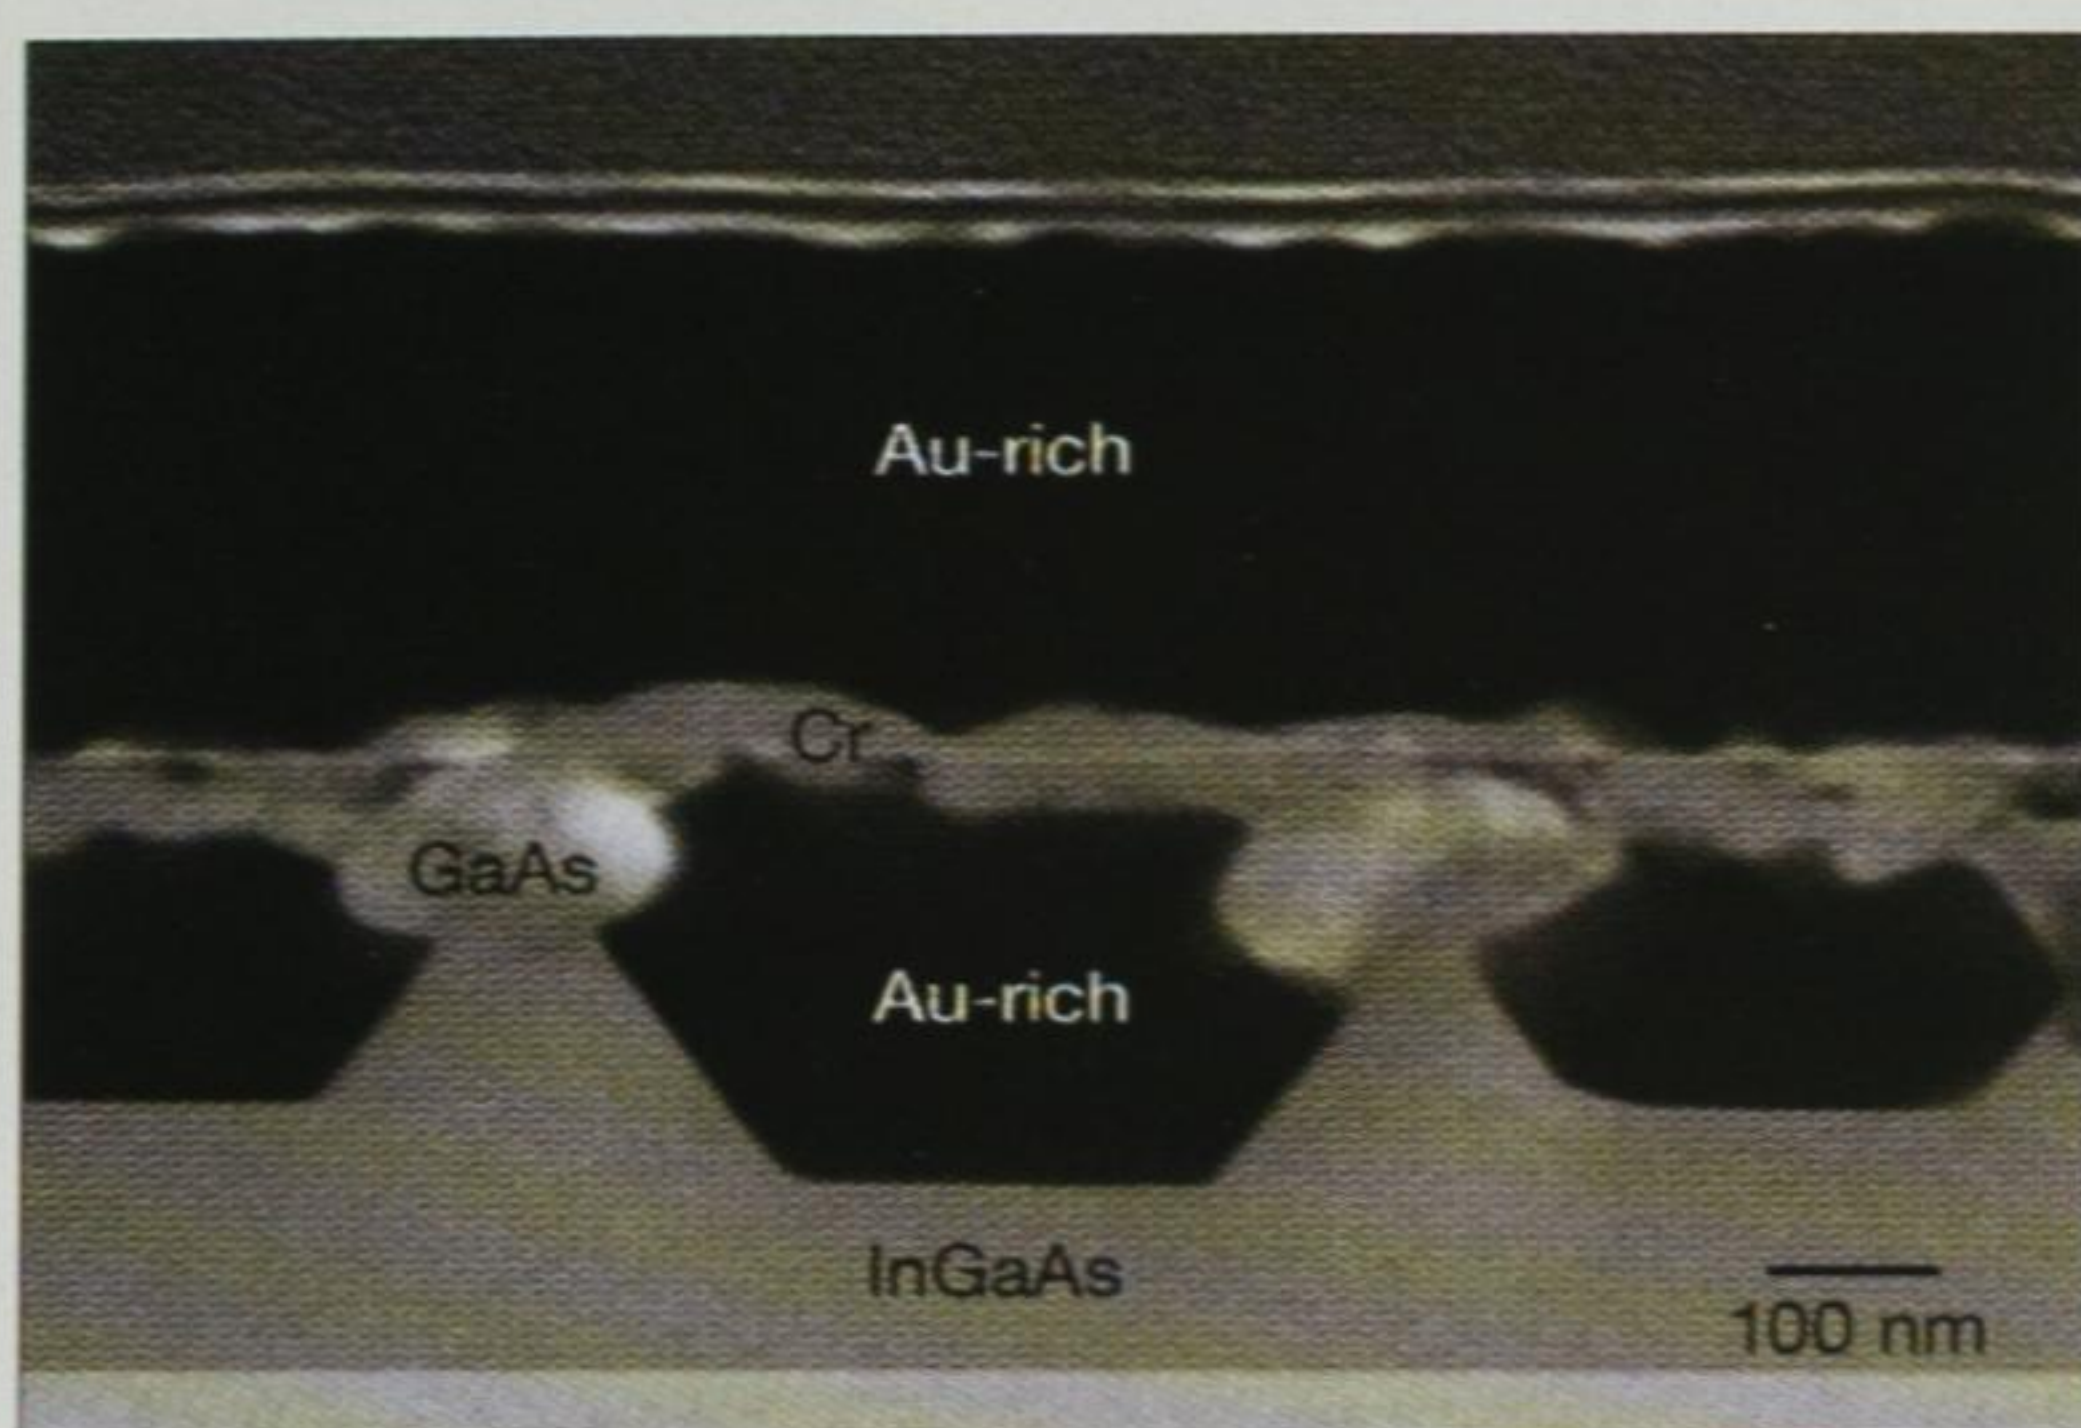


Fig. 3. An STEM bright-field image showing a sample of p-InP/p-InGaAs/Au/Zn/Au/Cr/Au after alloying at 430 °C.

accurate concentrations. While highly sensitive to low concentrations of an element, the large beam size makes the analysis of small areas of patterned wafers impossible.

SIMS quantification of the elemental depth profile at a metal/semiconductor interface is difficult since the secondary ion yield changes drastically when sputtering from a metal to a semiconductor. While this technique is much more sensitive to trace elements than the others discussed here, the large beam size precludes its use for small devices. As the technique involves sputtering, the same problems arise in SIMS as in AES, making it difficult to accurately measure the thickness and interface quality of multiple thin layers.

SEM EDS is a rapid and relatively easy to use technique. Because it uses electrons instead of ions the problems caused by sputtering are eliminated. Depth profiles are routinely examined by viewing the cross-section of a sample, and sample preparation artifacts can be minimized. This technique is limited, however, by low spatial and chemical resolution due to the large interaction volume of the electrons generating X-rays.

TEM is able to resolve layers on the atomic scale. Measurements obtained can be calibrated to lattice images, making them highly accurate. EDS and EELS are routinely used on this tool to quantitatively determine the elements present in a sample. The lens configuration of the tool limits the solid angle of signal collected from the sample to around 0.12 mrad, constraining the sensitivity of the technique.

STEM EDS has advantages that allow it to overcome many of the challenges mentioned above. The spatial resolution of the tool is close to that of a TEM. The STEM uses a spot beam that steps across the sample to image, so EDS linescans and maps are easy to acquire. In addition, the lens configuration of this technique allows the EDS detector to be much

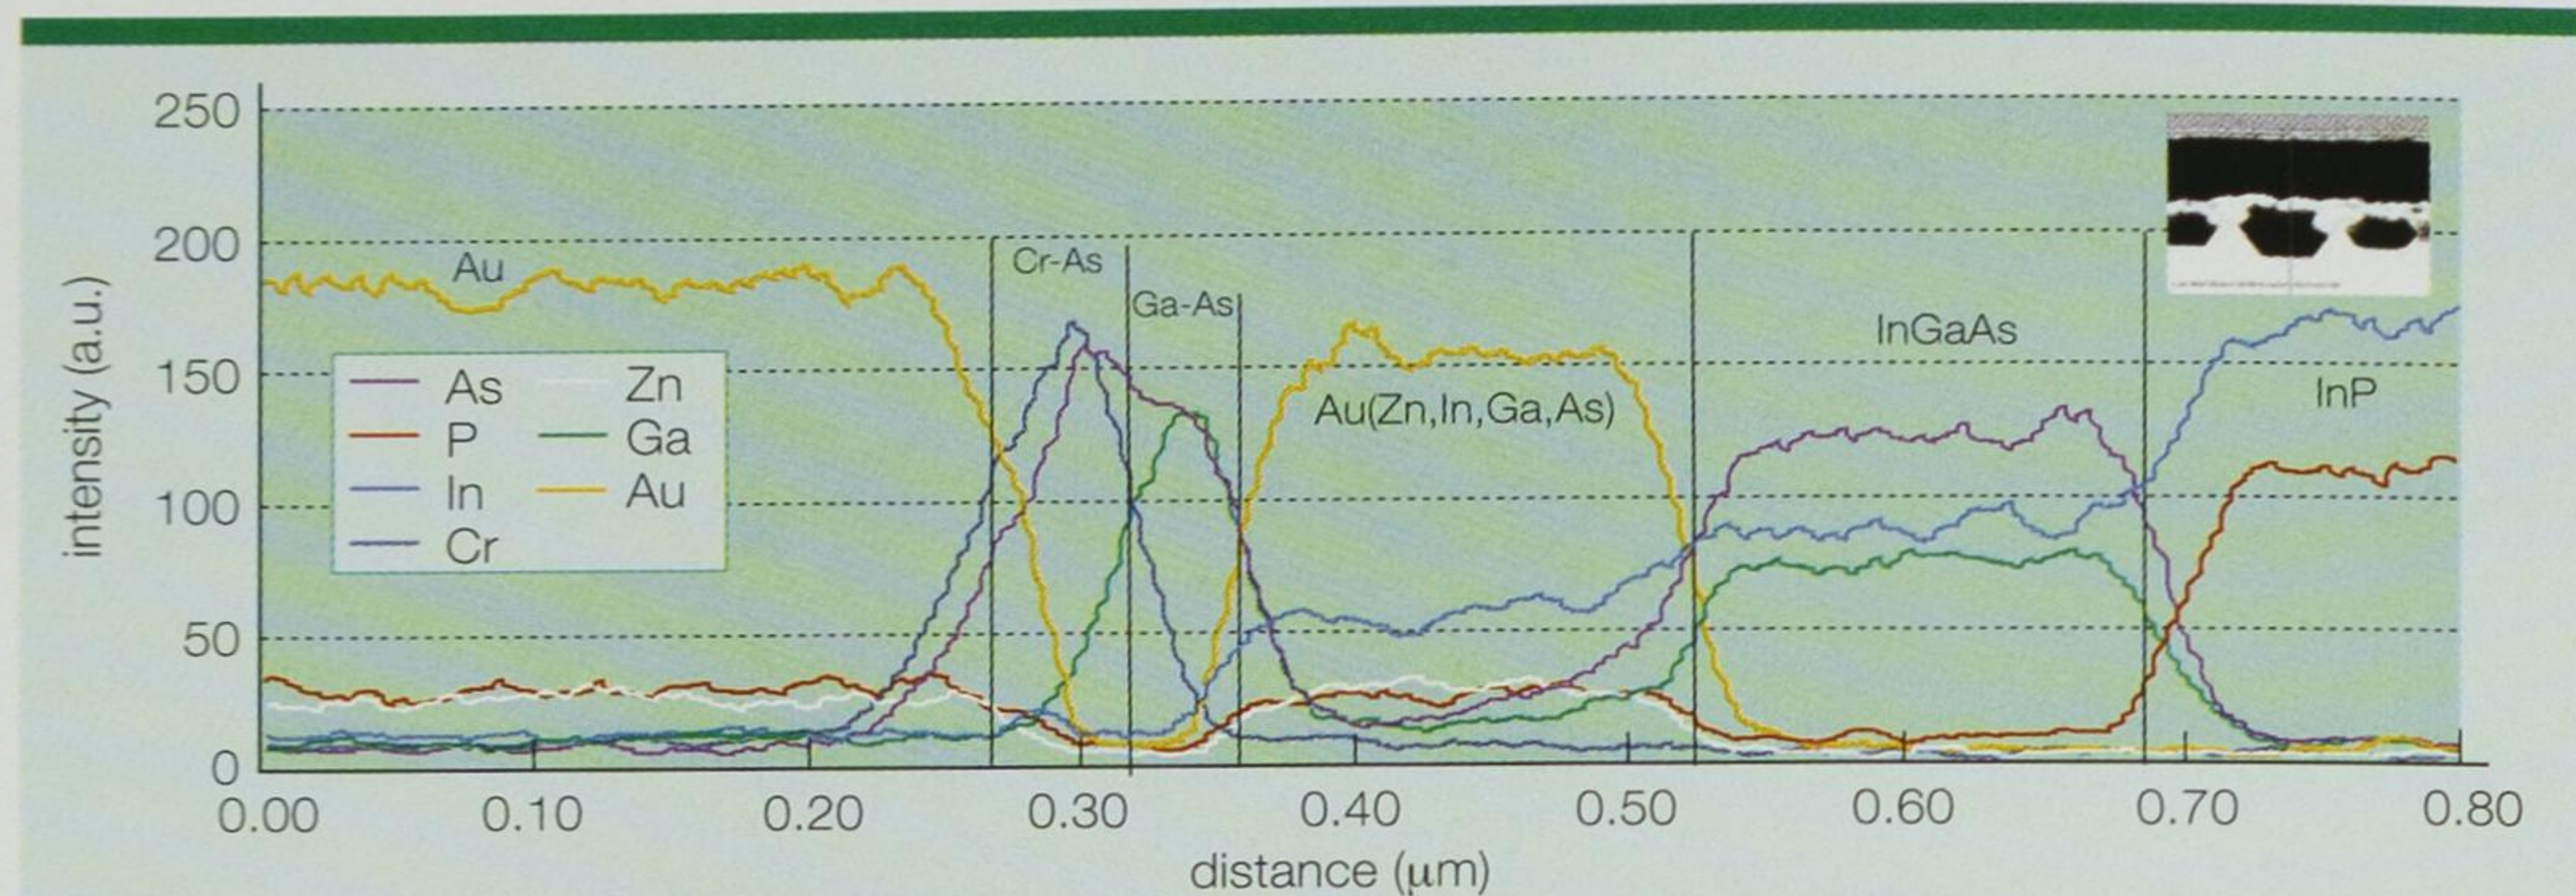


Fig. 4. An STEM EDS spectra of p-InGaAs/Au/Zn/Au/Cr/Au contact to p-InP after alloy. The section has been taken through the Au-rich compound.

closer to the sample, increasing the collection angle to 3 mrad, and making it 2.5 times more sensitive than a conventional TEM EDS system. While the focused ion beam (FIB) or manual polish used to make samples will create some damage to the sample surface, the interior of the sample is virtually pristine. Samples 0.5 μm and thicker are routinely used in STEM to maximize the signal and minimize the effects of sample preparation artifacts.

STEM of contacts to III-Vs

STEM EDS profiles can provide accurate information about layer location and thickness, diffusion distance and stoichiometry, which are particularly important parameters when depositing and annealing contacts on III-V materials. In the following, we show the STEM results of profiles on n- and p-contacts to III-V materials.

To prepare site-specific thin specimens, the samples in this work were prepared in an FEI 200TEM FIB system using the lift-out technique described on page 27. Low beam currents (30 pA) were used to create a smooth surface to eliminate EDS artifacts. The samples were cut to a uniform thickness of 0.5 μm to simplify the quantification of chemical compositions. The STEM data were taken on a Hitachi HD 2000 STEM operating at 200 kV in normal mode with a probe size of about 0.5 nm. The EDS system used was an EDAX Phoenix Pro SiLi detector with a resolution of 130 eV. Data were taken in linescan mode with various dwell times, with an average of 2000 counts per second to optimize the analysis at low concentrations.

N-contacts to InP

Figure 1 shows the STEM spectra of a sample of n-InP/AuGe/Ni/Au/Cr/Au that exhibited high resistance after alloying. The photo shown in the inset is a transmission bright-

field image. The surface Pt layer was deposited during FIB sample preparation. In the Cr layer, a trace amount of Au was detected and in the Ni layer, Ge and Au were detected, suggesting that the Au and Ge atoms have diffused out of the Au/Ge layer and accumulated in the Ni layer. The interface between the InP and metal layers was sharp with no significant interdiffusion, indicating that little interfacial reaction between Au and InP occurred.

Figure 2 shows the corresponding AES depth profile of the high-resistance sample. Although the relative change in the elemental concentration was observed, the absolute layer thickness and location cannot be determined (Huang *et al.*). In addition, the interfaces do not appear as sharp as the STEM EDS data indicated, because of ion-beam mixing at the sputtered surface. The group V element in III-Vs is often more volatile than the group III element. Sputtering can preferentially remove the group V element (P in this case), making it appear that there is a lower concentration.

P-contacts to InGaAs/InP

Figure 3 shows the STEM bright-field image of a sample of p-InP/p-InGaAs/Au/Zn/Au/Cr/Au after alloy at 430 °C. There are two distinct regions in the sample. One is a more dense or higher Z compound (appearing dark in bright-field imaging), while the other is a less dense, lower Z compound (appearing bright). The STEM linescan across the dense compound shown in figure 4 indicates that the compound is Au-rich. A second linescan (not shown) revealed that the less dense compound is rich in Ga and As. Zn is detected in the top Au layer (above the Cr). The Cr-As compound was formed as a result of significant outdiffusion of As from the InGaAs.

Figure 5 shows a STEM bright-field image and EDS linescan of a sample of p-InP/p-InGaAs/Au/Ti/Pt/Au/Cr/Au after alloying at

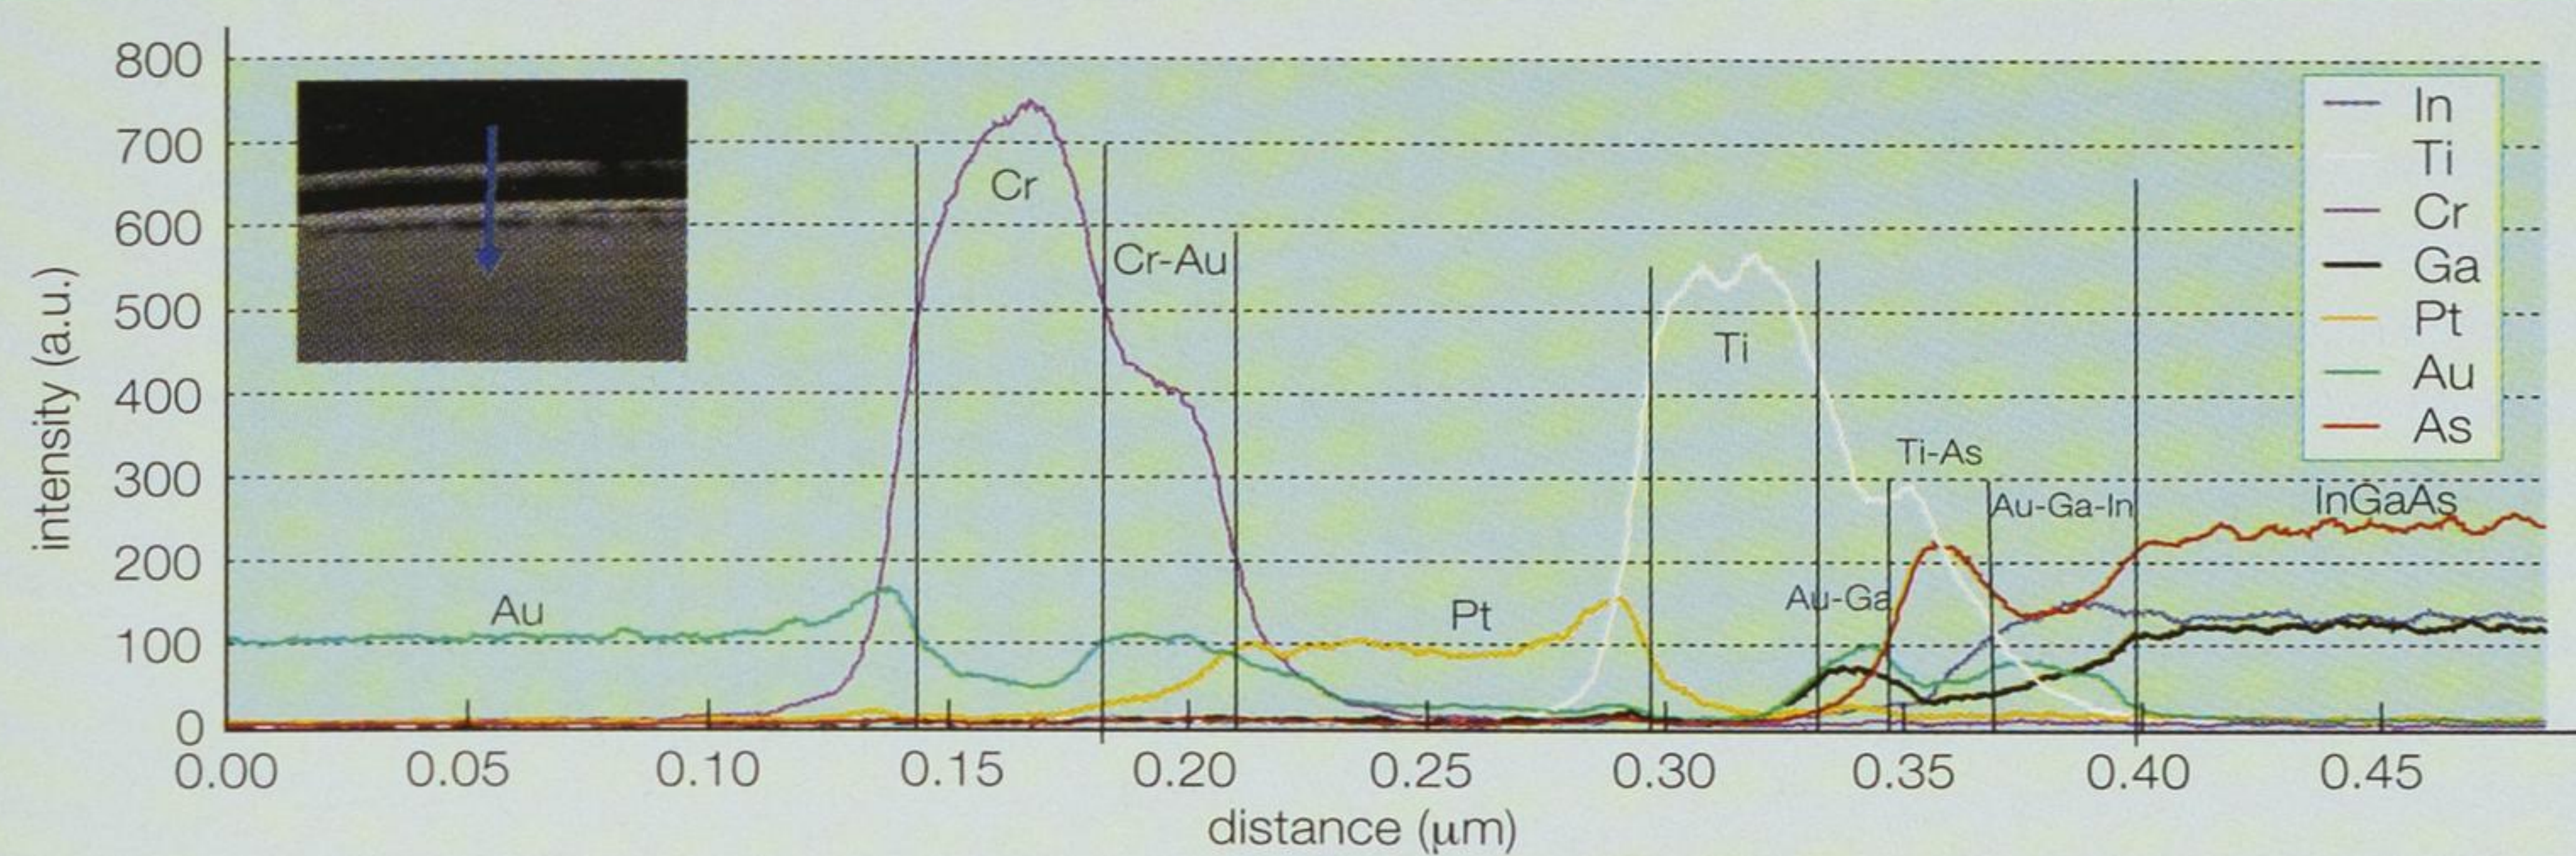


Fig. 5. An STEM EDS spectra of a sample of p-InP/p-InGaAs/Au/Ti/Pt/Au/Cr/Au after alloy.

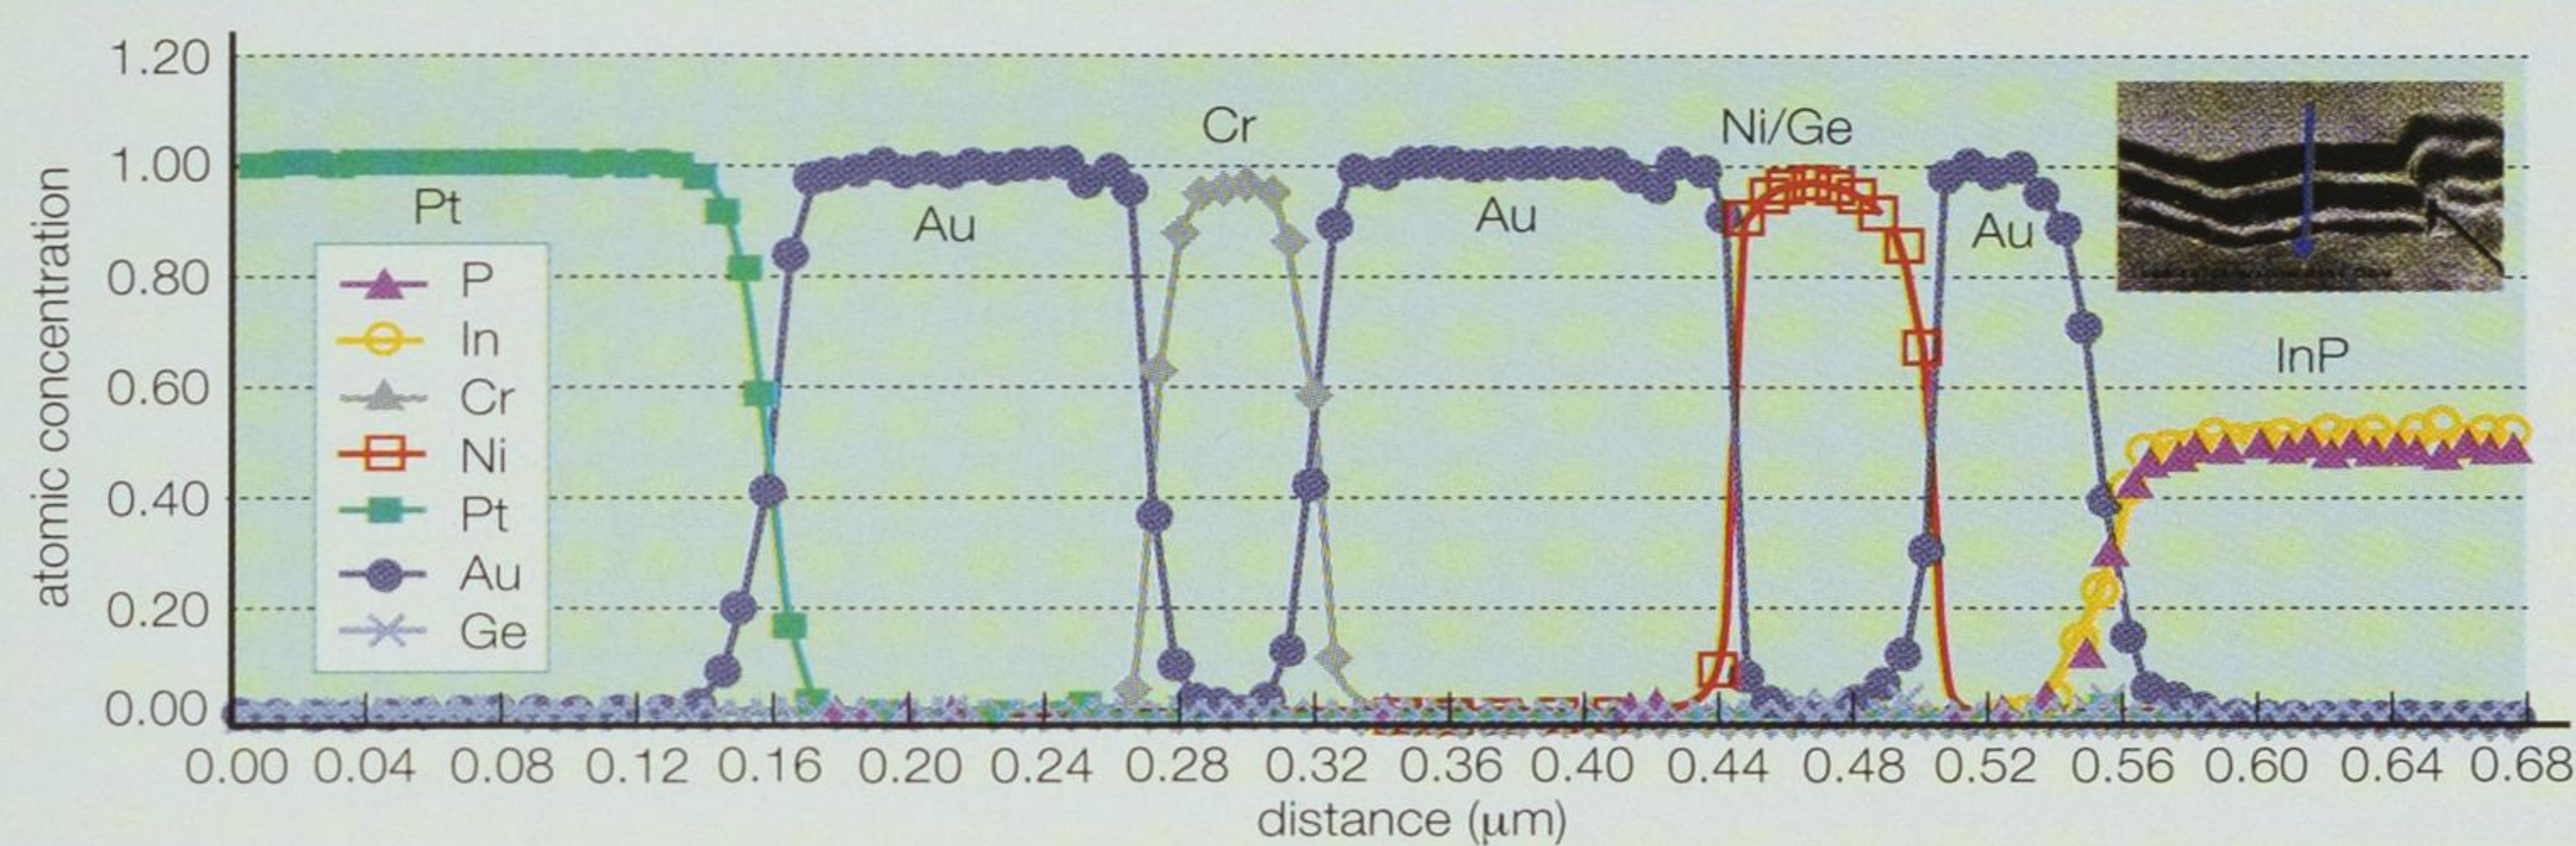


Fig. 6. An STEM atomic concentration profile of a sample of n-InP/AuGe/Ni/Au/Cr/Au replotted from fig. 1. There is no significant diffusion of In or P into the metal layers.

430 °C. There were several redistributions in elemental signals after anneal. First, a shoulder began to develop on the Cr signal and overlapped with the underlying Au, indicating a Au/Cr layer. The reaction between Cr-Au at 430 °C was also observed in the Au/Zn/Au/Cr/Au metallization systems. Second, the Ti and Au diffused downwards while Ga and As diffused upwards. Consequently, the interdiffusion between species led to the formation of three compound layers: Au-Ga, Ti-As and Au-Ga-In (from top to bottom). The STEM again uniquely captured the process of phase transformations in thin layers (5–10 nm).

Thin-film stoichiometry

Figure 6 shows the STEM concentration profile replotted from figure 1, where the intensity is converted to atomic concentration. By quantifying the concentration of the various elements in each layer, the chemical composition of the thin-film layer can be determined. In the Cr-rich layer, the atomic concentrations for Cr and Au are 0.98 and 0.02, respectively. In the Ni/Ge/Au layer, the atomic concentrations for Ni, Ge and Au are 0.96, 0.03 and 0.01, respectively. For InP, the atomic concentrations of In and P are 0.51 and 0.49, respectively.

Conclusions

STEM EDS enables rapid, high spatial and elemental resolution for characterizing III-Vs and silicon devices, and is especially strong when data on multiple thin layers is required. The chemical makeup of each layer can be determined, and data on the sharpness of interfaces, diffusion and the reaction of components can be gathered. Concentration profiles, spatial and chemical information about layers nanometers thick, and diffusion distance and stoichiometry can all be analyzed with this technique. ●

Acknowledgments

The authors acknowledge Larry Cote for support of the work, P C Chen for reviewing the manuscript and M Jamison for the FIB work.

Further reading

Hashimoto *et al.* 1998 *Hitachi Instrument News, Electron Microscopy* **34** 26.
Huang *et al.* 2002 *J. Mater. Res.* **17**(11) 2929.
Wolf *et al.* 1986 *Silicon Processing for the VLSI Era* vol. 1 (Lattice Press, Sunset Beach, CA).

Jia S Huang is with Ortel, a division of Emcore, Alhambra, CA. E-mail jshuang@emcore.com.
Cathy B Vartuli is with Agere Systems, Orlando, FL. E-mail vartuli@agere.com.

Gallium Arsenide

Indium Antimonide

Indium Arsenide

Indium Phosphide

Gallium Antimonide

Gallium Phosphide

Silicon Carbide

Sapphire

Silicon

Zinc Oxide

wafer technology

High purity MBE source material

High purity indium metal

High purity gallium metal



Wafer Technology

USA: +1 928 468 2204

UK: +44 1908 210 444

Germany: +49 451 59 6500

Scandinavia: +46 8 571 62640

Japan (E&M): +81 797 34 6655

Korea (Semivac): +82 2 573 3786

Australia (M.M.R.C): +61 3 9885 1752

www.wafertech.co.uk

Wafer Technology is part of IQE plc

Do you package this device?

If your answer is yes, Ismeca can handle any of your Surface Mount LEDs, *reliably, flexibly and at very high speed.*

At Ismeca, we understand LED packaging means *versatile handling platforms* that can automatically feed in devices, connect to spectrometers, conduct optical measuring, and *efficiently integrate sorting and/or taping.* Some LED applications also need other functions such as *automatic visual inspection and laser marking.* Or for fast, cost-effective multi-grading output, our standard handler can be utilized as a pure sorting unit with 32, 64 or 120 bins.

When Ismeca commits to high speed, we mean *sustained performance of up to 18,000 pph within real-world production environments.* And with all of the above functions combined in one machine, that *superior performance can be delivered in a very small amount of floor space.*

As the pioneering inventor of multi-up, high-speed turret systems, Ismeca continues to lead with new innovation across all of today's device-handling challenges.

Our global organization also assures

consistent service and

support for any location

throughout the world.

For a free brochure, contact the Ismeca office near you or visit our WEB site:

www.ismeca.com

USA

Ismeca USA Semiconductor, Inc.

Vista, CA 92083-8348

Tel. + 1 760 305 6200

Fax + 1 760 305 6290

HONG KONG

Ismeca Asia, Limited

Kowloon, Hong Kong

Tel. + 852 2873 3213

Fax + 852 2873 1027

SWITZERLAND

Ismeca Europe S.A.

CH-2301 La Chaux-de-Fonds

Tel. + 41 32 925 71 11

Fax + 41 32 925 71 15

Worldwide Partner
World Class Solutions

ismeca

It's not all Si at Albany

Albany Nanotech is rapidly expanding its silicon processing facilities, but less well known are its III-nitride development activities, which include integration with silicon, writes **Jon Newey**.

When discussing the US semiconductor industry, Silicon Valley is the location that immediately springs to mind. However, thanks to the efforts of Governor George Pataki of the state of New York, another regional semiconductor hotspot is springing up in the north-east of the country. Much of the activity is centered on Albany NanoTech (ANT), which was established in 2000 at the University of Albany (part of the State University of New York). ANT combines an array of research areas covering opto- and nanoelectronics, micro- and nanosystems and thin-film technology into a fully integrated complex for R&D, prototyping, pilot manufacturing and education.

ANT boasts an impressively equipped array of 200 mm wafer cleanroom laboratories with an asset value in excess of \$125 million. In the next two years this figure is expected to exceed \$500 million, primarily as a result of the construction of the world's only university-based 300 mm Si processing facility.

The 300 mm center will become the home of International Sematech North, a joint \$320 million five-year program between International Sematech and ANT. Sematech is a consortium of 10 of the world's largest semiconductor manufacturers, which through precompetitive collaboration, leads and reduces the costs and risks of developing manufacturing technologies for the semiconductor industry. In particular it has been grappling with issues surrounding sub-65 nm scaling and associated manufacturing on 300 mm wafers. The presence of Sematech and the backing of New York's governor and legislative leaders are in turn attracting other semiconductor companies into the region.

While the big silicon projects grab the headlines, ANT's varied activities in compound semiconductors continue to grow and attract funding. The Interconnect Focus Center at ANT has a large MBE program for the growth of nanoscale GaAs-based optoelectronic devices as part of an overall mission to integrate compound semiconductor devices on a Si platform, thus advancing high-speed information transport.



Shadi Shahedipour is leading a team developing GaN-based devices including UV emitters. Growth is done onto sapphire, but the team aims to grow high-quality material on silicon.

Integrating GaN and Si


More recently, a second compound semiconductor activity has begun at ANT within a new facility. The work, led by Shadi Shahedipour, focuses on the development of GaN-based devices such as UV emitters and the integration of high-quality GaN onto silicon substrates. The growth is done on two Emcore MOCVD systems that can accommodate one or three 2 inch wafers.

There is much interest worldwide in growing GaN onto Si, because Si wafers are relatively cheap and available in large diameters. However, the problems of large lattice parameter and thermal mismatches between GaN and Si must be overcome if high-quality material is to be grown (*Compound Semiconductor* August 2002 p49). The work at the laboratory has already resulted in a patent application for a method of growing GaN on silicon. Meanwhile, work on UV sources is continuing using sapphire substrates, with the aim that the work can be transferred to Si substrates once GaN of sufficiently high quality can be grown onto Si. In the future, Shahedipour and her colleagues hope to take advantage of ANT's comprehensive Si device processing

infrastructure to integrate GaN-based optoelectronics with Si nanoelectronics.

Much of the funding for the nitride program comes from the State of New York and the General Electric Global Research Center (GEGRC). In future, Shahedipour wants to bid for funding from the DARPA programs that have been set up to accelerate progress in wide-bandgap materials and devices (*Compound Semiconductor* October 2002 p49). GEGRC, located close to ANT in Niskayuna, NY, has a wide-bandgap semiconductor research program, which includes a III-nitrides project. Shahedipour is also taking advantage of another element of GE's work – the development of bulk GaN wafers, grown using high-pressure, high-temperature techniques – for nitride homoepitaxy. Epitaxial growth of GaN onto bulk GaN would remove many of the problematic mismatches in material properties that are present when growing on sapphire and Si. While devices such as LEDs are remarkably tolerant of material defects, blue and UV lasers are less so, and require the highest-quality material if acceptable lifetimes and efficiencies are to be achieved.

"Surround The Tool" for the Compound Semiconductor Industry

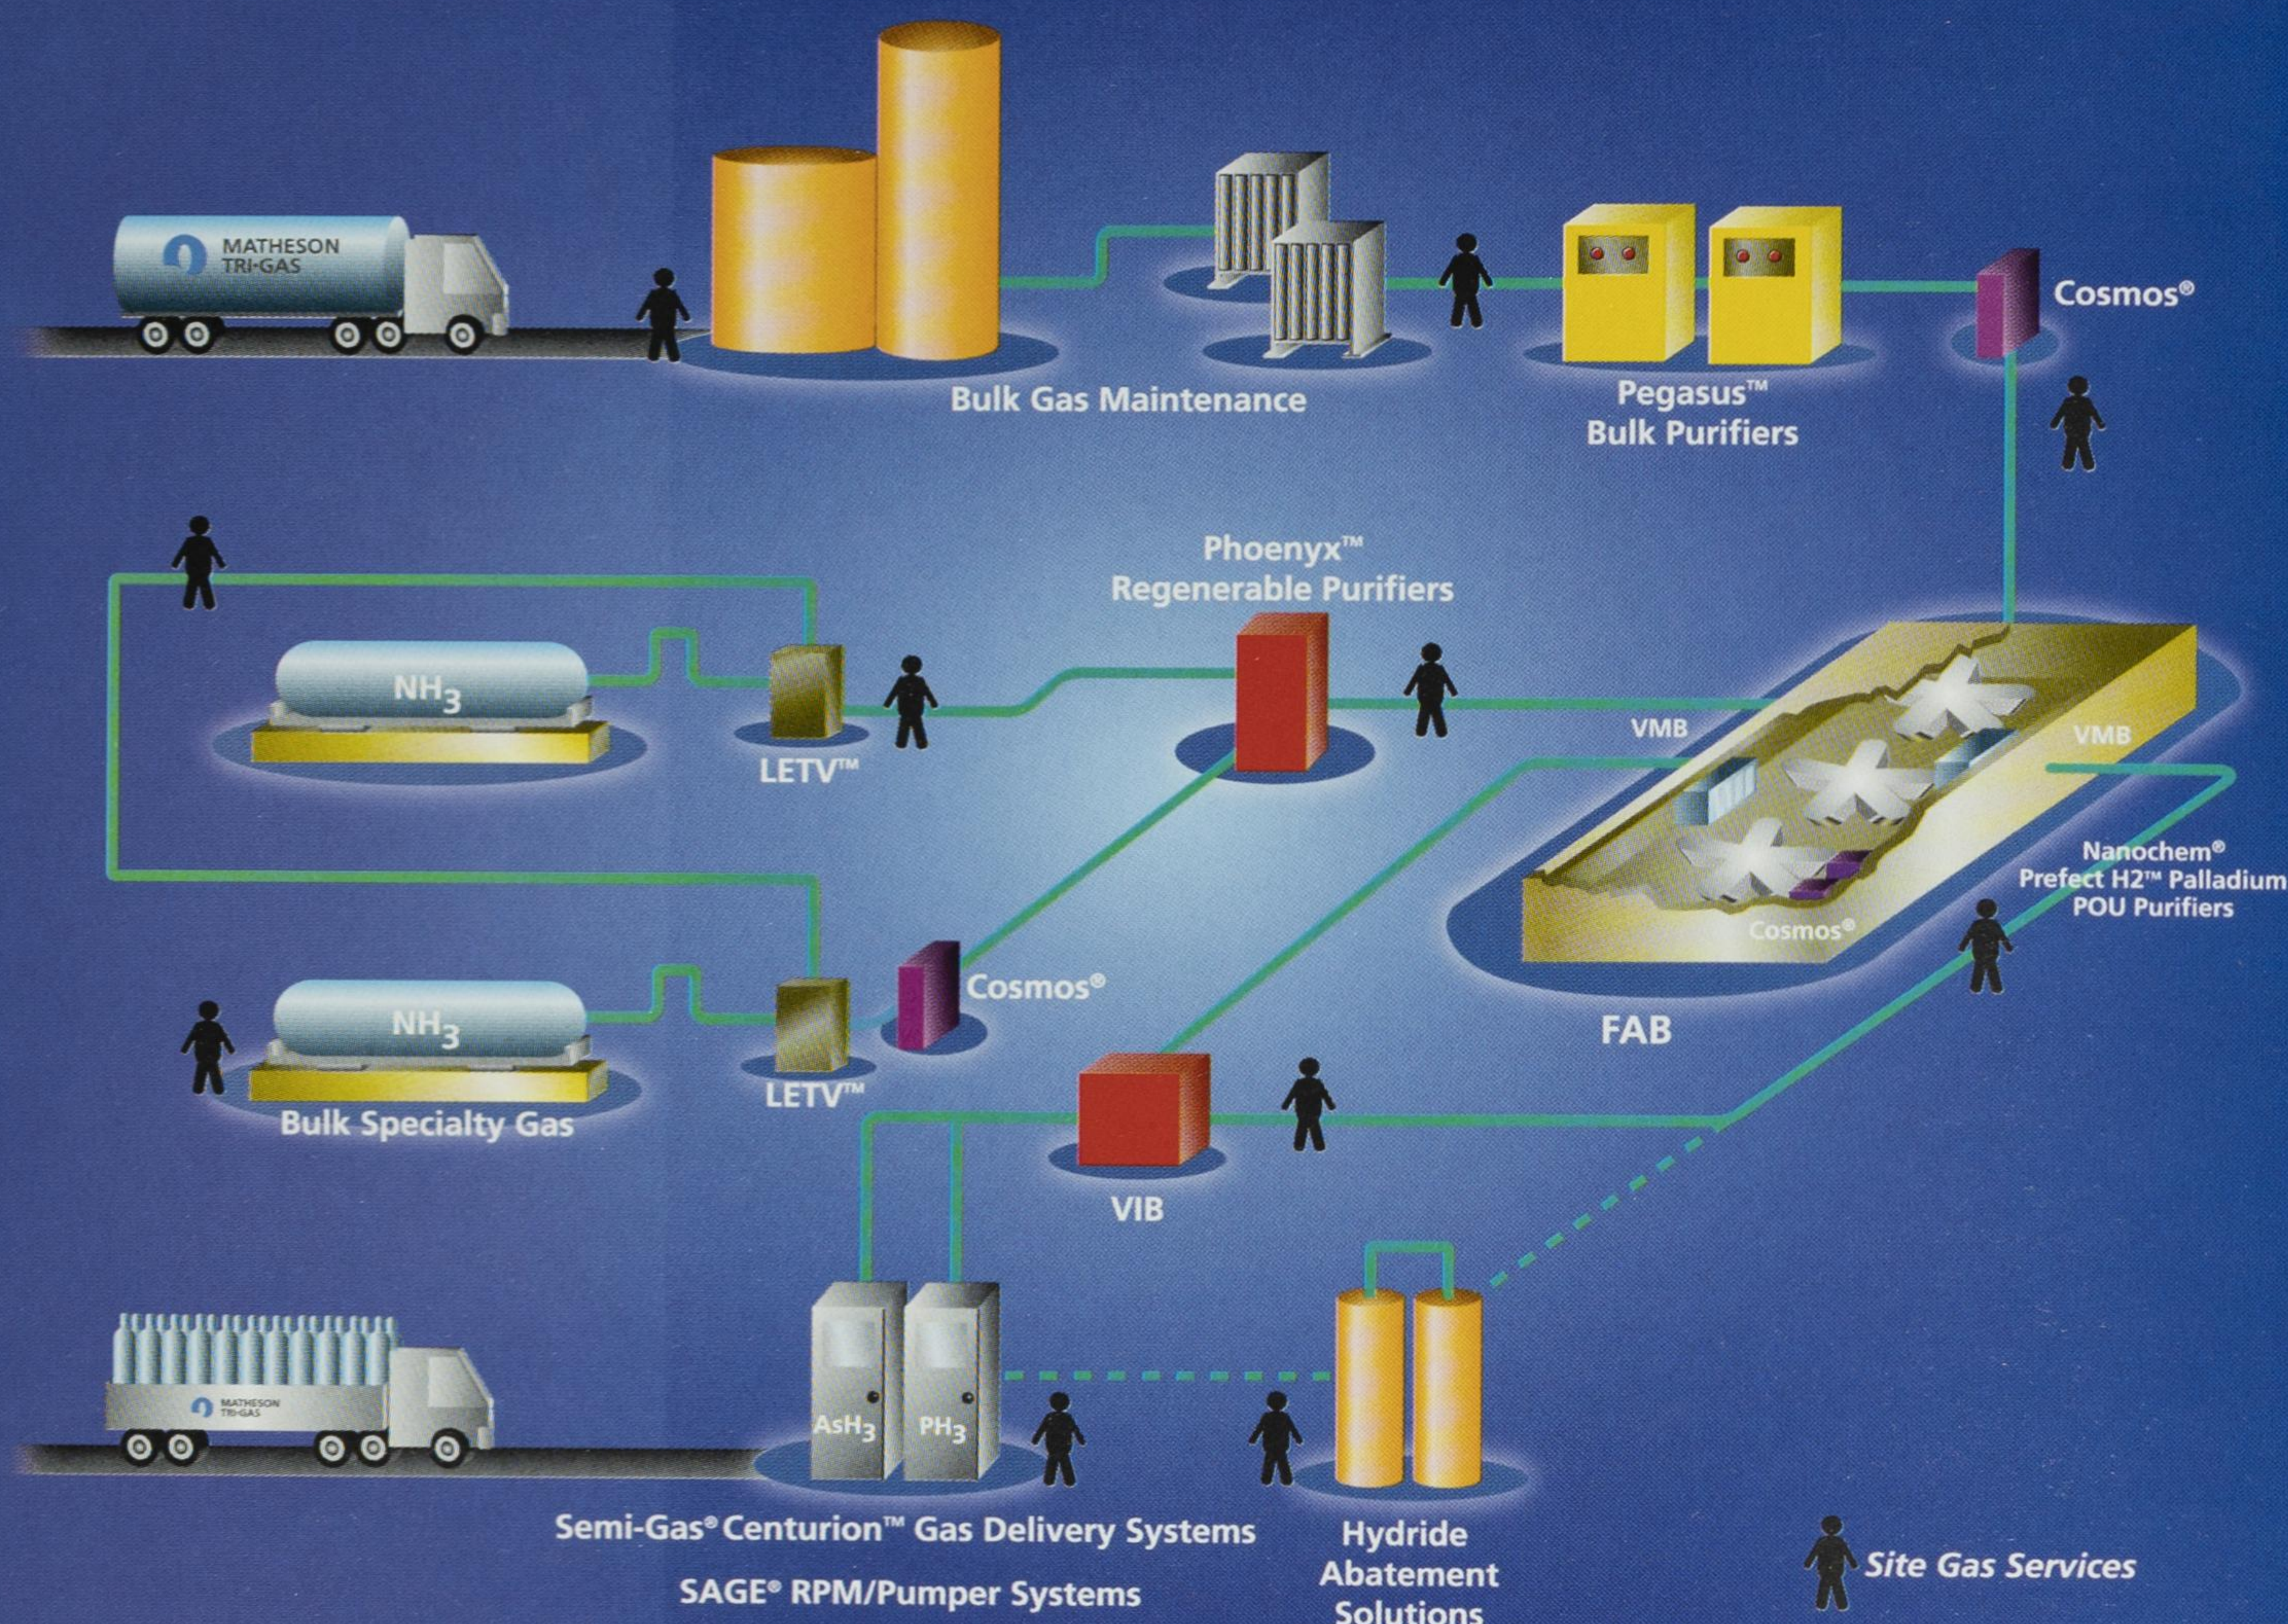

Matheson Tri-Gas pioneered semiconductor gas handling and now has developed a unique "Surround The Tool" program of virtually everything gas related to address the compound semiconductor industry and its special needs.

- ULTIMA™ Ammonia, Arsine and Phosphine
- NANO-CHEM®, PerfectH2™ and Phoenix™ Purification Systems
- COSMOS® Gas Detection Systems
- SEMI-GAS® Centurion™ Manifolds and Cylinder Enclosures
- SAGE® (Sub-Atmospheric Gas Enhanced) Hydride Sources
- LETV™ (Liquid Extraction Total Vaporization) NH₃ Delivery Systems
- Site Services, OEM Configurations and Turnkey Installations

COSMOS, NANO-CHEM AND SEMI-GAS are registered trademarks of Matheson Tri-Gas, Inc.
Pegasus, PerfectH2, Phoenix, LETV, ULTIMA and Centurion are trademarks of Matheson Tri-Gas, Inc.

SAGE is a registered trademarks of ATMI, Inc.
SAGE is a patented technology of ATMI, Inc. U.S. patents 5,518,528
5,704,965, 5,704,967, 5,676,735, 5,707,424 & 6,083,298.
Other U.S. and foreign patents pending. ©2003.



III-V@matheson-trigas.com
1.804.290.0418



**MATHESON
TRI-GAS**

www.mathesontrigas.com



...Everything Gas

AlGaInAs broad-area lasers exhibit outstanding reliability

Low failure rates at high output power make broad-area AlGaInAs lasers suitable for industrial applications, write **Victor Rossin, Toby Strite, Erik Zucker** and **Teh-Hua Ju** of JDS Uniphase.

Massive investment driven by the 1990s telecom boom stimulated great progress in the available output power of single-mode AlGaInAs pump lasers. From 1997 to 2002, the peak operating power of 980 nm chips increased five-fold, while reliability was maintained at or below 200 failures in time (FIT; $\sim 0.2\%$ annual failure rate). Less attention was directed towards applying these advances to the AlGaInAs broad-area lasers used widely in fiber lasers and other industrial applications. The current telecom crash has led to this situation being redressed. This article presents the current state of the art for broad-area AlGaInAs diode laser reliability and output power.

Diode structure and performance

The AlGaInAs lasers described below feature an InGaAs strained-layer quantum well (QW) active region and a separate confinement heterostructure waveguide region. Through fine epitaxial adjustments, the basic structure can emit throughout the 900–1000 nm wavelength range at broadly similar efficiency and reliability. The laser diode chips are of a planar design, simplifying both the laser fabrication and the junction-side-down mounting to a heat sink. Straightforward processing forms the 100 μm emitting aperture, and a simple and robust coating technology greatly enhances facet durability.

Figure 1 plots the key L-I, V-I and power conversion efficiency characteristics of 100 μm aperture lasers at 25 °C. Threshold current values around 300 mA with a slope efficiency just above 1 W/A are typical. Power conversion efficiency peaks around 60% just above 2.5 W optical output power. An output power of 8 W can be sustained at 9 A drive current. The maximum CW output power levels for individual devices are in the 8–12 W range, limited by catastrophic optical damage, heat-sink thermal resistance and heat-sink temperature. The inset shows the typical multimode output spectrum featuring a

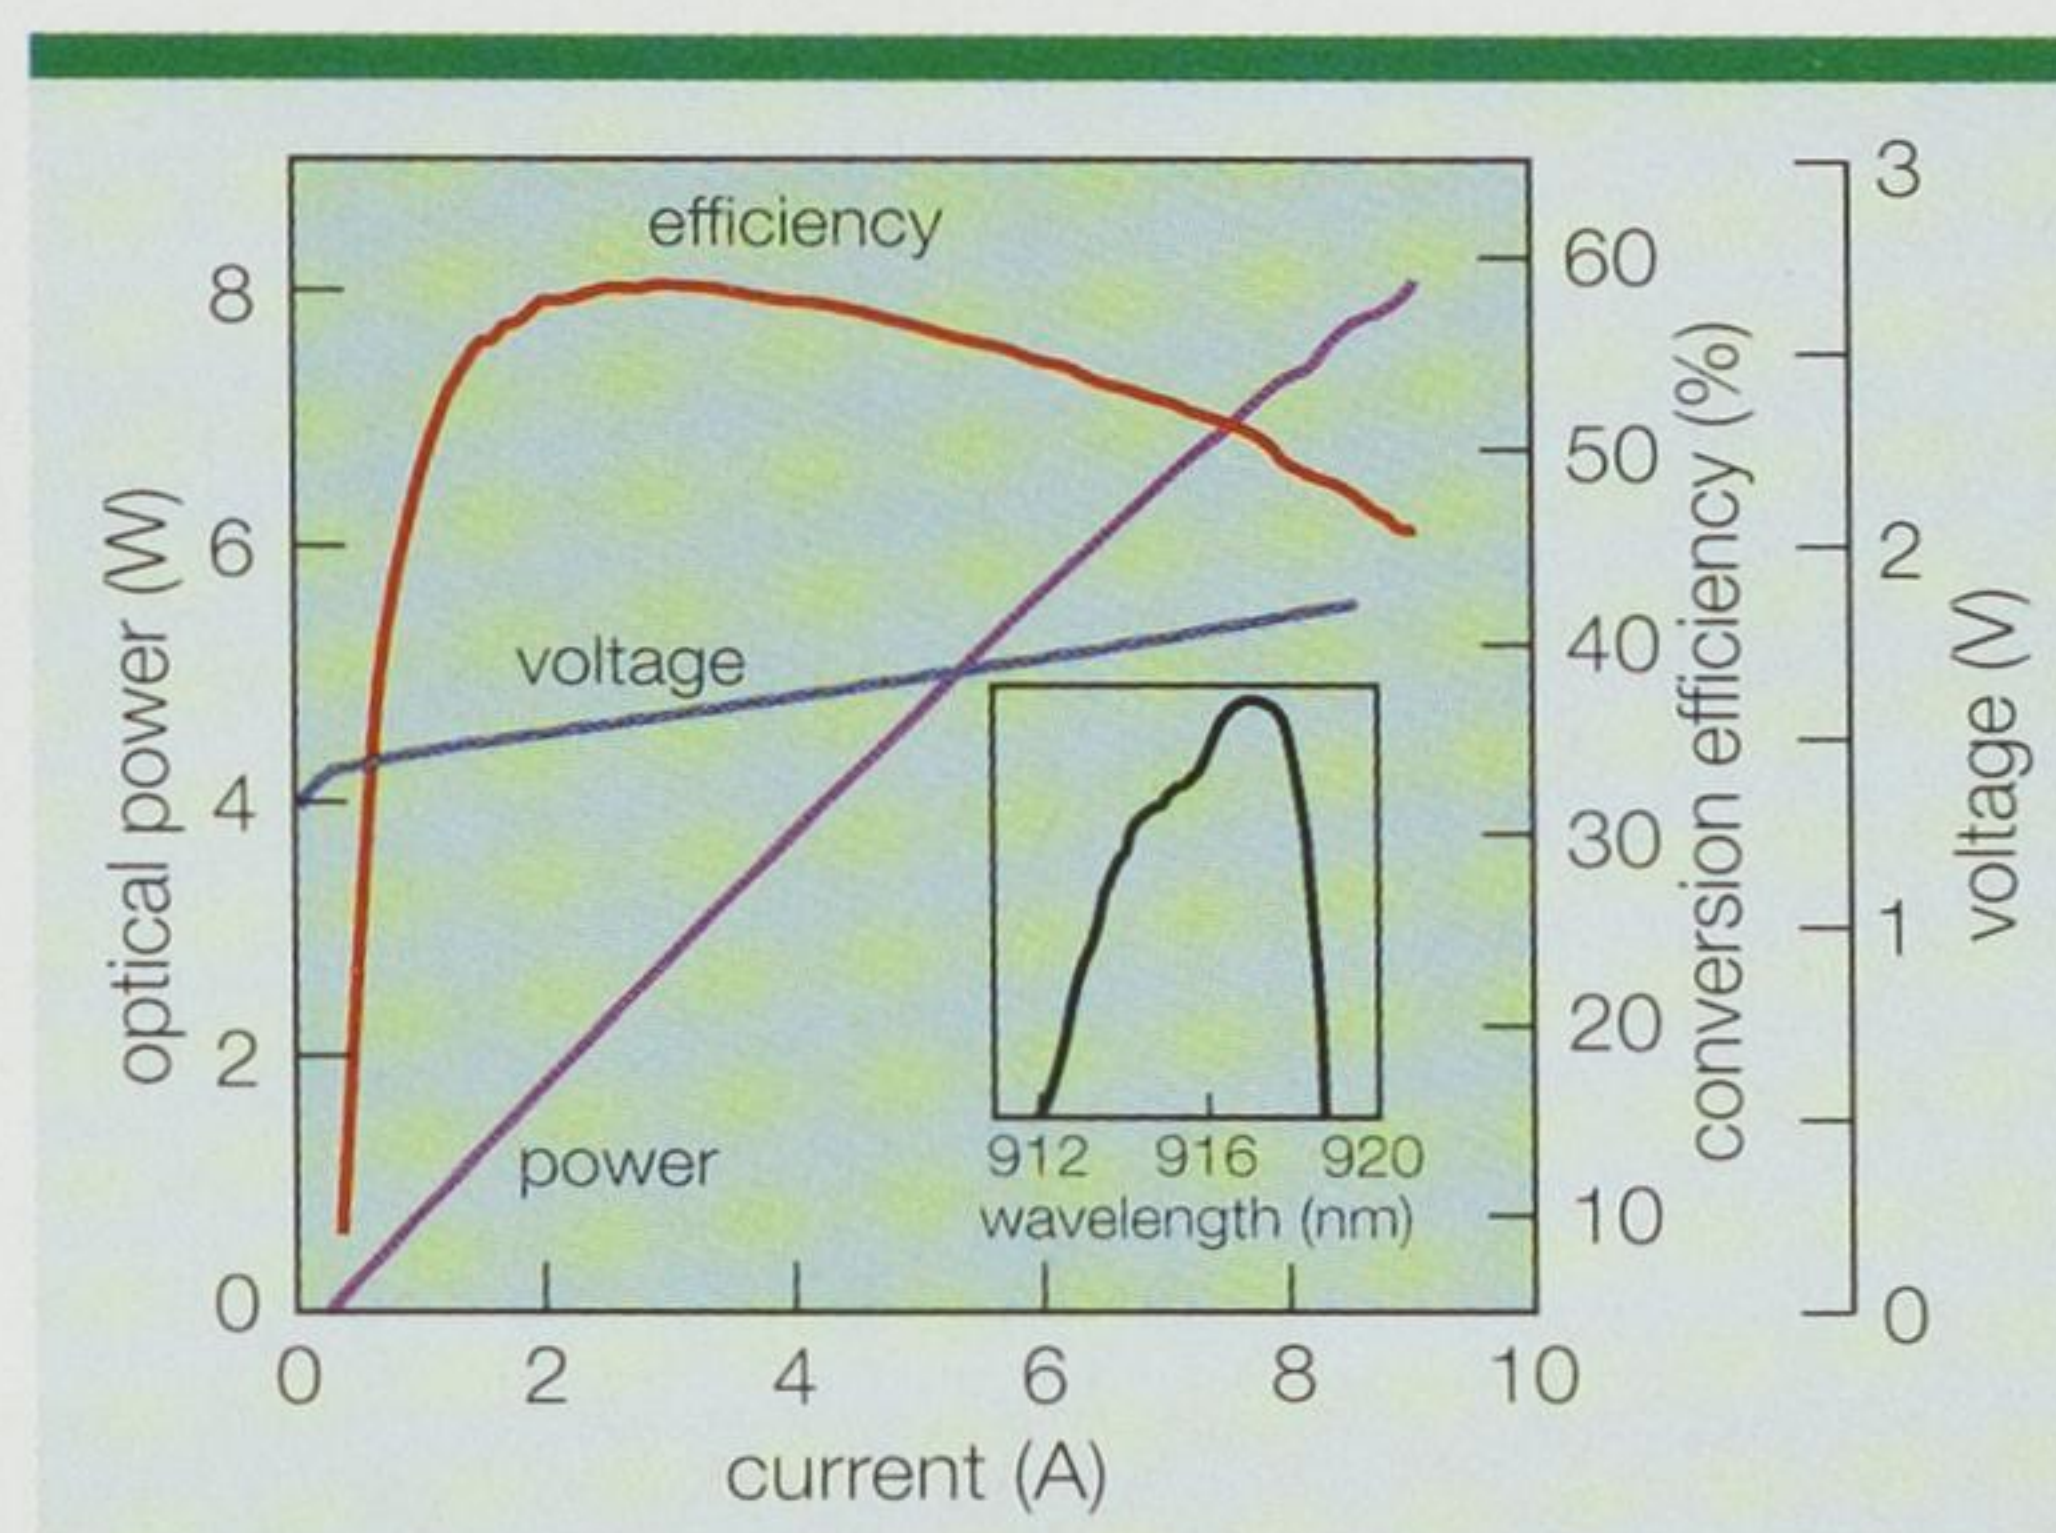


Fig. 1. Key electrical and optical characteristics of an InGaAs 100 μm active-area broad-area laser at 25 °C as a function of drive current. Inset: typical multimode wavelength spectrum featuring a smooth power distribution within several nanometers FWHM without sideband emission.

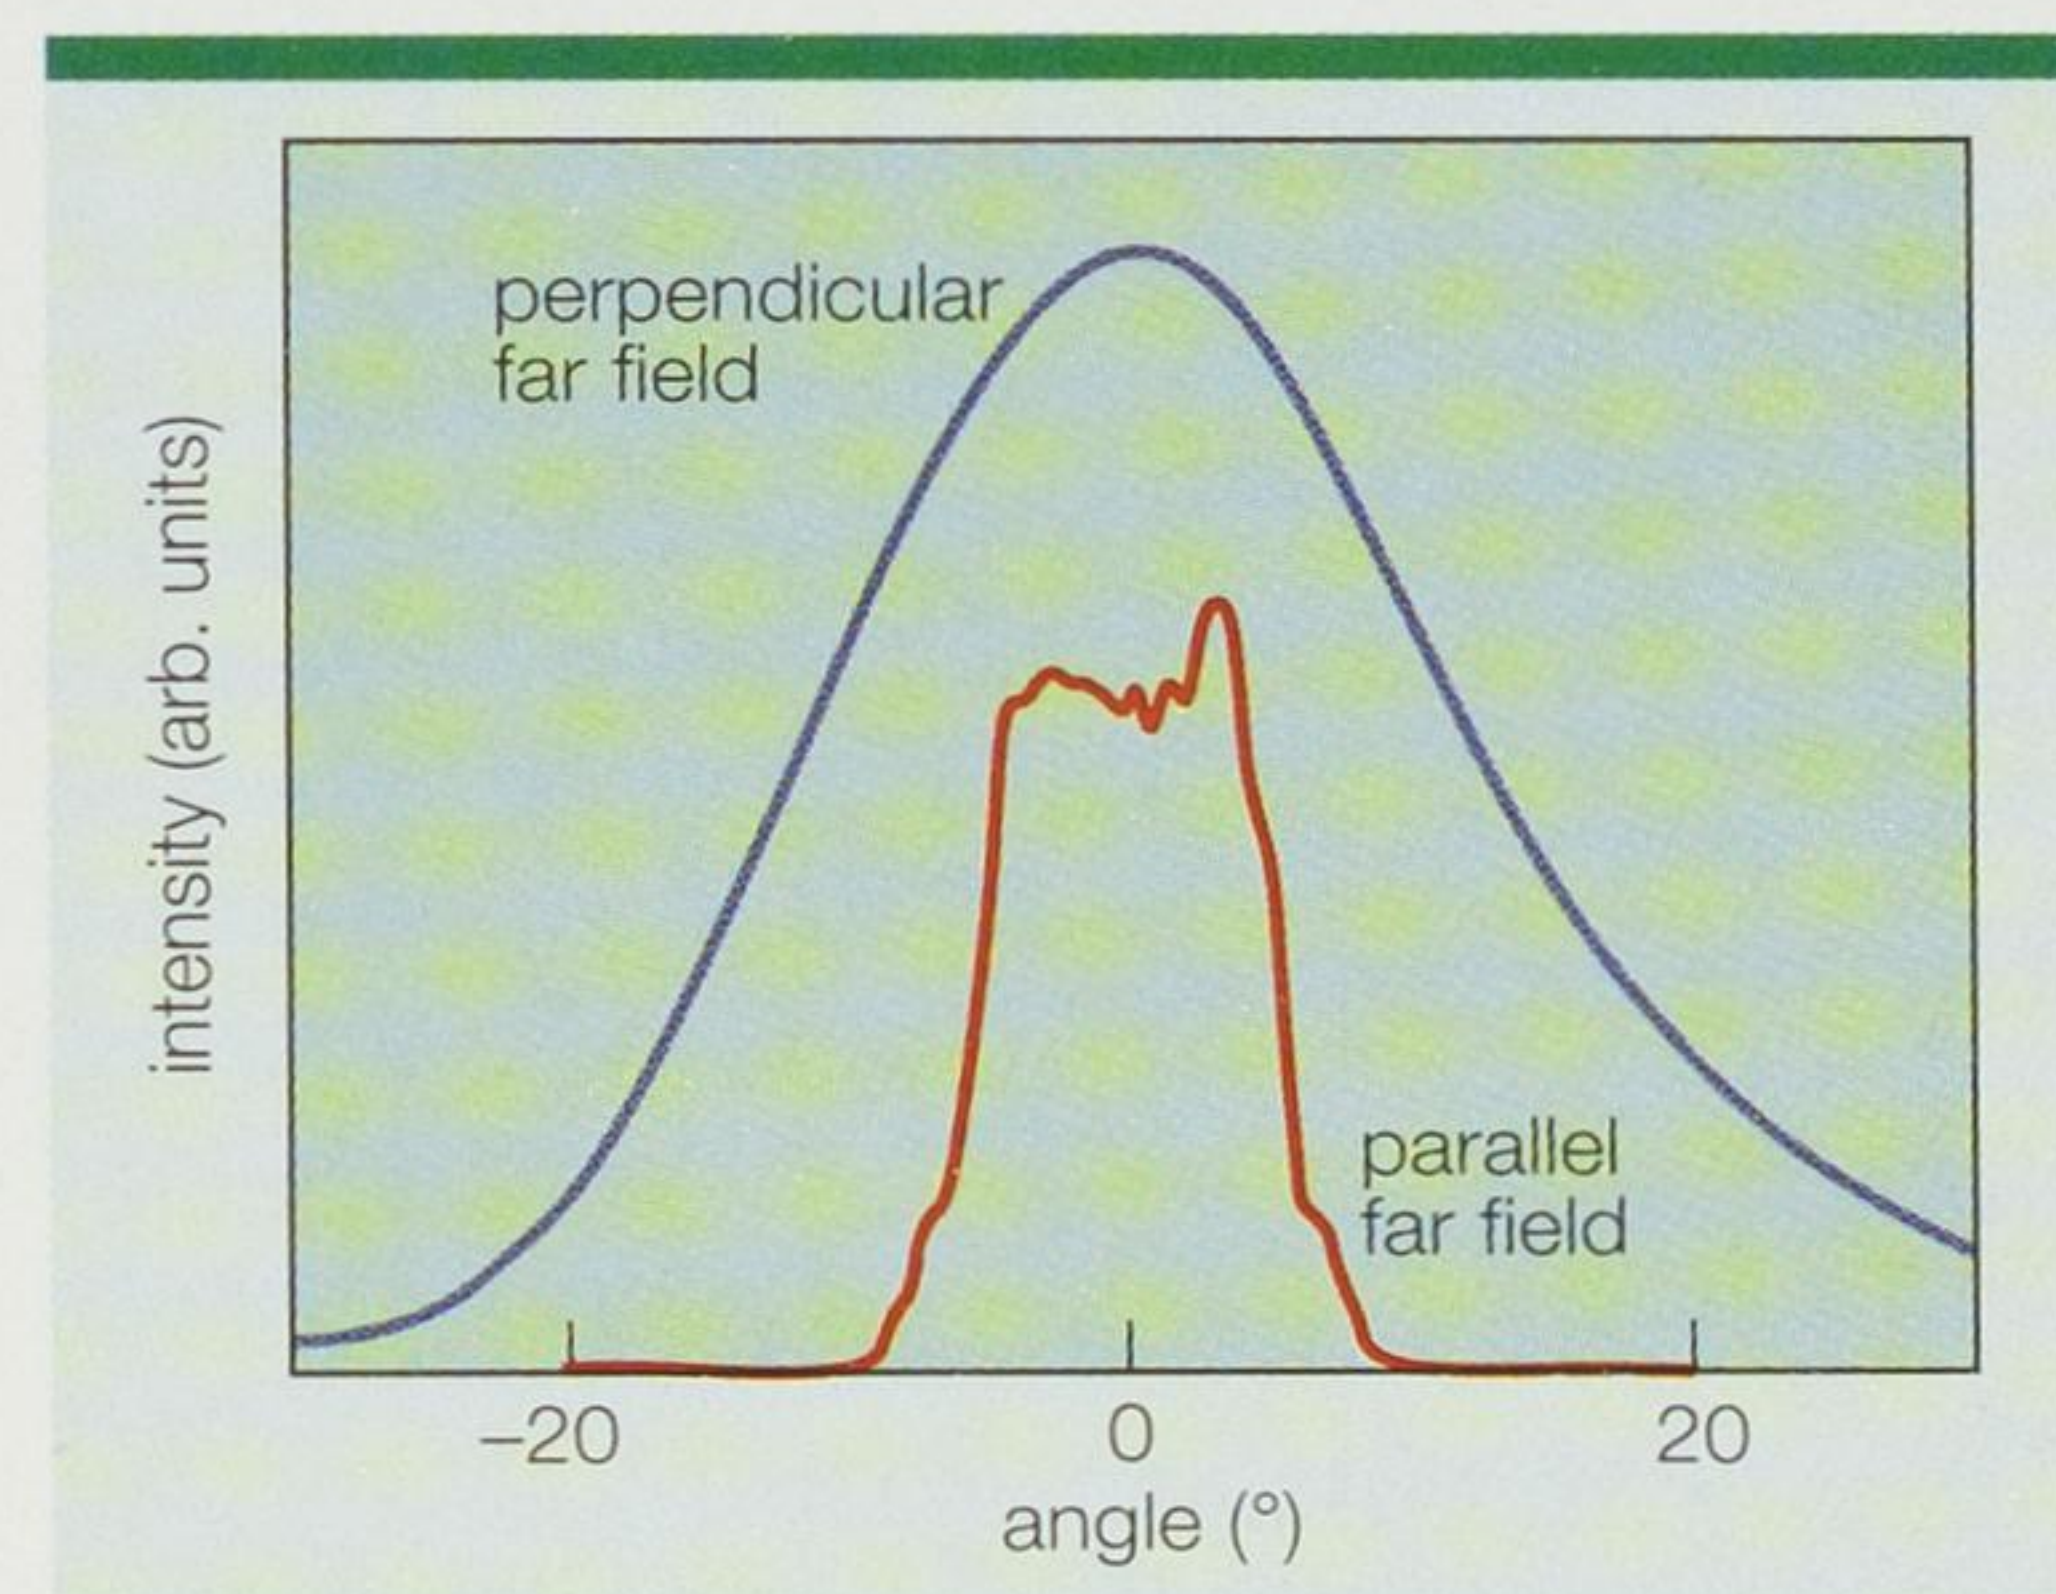


Fig. 2. Far-field pattern of an InGaAs 100 μm active-area broad-area laser at 4 W output.

smooth power distribution within a FWHM band of several nanometers.

The 100 μm AlGaInAs lasers feature a Gaussian-shaped spatial light output. Typical far-field values are 26.5° FWHM in the plane perpendicular to the QW, and $\leq 12^\circ$ FWHM in the plane parallel to the QW, allowing efficient fiber-coupling in the production environment of around 80%. Figure 2 illustrates a typical far-field power distribution for a laser diode operating at 4 W.

Overview of diode laser reliability

Over the past decade, telecom vendors learned to manufacture laser diodes whose reliability is well understood. The low failure rates of advanced diode technologies make it uneconomical to perform reliability testing under normal operating conditions. Instead, multicell testing under highly accelerated conditions is used to develop a statistically relevant device reliability model. Multicell tests generally probe the upper temperature and drive current ranges to deduce the sensitivity of diode reliability to each parameter. Analysis of the observed failure rates under high stress produces a model from which failure rates at normal operating conditions are extrapolated.

Diodes fail either suddenly (infant or random failure regimes) or through gradual degradation over an extended period of time (wear-out regime). Several root causes may contribute to failures within any regime.

Infant failure regime Infant failures occur early in a laser's working life. Such failures usually arise from damage or imperfections introduced during device fabrication or intrinsic semiconductor defects. A rigorous burn-in at high drive current and ambient temperature conditions is the accepted technique to screen out infant failures. The overstress must be severe enough to eliminate diodes subject to infant mortality over an economically viable burn-in period, but must not introduce any new failure modes. Therefore, only a robust diode laser technology can be effectively screened in production for infant mortality. For the lasers discussed below, routine screening, including a short burn-in, was performed prior to multicell testing to remove infant failures from the studied population.


Constant random failure rate regime

Sudden failures are the predominant failure mode in this regime. The root cause is randomly dispersed epitaxial defects. Therefore the failures are expected to be statistically ran-

MORE MATERIALS

MORE EQUIPMENT

MORE SERVICES

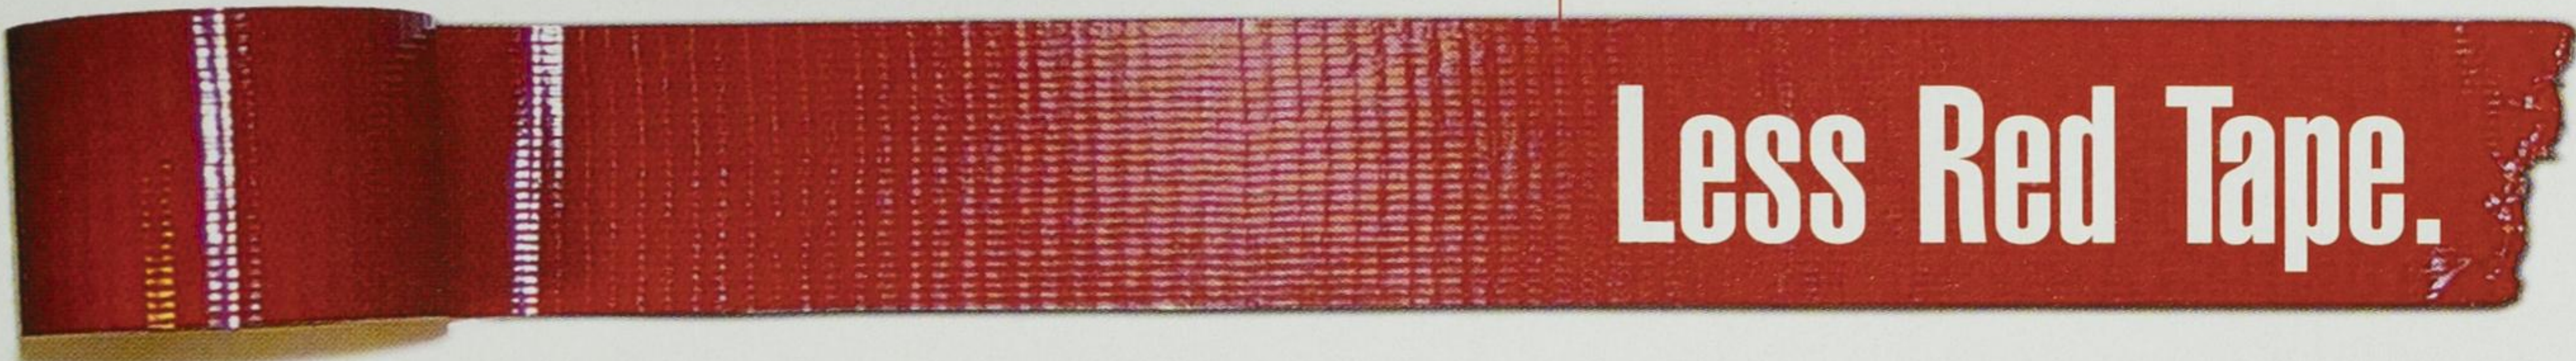

Less Red Tape.

**That's the new Praxair Electronics.
Your single source for a broad
range of advanced services
and materials, including:**

process gases

sputtering targets

electrostatic chucks

spare parts + consumables
management

CMP slurries and belts

bulk and on-site process gases

gas delivery systems

**Less is definitely more with
Praxair Electronics.**

Call 1-800-PRAXAIR or visit us online
at www.praxair.com/electronics



PRAXAIR
ELECTRONICS

Multicell lifetest results

	Cell 1	Cell 2	Cell 3	Cell 4	Cell 5
heat-sink temp. (°C)	60	94	78	70	95
junction temp. (°C)	90	120	114	114	141
current (A)	5.5	4.4	6.0	7.0	6.6
average power (W)	4.2	2.7	4.0	4.7	3.5
device hours	242,218	259,800	215,015	166,974	158,213
number of diodes	20	20	20	17	20
random failures	1	1	6	8	13
wear-out failures	0	0	0	0	2
total accelerated hours	3.92e6	3.52e6	1.32e7	2.39e7	3.80e7

Table 1. 100 μm AlGaInAs broad-area laser diode multicell lifetest results. The total of 8.25 e7 accelerated hours corresponds to a FIT rate at 25 °C and 4 W of 377.

Failure rates at 25 °C

Power (W)	2	3	4	5
failure rate (FIT) with 60% confidence level	4	60	377	2849
failure rate (FIT) with 90% confidence level	5	71	451	3412
MTBF (hours)	2.44e8	1.80e7	2.84e6	3.76e5
cumulative failures in 5 years (%)	0.02	0.24	1.5	12
cumulative failures in 10 years (%)	0.04	0.49	3.1	23
cumulative failures in 25 years (%)	0.09	1.2	7.7	58

Table 2. AlGaInAs laser diode failure rates from the multicell test for various operating conditions at a heat-sink temperature of 25 °C.

dom in nature. The random failure rate is accelerated by temperature and drive current, and can generally be fitted to equation 1, where E_A , m and the proportionality constant are the independent fitting parameters investigated by multicell testing. Within this regime, failure rates are most commonly quoted in FIT, where one FIT corresponds to a single device failure per billion hours of deployment. A useful yardstick is 1000 FIT, corresponding to ~1% of the device population failing per one year deployment period. Telecom laser diodes are typically required to have 500–1000 FIT reliability, but <200 FIT is emerging as the new post-bubble standard.

Wear-out regime Depending on the technology, diodes wear out either continuously throughout their operation, or the onset of degradation may first occur only towards the end of their useful lives. In the former case, typical of InP-based lasers, the degradation rate remains roughly constant, and end-of-life is typically defined by an increase (often 20%) of the drive current required to maintain the beginning-of-life output power. The AlGaInAs-based lasers discussed here show little or no degradation during normal operation. Under highly accelerated conditions, only two wear-out failures were observed after thousands of hours of greatly overstressed operation. When

diodes reach the end of their useful lives, the wear-out mechanism predominates, and equation 1 is no longer applicable.

The JDS Uniphase 100 μm active-area AlGaInAs broad-area pump laser diode is not subject to infant failure or wear-out when properly screened and operated normally. Reliability is therefore expected to follow equation 1. The remainder of this article focuses on extensive reliability testing, which provided the appropriate fitting parameters for equation 1, and defined the applicable power limit of the equation 1 model.

Multicell results

Table 1 summarizes the multicell test. The p-n junction temperatures are calculated using thermally dissipated power and a thermal resistance for the open heat-sink package of 6 °C/W. The 100 diodes were chosen from four separate epitaxial runs, two each at 920 nm and 970 nm center wavelengths. Three diodes in cell 4 were lost to mishandling, but this did not significantly affect the results, even if they were counted as failures. The failure rates were analyzed using the maximum likelihood method to obtain the fitting parameters $E_A = 0.43$ eV and $m = 5.5$, which allowed total accelerated hours to be calculated for each cell using 4 W, 25 °C as the reference operating condition.

Only two wear-out failures were observed

$$\text{failure rate } (T_j, I) \propto e^{(-E_A/k_B T_j)} I^m$$

T_j = laser diode junction temperature
 I = laser diode drive current
 E_A = Arrhenius factor
 k_B = Boltzmann constant
 m = current acceleration exponent

Equation 1. Random failure rate.

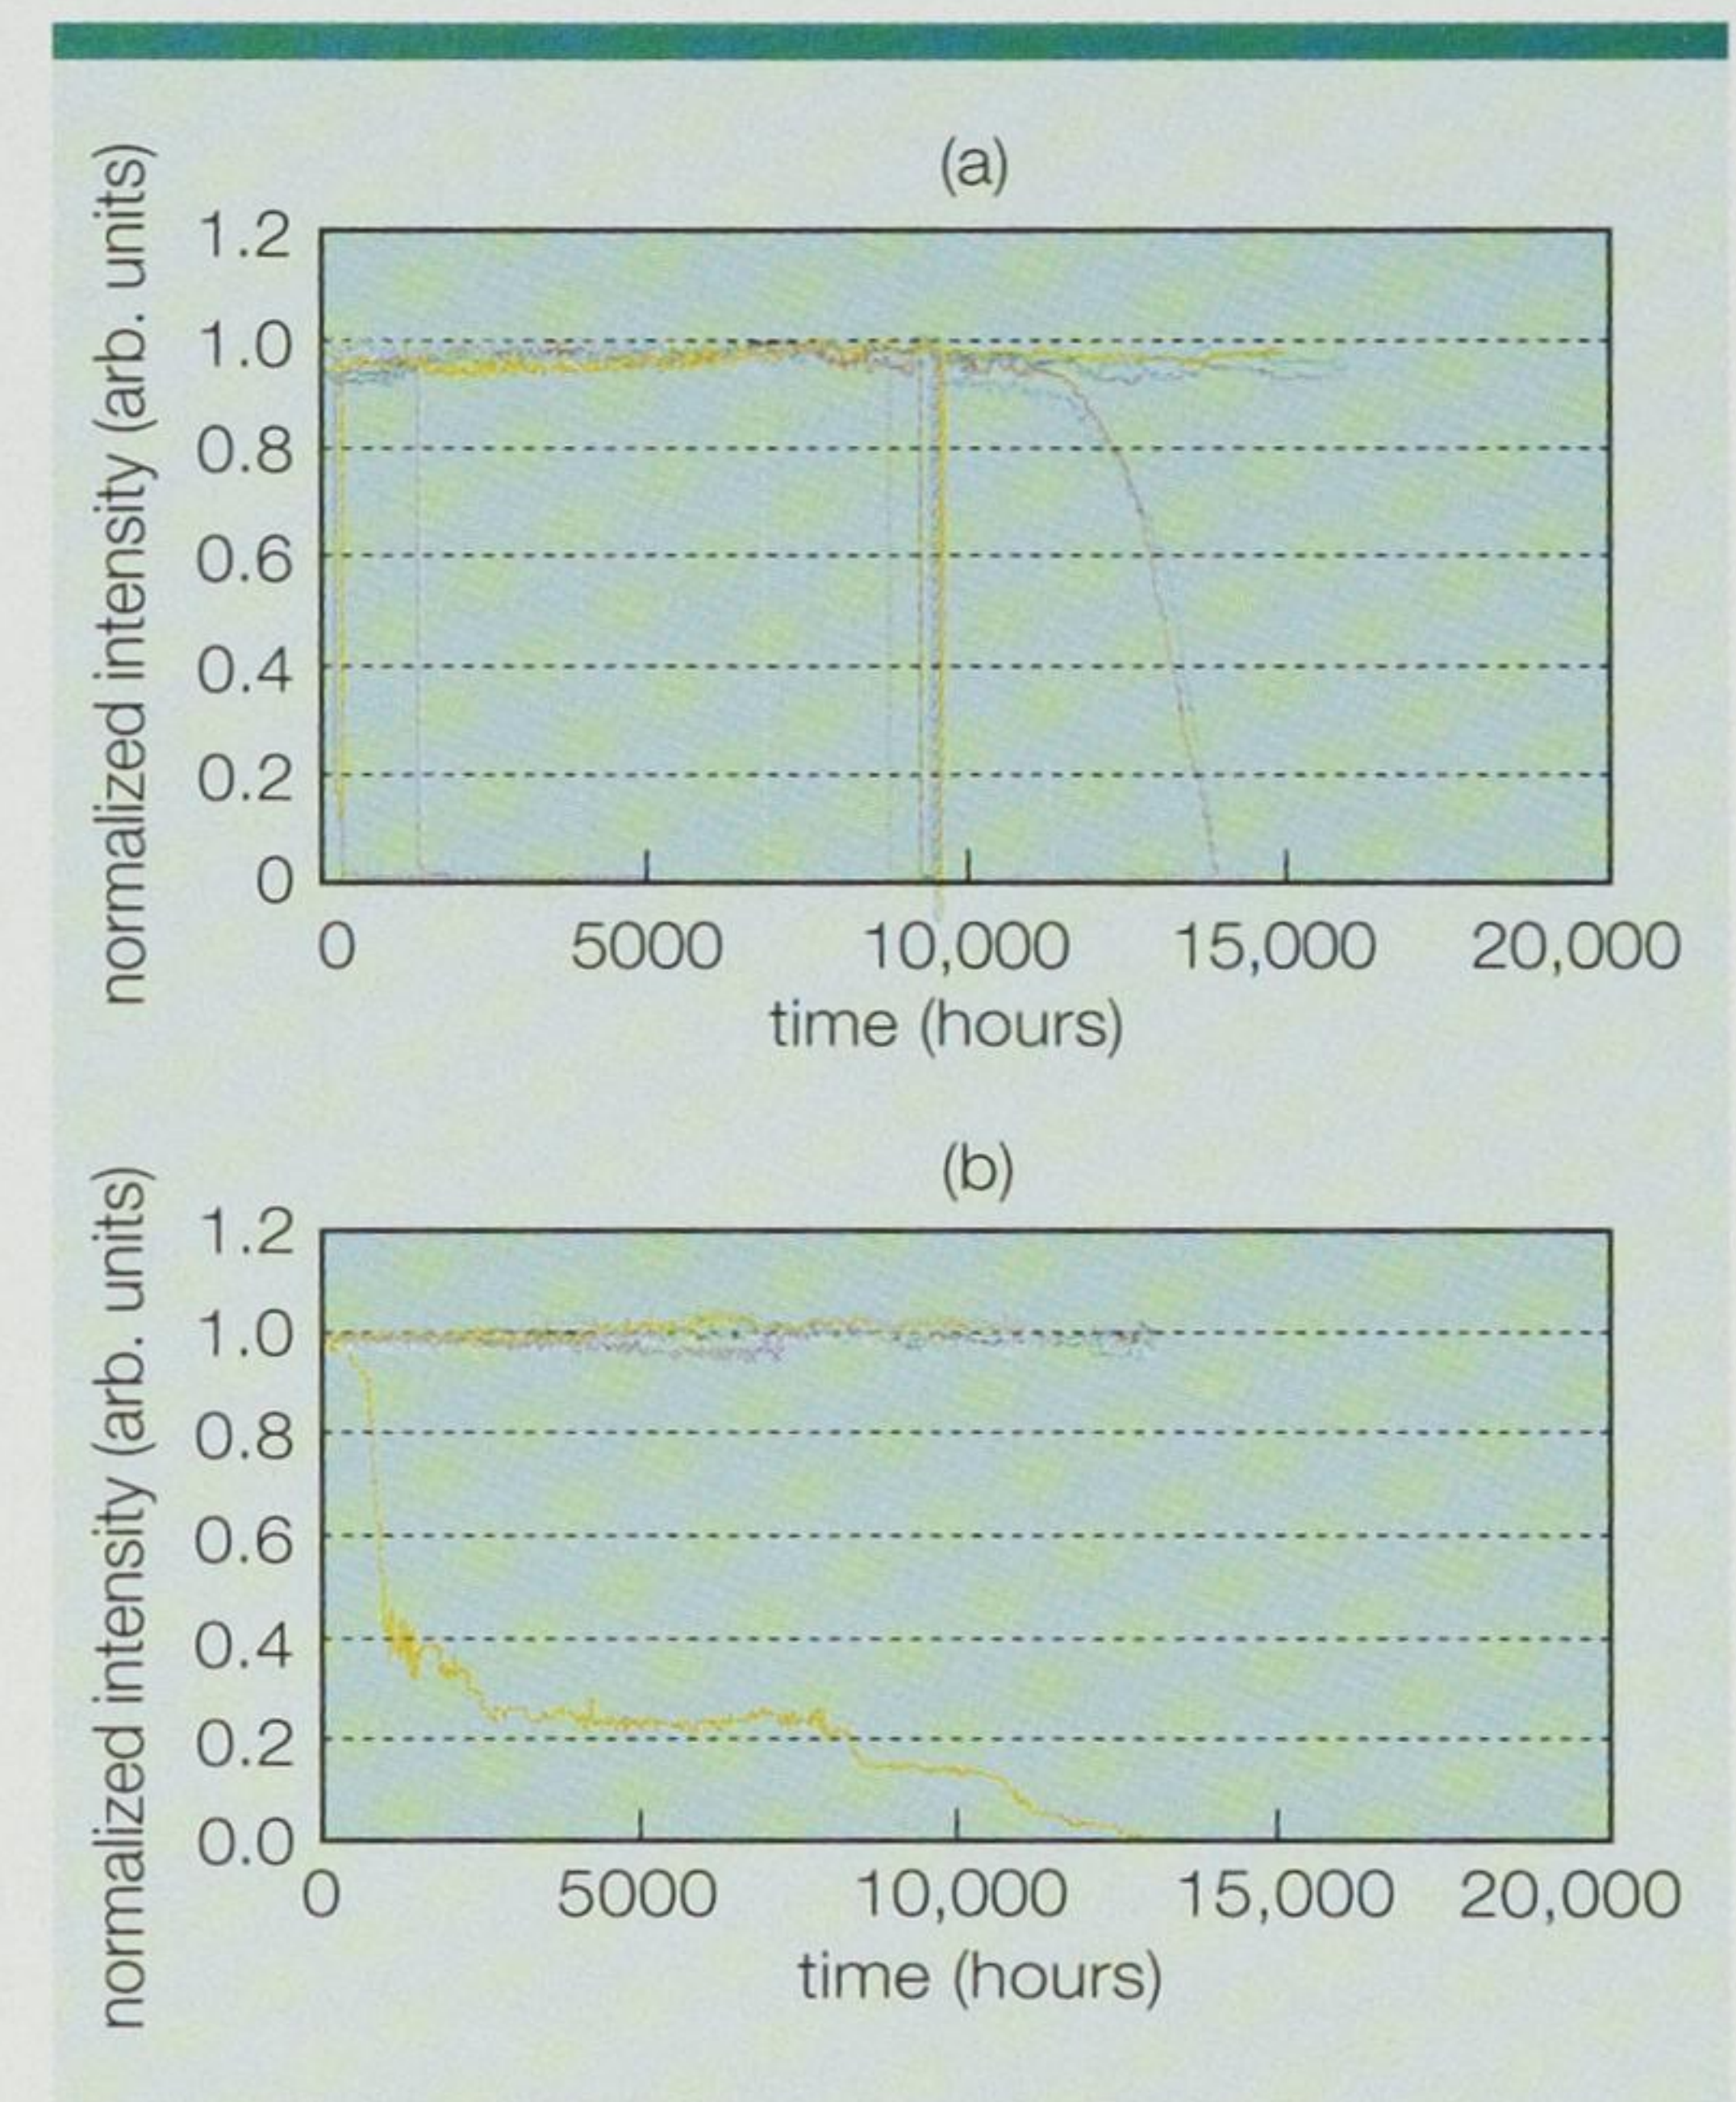


Fig. 3. (a) Cell 5 aging curves showing numerous sudden failures, and two wear-out failures with an onset around 8,000 h. (b) Cell 1 aging curves showing negligible degradation of performance and one random failure.

during the test; these occurred in the highest-temperature cell (cell 5). These two failures are plotted in figure 3a along with the 13 random failures. For comparison, figure 3b shows the plot of the lowest temperature cell (cell 1) where one random failure was observed. While the total number of wear-out failures observed is insufficient to model this failure mechanism, it can be safely assumed that the failure rate contribution due to wear-out at 4 W, 25 °C is completely negligible.

Table 2 summarizes the multicell test results at 25 °C. The acceleration model yields 377 FIT (60% confidence) at typical 4 W, 25 °C heat-sink (or $T_j = 47.9$ °C) operating conditions. The multicell model is valid to 5 W, 25 °C based on the distribution of test cells chosen. While the 5 W FIT rate is no longer telecom grade, the demonstrated mean time between failure (MTBF) of >375,000 h significantly exceeds the requirements of industrial diode applications.

While not shown in table 2, the multicell also predicts the reliability of the technology at heat-sink temperatures other than 25 °C. As a rule of thumb, $E_A = 0.43$ eV corresponds roughly to a tripling of the device failure rate with each 20 °C increase in T_j . These results are valuable to customers wishing to reduce their laser diode cooling power budget, but who still must know the resulting trade-off in laser reliability. To our knowledge, this is the only broad-area diode laser technology that has undergone a multicell test and demonstrated telecom reliability at any power level.

Non-telecom applications

As alluded to above, numerous industrial applications for broad-area laser diodes exist which tolerate sub-100,000 h MTBF. Medical and instrument applications with low duty cycles typically require only several thousand hours of diode life. Materials processing, diode-pumped solid-state lasers and printing set reliability requirement benchmarks in the 10,000–20,000 h range. To address whether yet higher output power levels are immedi-

ately available in the current 100 μm InGaAs-emitter technology, additional diodes were tested at 6 W operation. As summarized in Table 3, an MTBF value greater than 10,000 h was observed for 6 W, 35 °C operation – an acceptable level for many industrial applications. However, this value is considerably less than forecasted by equation 1, indicating that by 6 W, new failure modes not probed by the multicell test are emerging.

Conclusion

This paper presents the most detailed overview of broad-area laser reliability performed to date. The results indicate that extremely low failure rates at high output power are achievable for junction-side-down mounted broad-area lasers. Reliability studies like these allow customers to make system design trade-offs with full knowledge of how the diode lasers will perform under arbitrary output power and heat-sink temperatures. We believe that users of industrial lasers, who are adopting diode laser technology at an accelerating rate, will demand more studies of this sort. ●

Reliability at 6 W and 35 °C

heat-sink temperature (°C)	35
junction temperature (°C)	75
current (A)	7.0
average power (W)	6.0
device hours	95,208
number of diodes	58
failures	8
MTBF (hours)	11,900

Table 3. Supplemental test results to establish AlGaInAs laser diode reliability.

Victor Rossin and Erik Zucker are chip development managers. Toby Strite (toby.strite@jdsu.com) is a business development manager for active components. Teh-Hua Ju is product engineering manager for pump modules and industrial diode products. The authors all work for JDS Uniphase. The authors thank their colleagues Bruno Acklin, James Darchuk, Kevin Lascola, Gordon Mitchard, Matthew Peters and Deepika Ranaweera for their contributions to this article.

Have you ever seen our invisible star?

Select the star "NS370" from numerous stars existing in the universe.

Nitride Semiconductors Co., Ltd. manufactures Gallium Nitride based 370nm UV epitaxial wafers using our original and advanced MOCVD technology. According to global customer's requirement, we provide them with our NS370 Series as electronic component sources and parts for future eco-friendly, compact devices, which are created by customer's own idea. Our continuous research and development leads to future high technology world.

★ PRODUCTS


Ultraviolet NS370 Series(Epiwafer,chip,LED)

★ APPLICATIONS Excitation light sources and so on...

★ BENEFITS Compact,Low power consumption



★ Engineering Sample is now available.
NS365(365nm - less than 370nm)chip,LED.

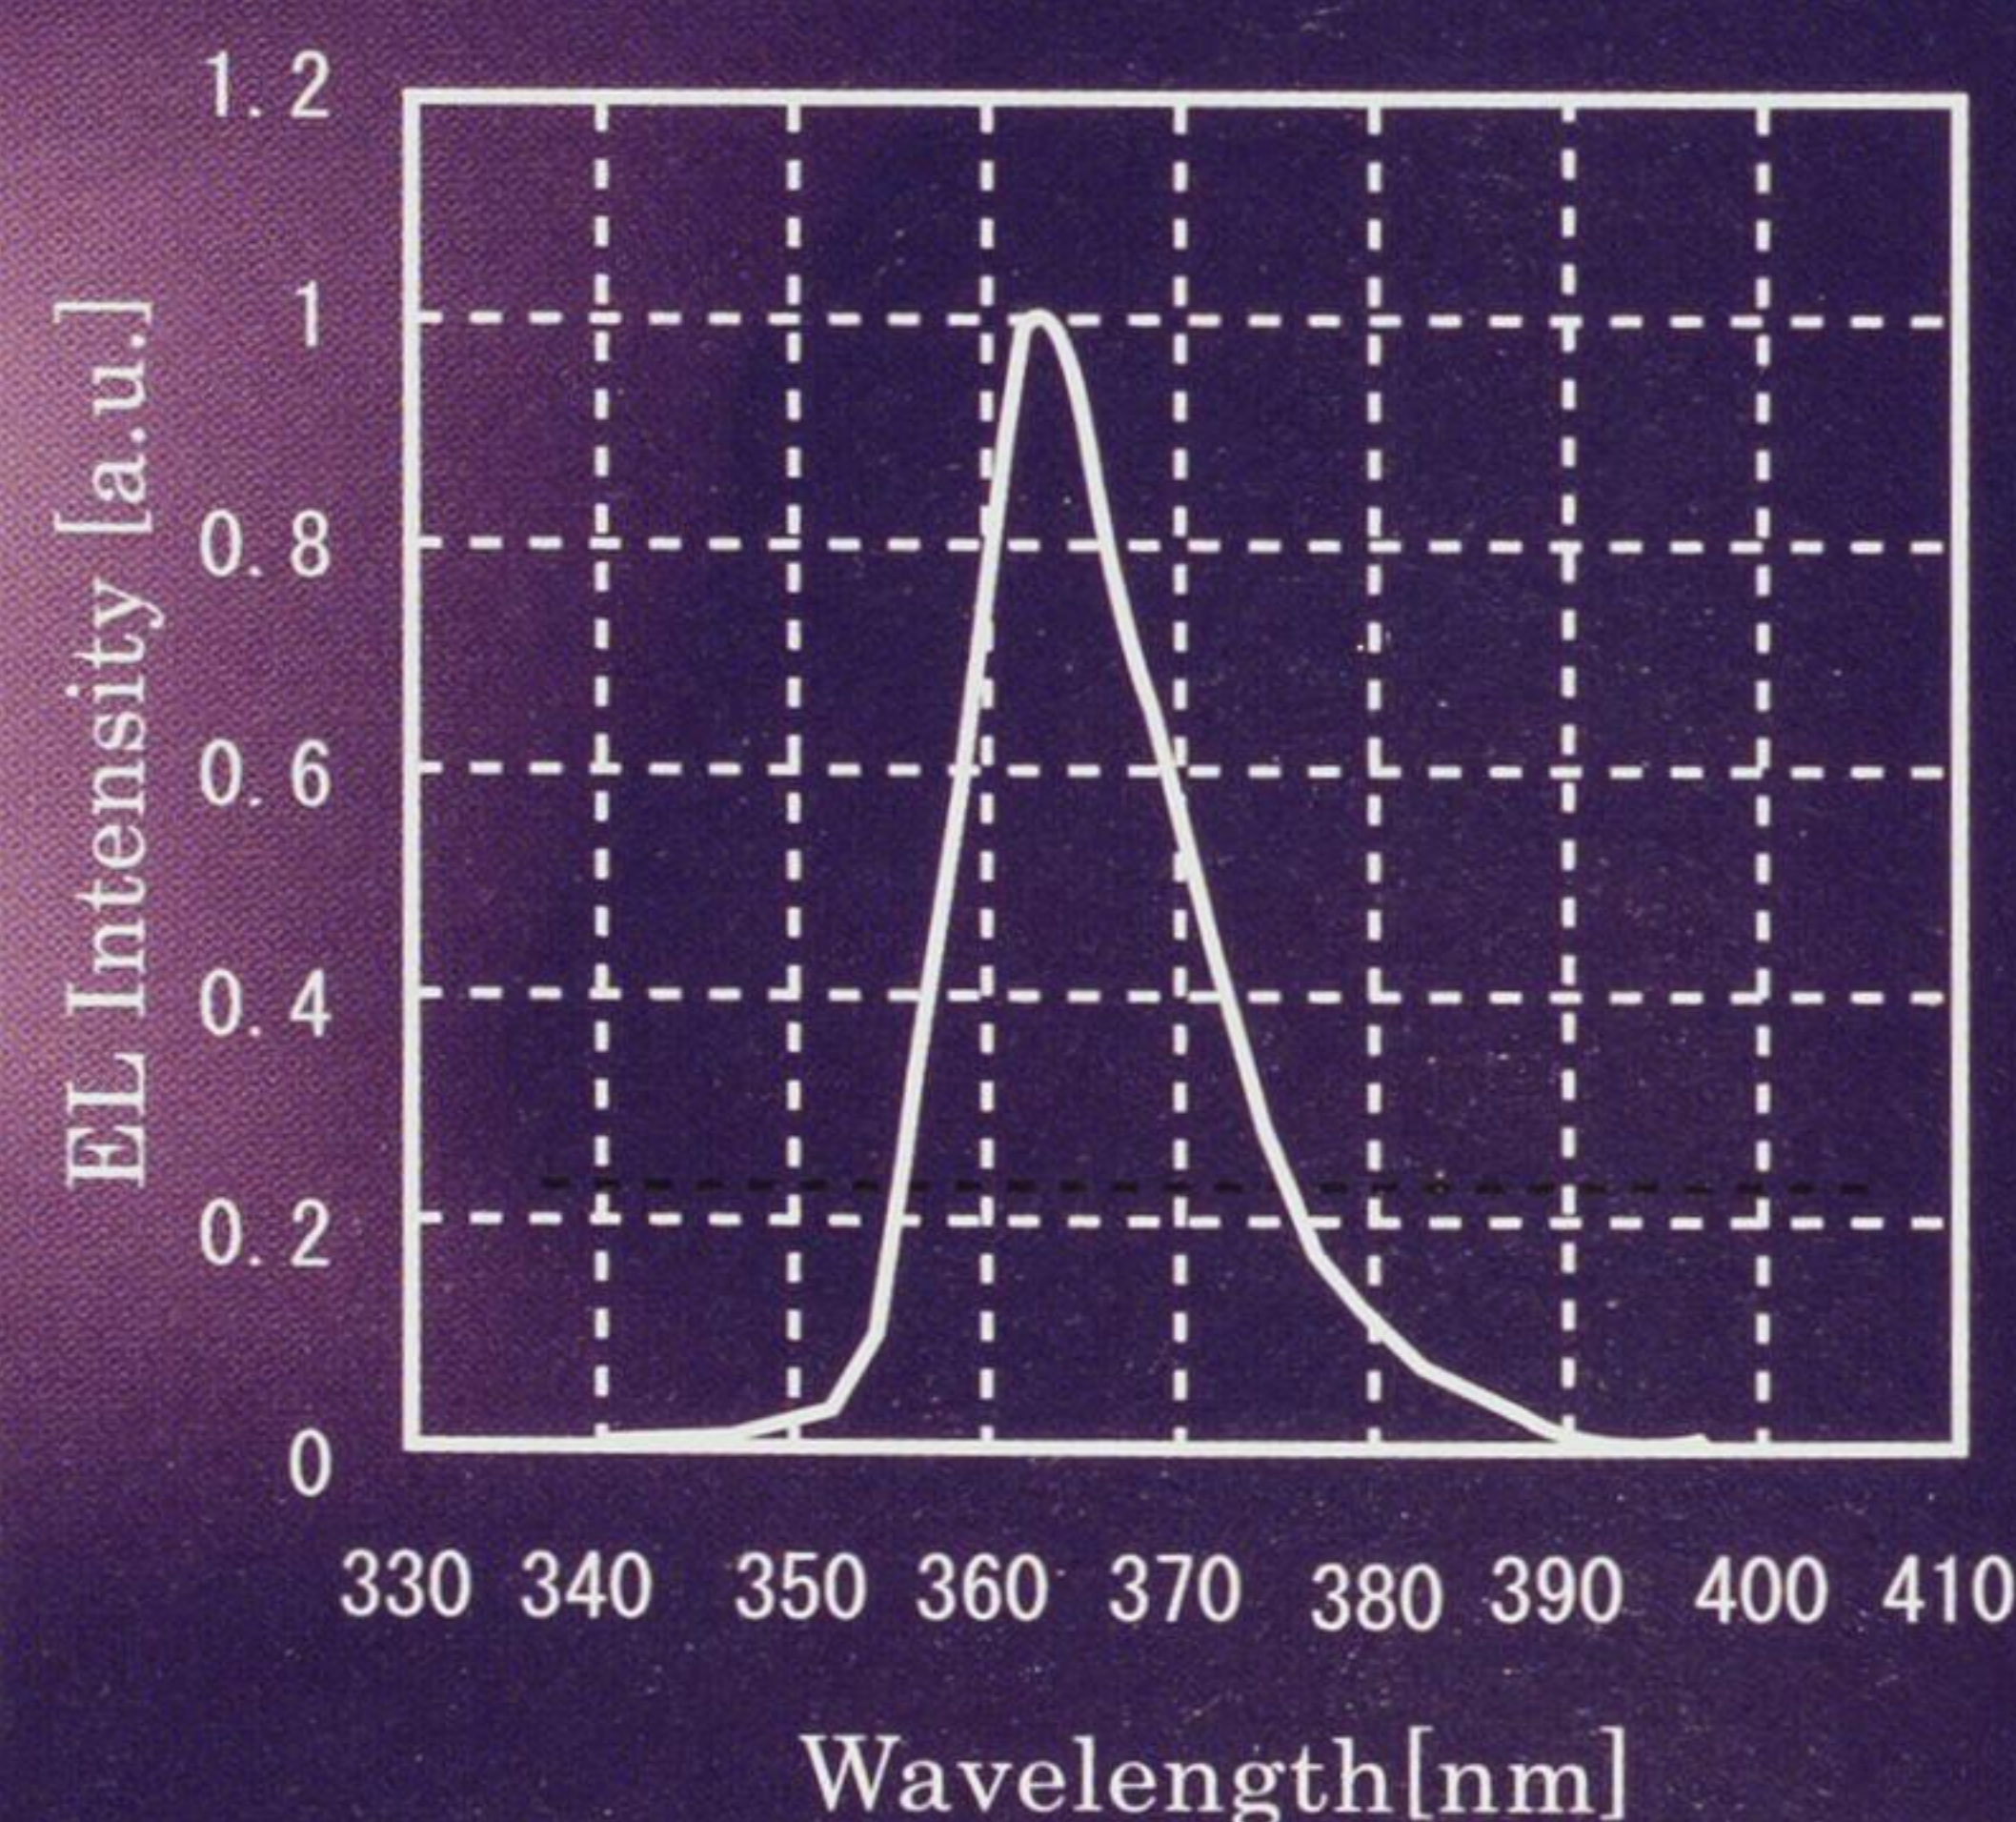

NITRIDE
SEMICONDUCTORS
Co.,Ltd.

NITRIDE SEMICONDUCTORS CO., LTD.

115-7 Itayajima, Akinokami, Seto-cho, Naruto-shi, TOKUSHIMA. 771-0360 JAPAN

TEL:+81-88-683-7750 / FAX: +81-88-683-7751

Visit at <http://www.nitride.co.jp> / Email : nitride@nitride.co.jp

DISPLAY

TAIWAN 2003

The 5th International Flat Panel Display Exposition

光電顯示器展

Exhibits

Panels

LCD (TN / STN / TFT), LED, PDP, OLED, VFD, FED, etc.

Products

Projection Display, LCD Monitor, LCD/PDP TV, LED sign system, etc.

Materials & Components

Glass Substrate, Color Filter, Photo Resist, Liquid Crystal, Polarizer, Backlight, Light Source (CCFL / LED), Light guiding plate, Diffusing sheet, Brightness Enhancement Film, Driver IC, ITO Glass, Touch Panel, Optical Engine, Lens, Spacer, Chemical, etc.

Process

Array / Panel Design, Array Process, Panel (Cell) Process, Module Process, Photo Mask Process, Color Filter Process, Inspection, Facility / Environment, etc.

Equipments

Thin Film Deposition system, Oxidation & Plasma Oxidation System, Annealer, Doping System, Cleaning Equipment, Dryer, Resist Processing Equipment, Etching System, Seal Patterning System, Liquid Crystal Filling System, Panel Beveling System / Module Assembly Equipment, Backlight Assembly Equipment, TAB / COG System, etc.

PDP/OLED Materials & Equipments



OPTO

TAIWAN 2003

The 12th International Optoelectronics Exposition

國際光電大展

Exhibits

Opto Semiconductor

Ingot, Epi Wafer, Chip, LED, Laser Diode, HBT, HEMT, SiGe, etc.

Optical Detector

Image Sensors (CMOS / CCD / CIS), IR / UV Sensor, Solar Cell, etc.

Optics

Glass, Lens / Mirror / Prism / Filter, etc.

Optical Storage

Optical Disk, Optical Disk Drive (DVD / CD), Pick-up Heads, Spindle Motor, IC (Controller / Decoder).

Optical I/O

Digital Still Camera, Digital Video Camera, Facsimile, Image Scanner, Bar Code Reader, Laser Printer, etc.

Laser & Application

Lasers, Holograph, Laser Pointer, Laser Levels, Laser Processing Equipment, Laser System for Medical Applications, etc.

Coating & Vacuum

Instruments & Equipment

Measurement, Test, Inspection, etc.



OPTOCOM

TAIWAN 2003

The 2nd Int'l Fiber Communication & Broadband Exposition

光通訊寬頻展

Exhibits

Optical Fiber & Cable

Passive Components

Optical Collimator, Optical Connector, Fiber Coupler, Optical Attenuator, Optical Isolator, Modulator, DWDM / CWDM Filter, Grin Lens, Thin Film Filter, Birefractive, Crystal, etc.

Active Components

Laser diode, Optical sub-assembly, Tunable laser, Pump laser, Transceiver, etc.

Optical Measuring & Inspections

Broadband service & Equipment

LAN Equipment, Subscriber Equipment, Access Equipment, Transport Equipment, Switch Equipment, Test Equipment, Service Provider, etc.

Others

Publication, Software, etc.



JULY 23 (Wed) - **26** (Sat), **2003**
9:00 a.m. ~ 5:00 p.m.

Taipei World Trade Center
No.5 Hsin-yi Rd., Sec. 5, Taipei, Taiwan

Concurrent Conference

CLEO®/ Pacific Rim '03

The 5th Pacific Rim Conference
on Lasers and Electro-Optics
July 22-26, 2003

Taipei International Convention Center



財團法人光電科技工業協進會

Photonics Industry and Technology Development Association

Tel: 886-2-23514026 Fax: 886-2-23968513 <http://www.pida.org.tw>

Contact: Ms. Sephony Chang (ext.806) E-mail: sephony@mail.pida.org.tw

Qualification

Quantities of TBP


Now Available.

Hall Data

($>100,000 \text{ cm}^2/\text{Vs}$)

at 77K in InP)

www.metalorganics.com

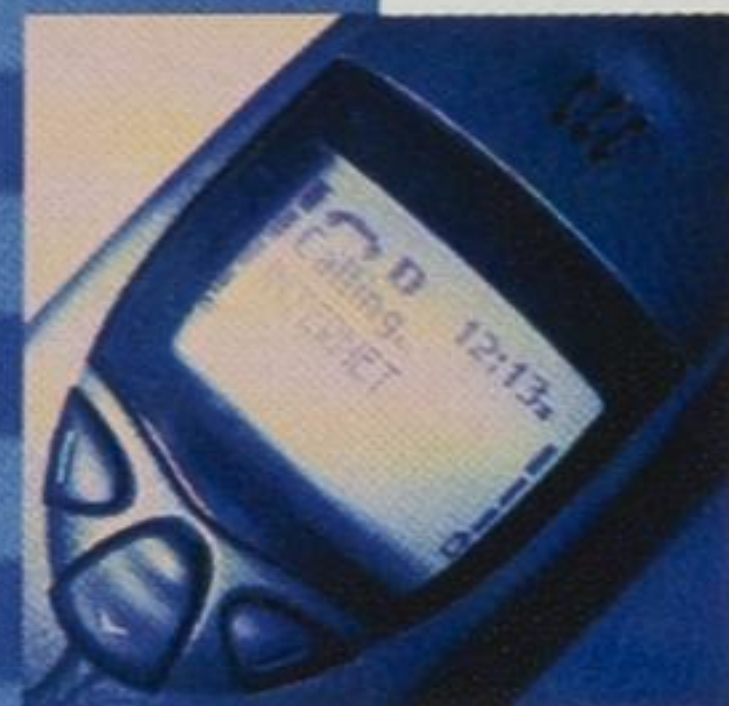

ShipleY Metalorganics

SOURCES FOR SUPERIOR DEVICESSM

WE DELIVER

Performance

Epi-certified TMGa,
TMIn and TMAI.

WE PROVIDE

Consistency

Highest purity with
every cylinder.

WE GUARANTEE

Service

Unsurpassed technical
and customer service.

 **SHIPLEY**
A ROHM AND HAAS COMPANY

North America

ShipleY Company, L.L.C.
60 Willow Street
North Andover, Massachusetts
01845 USA
Tel: 978-557-1700
Fax: 978-557-1701

Taiwan

ShipleY Taiwan Company Ltd.
No. 6 Lane 280
Chung Shan North Road
Ta Yuan Industrial Zone
Ta Yuan Hsiang
Taoyuan Hsien, Taiwan
Tel: 886-3-385-8000
Fax: 886-3-385-5989

Japan

ShipleY Far East Ltd.
Sanbancho UF Building
6-3, Sanbancho
Chiyoda-ku
Tokyo 102-0075 Japan
Tel: 81-3-5213-2924
Fax: 81-3-5213-2948

Europe

ShipleY Europe Ltd.
La Tour de Lyon
185 Rue de Bercy
75012 Paris, France
Tel: 33-1-40-02-54-37
Fax: 33-1-40-02-54-07

South Korea

ShipleY Korea Ltd.
Kyungmok B/D 3F
1354-5, Seocho-dong
Seocho-ku
Seoul 137-070 Korea
Tel: 82-2-3474-2179
Fax: 82-2-3487-1767

Near-IR focal-plane arrays improve camera performance

The recent improvement in performance of InGaAs-based detectors and cameras has opened up a wide range of applications, according to **Austin Richards** of Indigo Systems.

Advances in focal-plane array (FPA) design, along with the availability of higher quality III-V material, have enabled the fabrication of high-performance, commercial 2D arrays using InGaAs photovoltaic detectors. These advanced InGaAs FPAs have become instrumental in the creation of highly sensitive near-infrared (NIR) cameras that deliver excellent image quality, rivaling that associated with silicon CCD detectors, but with a spectral sensitivity that is shifted into the NIR band, from 900 to 1700 nm.

The ability to produce high-quality images of objects in the 900–1700 nm waveband with high sensitivity opens up a range of applications, including laser-beam characterization, agricultural and petrochemical inspection, forensics, NIR imaging spectroscopy and astronomy. InGaAs detectors offer high quantum efficiencies (around 85%) in the 900–1680 nm band, unlike the competing technologies of lead-oxysulfide vidicons and coated CCD cameras. At wavelengths longer than 1100 nm silicon becomes transparent, making silicon-based cameras ineffective unless coated with a wavelength-shifting material. This coating results in a quantum efficiency of about 1–2% in the 1100–1700 nm band, which is useful in laser-beam profiling applications where intensities are high, but not in many other applications.

High sensitivity is important, since NIR scenes often span a wide dynamic range and light signals can be quite low in intensity, especially in NIR imaging spectroscopy where only a small portion of the InGaAs sensors' passband is admitted. InSb FPAs have high quantum efficiency in the NIR band, but require cooling to cryogenic temperatures using mechanical cryocoolers that cost about \$10,000. Their spectral response is from 1 to 5.5 μm , so the sensor must be combined with a bandpass filter to make a camera that operates solely in the NIR band. Because the bandgap energy of InGaAs is much higher than InSb, InGaAs FPAs can operate at temperatures around ambient (25 °C) with noise

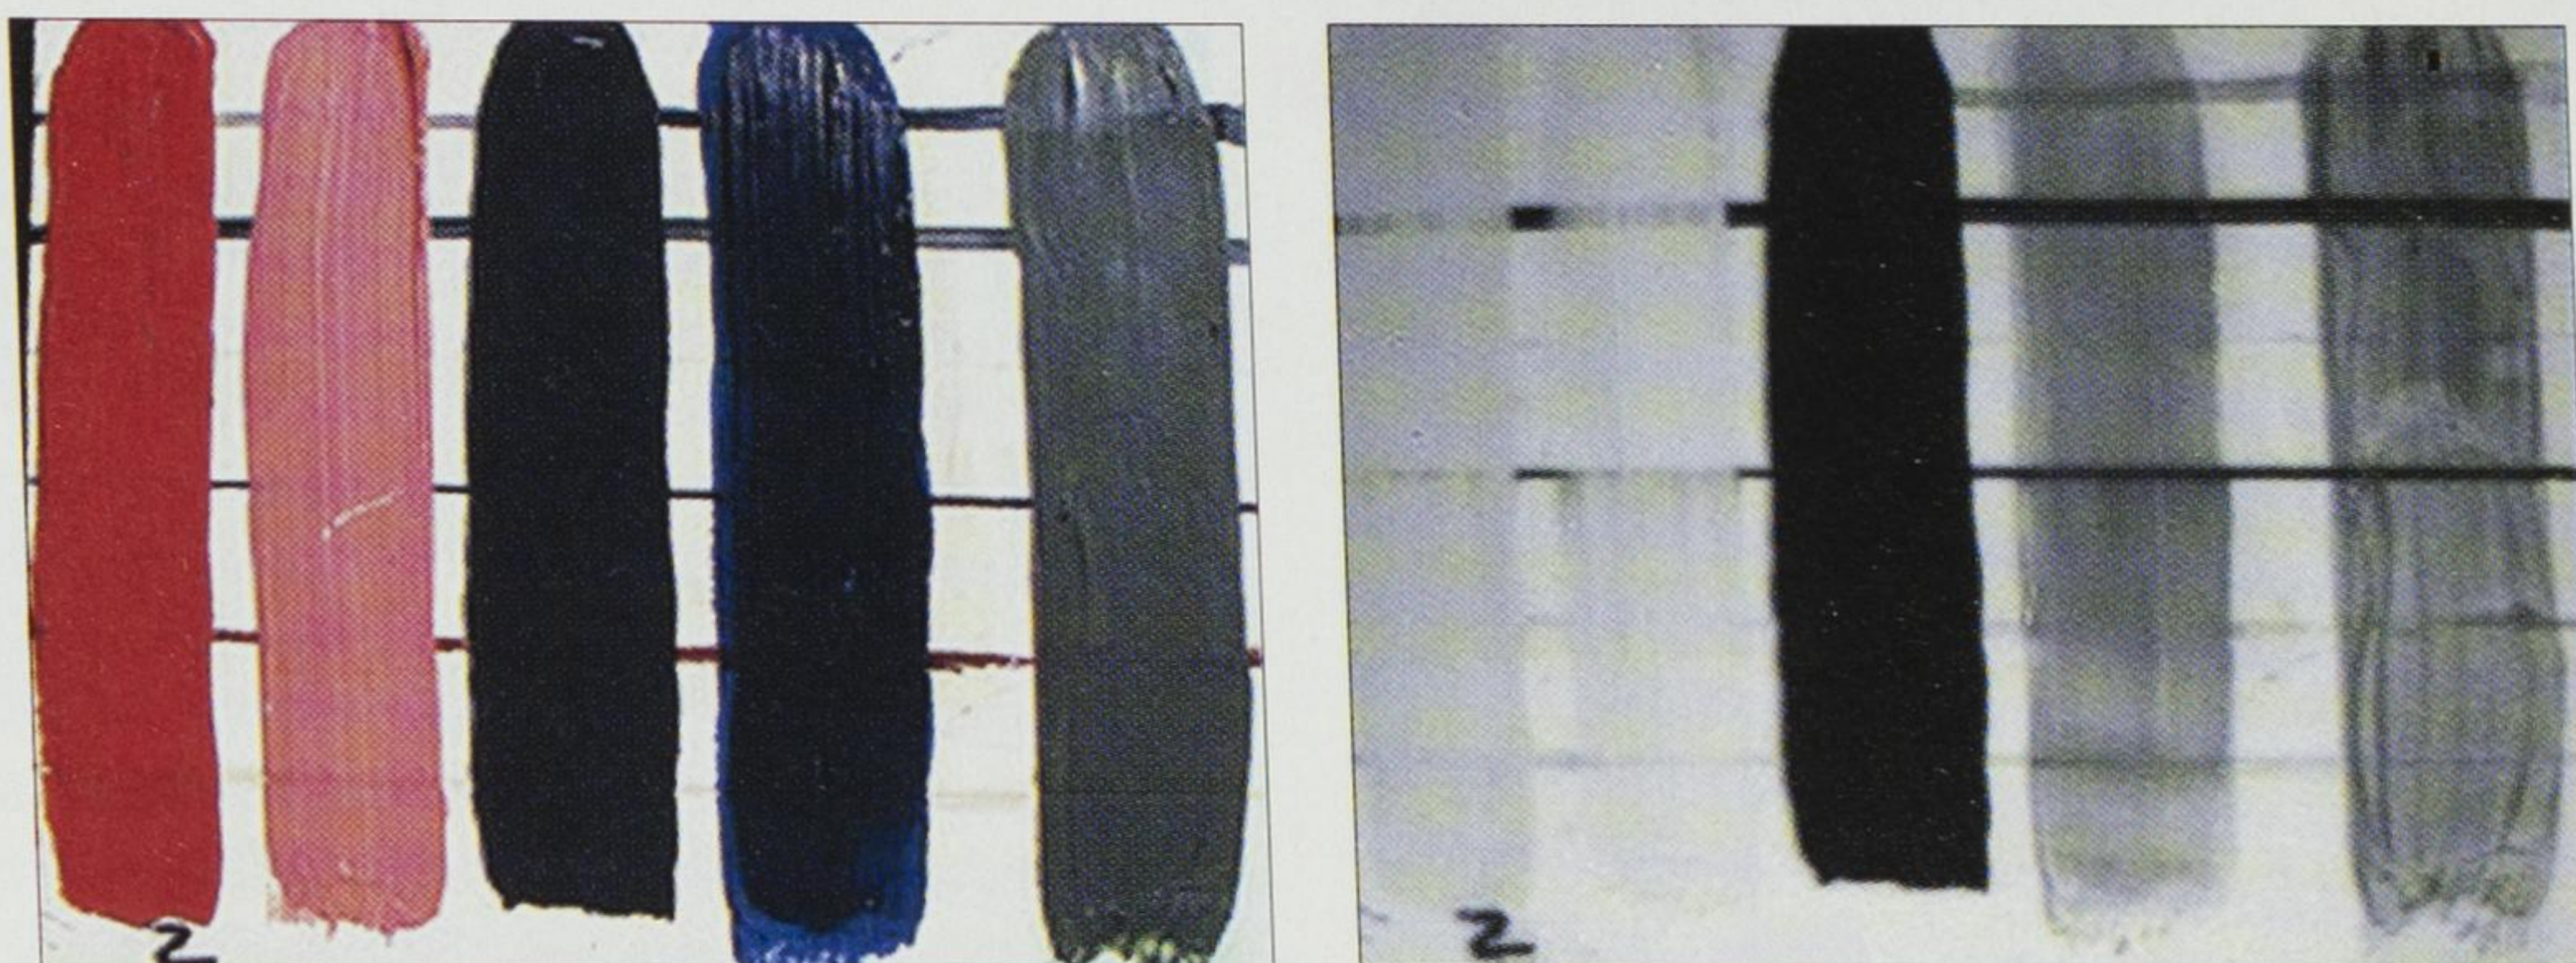


Fig. 1. An oil-paint test panel imaged with visible (left) and NIR (right) sensors. All the pigments except black show a degree of transparency in the NIR (900–1700 nm) band.

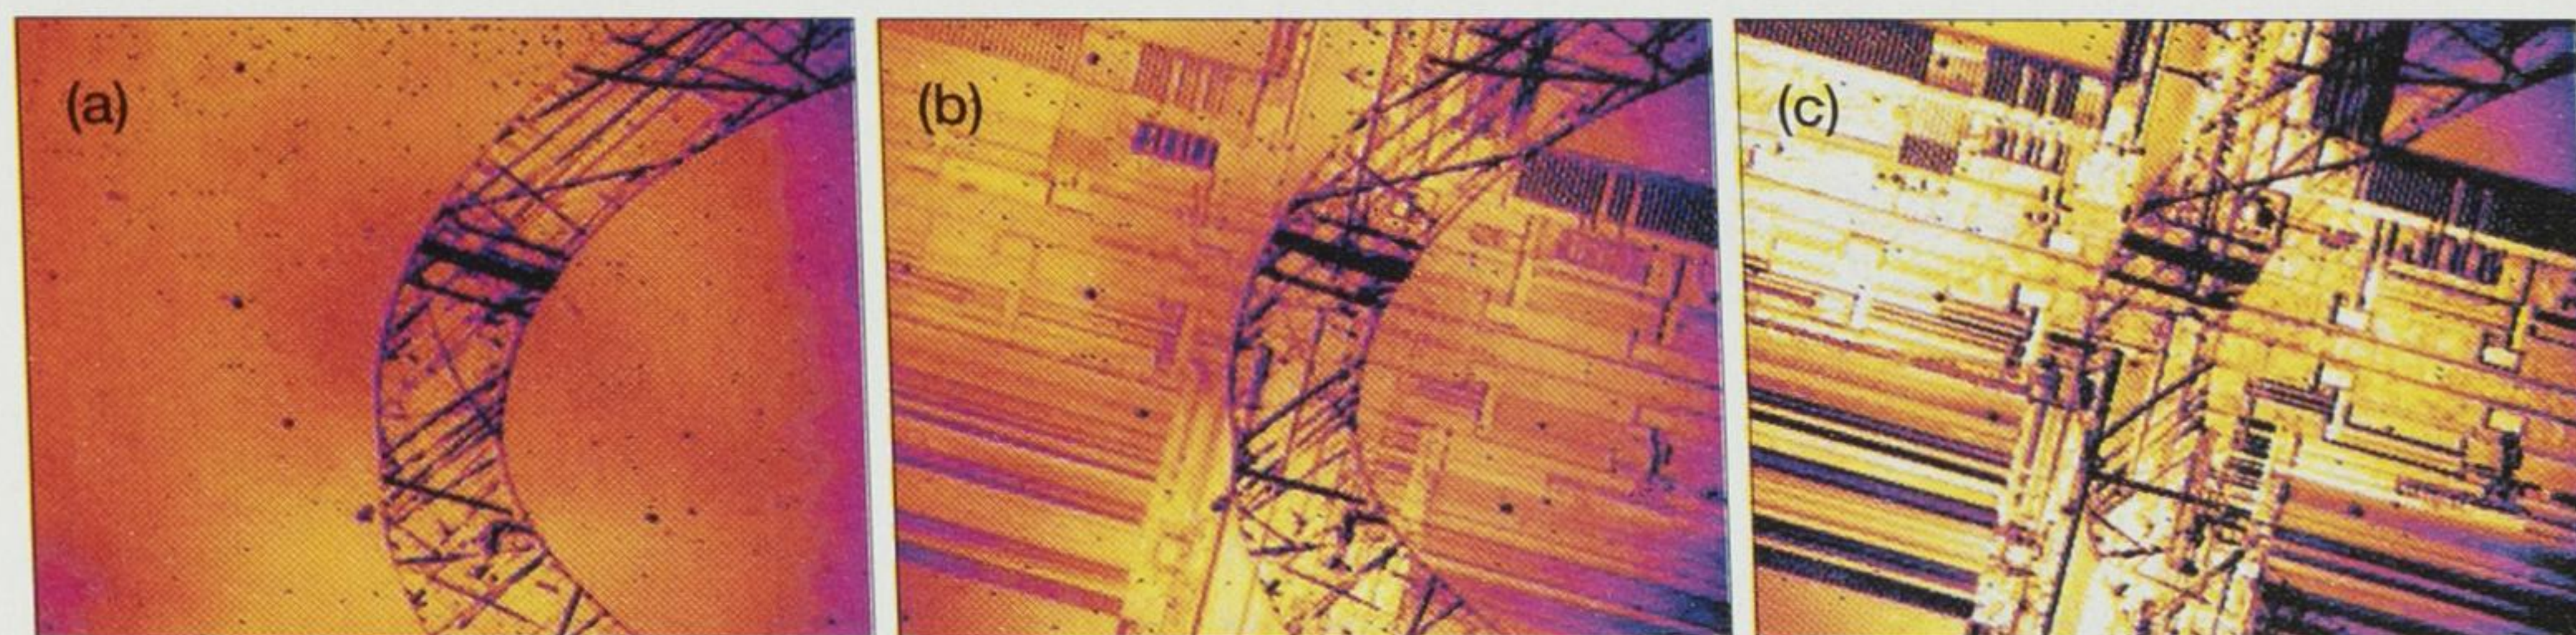


Fig. 2. Three images through the backside of a CMOS readout IC wafer taken with an InGaAs camera with filters at 1000 nm (a), 1050 nm (b) and 1100 nm (c).

performance comparable to InSb sensors at liquid-nitrogen temperatures. The thermoelectric coolers cost about \$20, making the overall camera cost much lower.

The FPA sandwich

The FPAs are made from InGaAs photodiode arrays fabricated on 3 inch, MOCVD-grown InGaAs-on-InP epiwafers. The $30 \times 30 \mu\text{m}^2$ detectors are made by diffusing zinc (a p-type dopant) through a diffusion mask and into an n-type (S- or Si-doped) InGaAs epilayer. After forming ohmic contacts, a total of 82,000 truncated-cone-shaped bumps of indium are deposited onto the contact metal pads to make a 320×256 pixel array. The same number of indium bumps are deposited onto a silicon mixed-signal IC die, which Indigo Systems designs and offers as a standard readout IC (ROIC) product.

After a proprietary cleaning process, the indium bumps on the InGaAs detector dies are fused to the bumps on the ROIC wafer under pressure in a cold-forming process. The technicians probe the ROIC bond pads and check for operational hybrid interconnection, before wire-bonding the FPA to a motherboard inside a dewar package.

The combination of an anti-reflection (AR) coating on the BK-7 glass or quartz window of the package, and an AR coating deposited directly on the detectors, results in extremely high transmissivity in the 1300–1550 nm range. The vacuum package also incorporates thermoelectric cooling to stabilize the FPA at an appropriate operating temperature, typically between 0 and 20 °C.

The FPAs that are incorporated into cameras have 99.5% operability and few cluster defects. In addition, algorithms have been

Manufacturer
of Molybdenum
Components for MBE.

Specialized Cleaning
& Degassing available

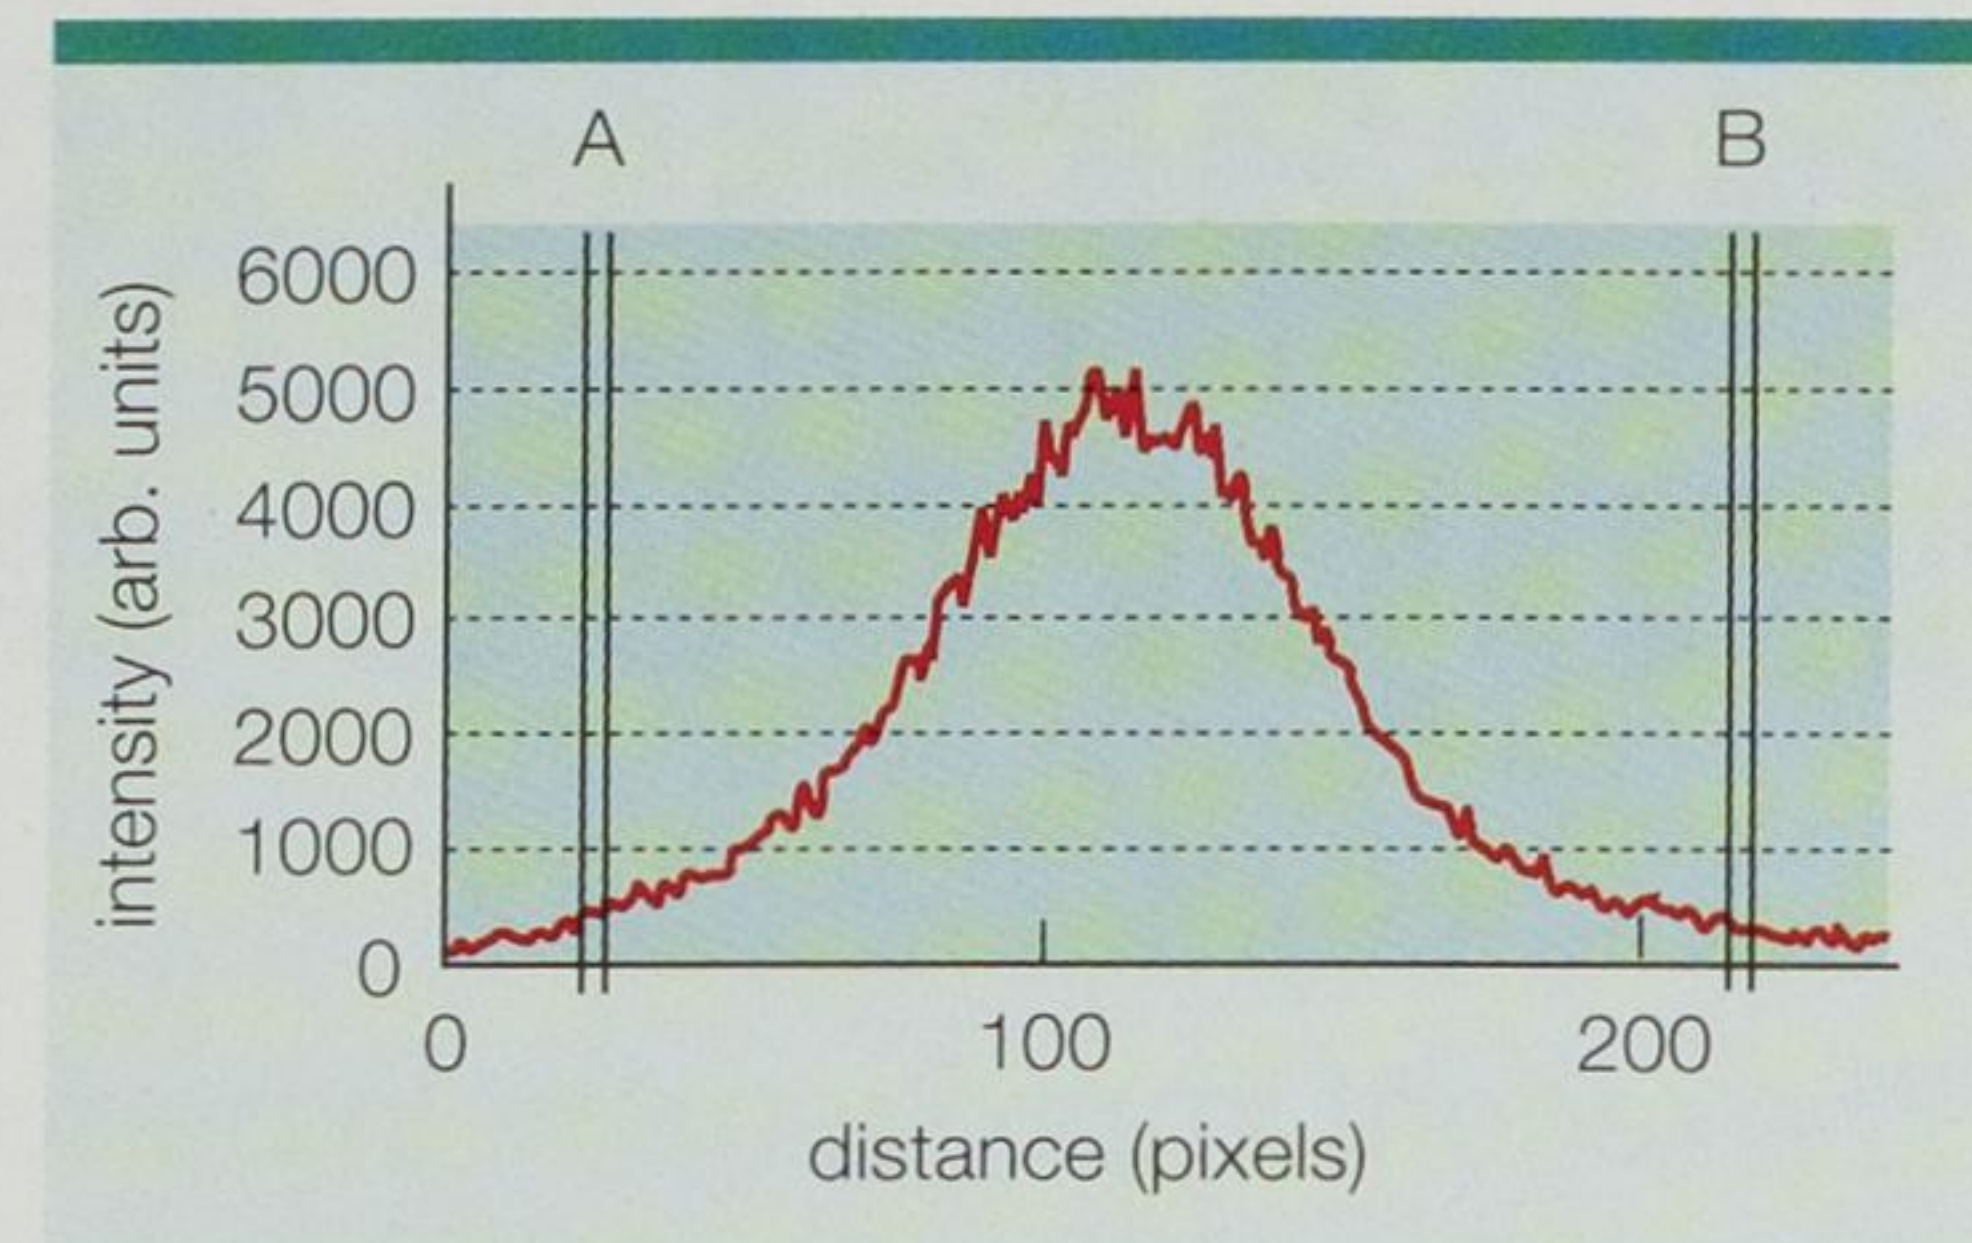
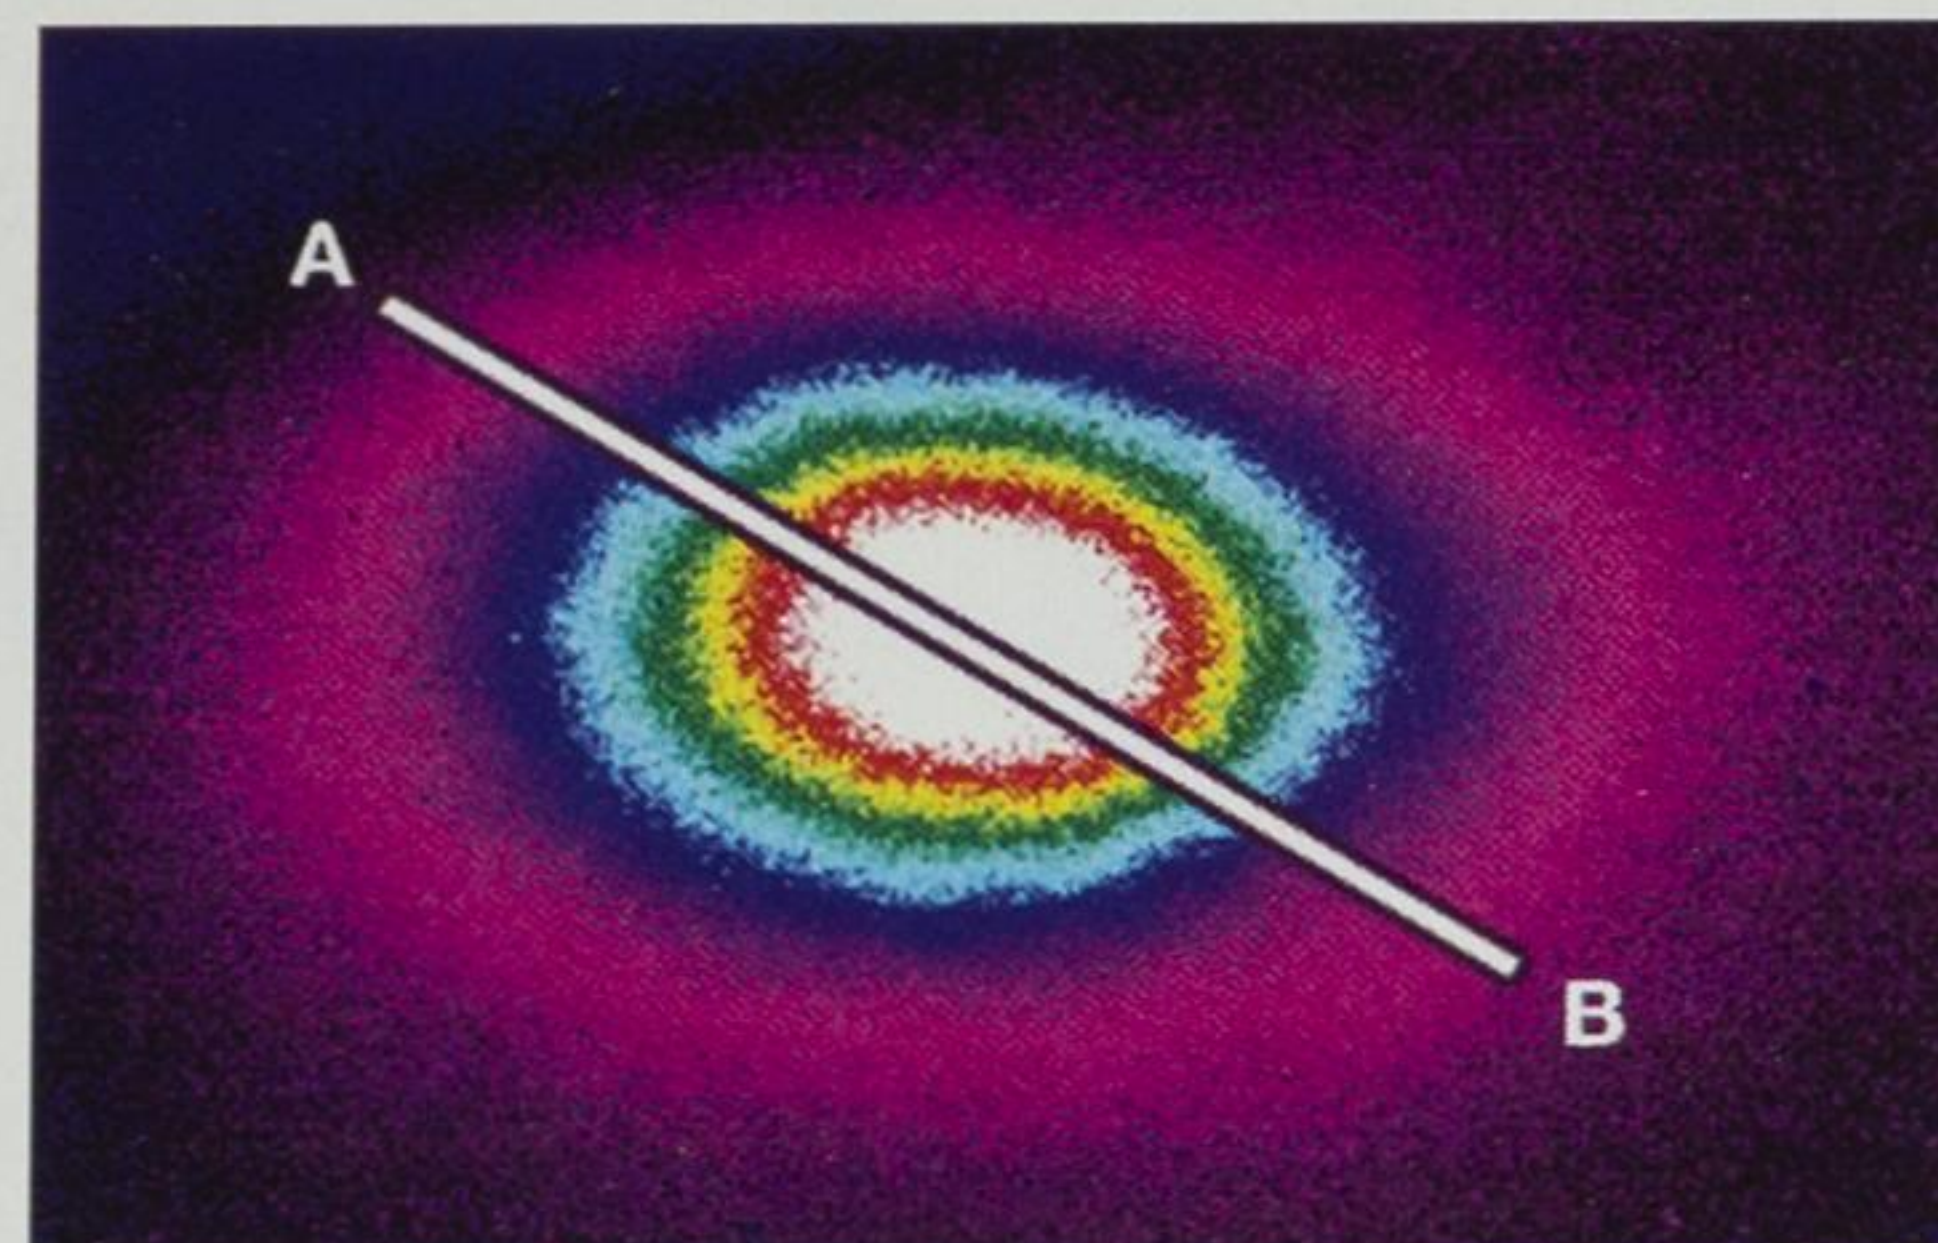


Fig. 3. Cross-sectional image of a 1550 nm laser beam (left), along with an intensity profile that corresponds to the diagonal line over the beam spot (right).



Fig. 4. Image from an InGaAs camera with a 900–1000 nm filter (a) and a 1400–1600 nm filter (b). The third image (c) shows the difference between the other two images, false-colored in red and overlaid onto (a). Exposed skin and vegetation are clearly apparent.

developed that substitute neighboring good pixels for the few isolated bad pixels. These semiconductor and software advancements result in an image quality that competes favorably with silicon CCD detectors.

InGaAs camera performance

Because Indigo Systems designs and fabricates its own ROICs and detectors, and then integrates them into its line of cameras, the company controls the supply chain, assuring that the FPAs have an ROIC optimized for use with InGaAs detectors. One of the ROIC chips used with InGaAs detectors – the ISC9809 – is designed for ultra-low-noise operation in very-low-background applications, i.e. environments in which there is a very weak signal from the target object. The ISC9809 has the additional feature that the integration capacitor used in each unit cell on the focal plane is selectable, enabling 20 times gain changes without appreciable noise increases. Indigo Systems manufactures three varieties of InGaAs cameras. The highest performance camera is the Phoenix, which has a 14-bit dynamic range in its A/D converter. This enables the user to select exposure times as short as several microseconds and as long as 660 ms – a change in sensitivity of approximately five orders of magnitude. The on-chip gain can also be switched by a factor of 20. The tremendous operational range of camera sensitivity means that the camera can be used

both for the extremely low light levels typical of applications in astronomy, and for the high-brightness conditions encountered in laser-beam measurement.

The ISC9809 FPA has four separate outputs, and can stream image data at rates up to 40 megapixels per second into a computer. This corresponds to frame rates of 346 Hz at the full 320×256 array size, enabling high-time-resolution recording of very dynamic events such as missile launches and explosions. In one embodiment of the Phoenix camera system, two serial data links transmit image data from the camera to a PC equipped with a special frame grabber board and 1 gigabyte of RAM, allowing large data bursts to be acquired. A new version of the Phoenix camera contains a 640×512 pixel InGaAs array for applications needing higher sensor resolution.

Unmasking art forgeries

Art dealers, museums and collectors now have a new tool to protect themselves from multi-million dollar liabilities caused by elaborate forgeries. Works of art can be authenticated by imaging through surface pigments to detect the presence of any “underdrawings” beneath the top layer. The art conservator can thus verify that the style of the underdrawing matches that of the artist’s other works, and can also detect the possible existence of another painting beneath. Silicon CCD detectors have historically been used to image through art

...
RABOUTET S.A.

250, av. Louis-Armand - Z.I. des Grands-Prés
B.P. 31 - F 74301 CLUSES Cedex - FRANCE
Tel. : 33 (0)4 50 98 15 18 - Fax 33 (0)4 50 98 92 57
e-mail : info@raboutet.fr - <http://www.raboutet.fr>

Representative office in : BOSTON
Component Sources Int'l, Inc.
Steve DOODY Tel. (508) 485 - 5999
e-mail : steved@compsources.com

materials such as dirty varnish that can obscure the painting, but standard silicon detectors begin to lose their effectiveness at about 1000 nm, and cut off completely at 1100 nm. In contrast, InGaAs sensors can be used to view through traditional paint pigments, which exhibit a high degree of transparency at wavelengths longer than 1100 nm.

Figure 1 shows an oil pigment test panel imaged with visible and NIR sensors. The horizontal black lines are made by a variety of media, including pencil and charcoal. All the pigments show some degree of transparency in the 900–1680 nm band, with the exception of the black pigment, which contains carbon particles that are highly absorbing across the NIR band. Imaging through black pigment requires X-ray techniques.

Semiconductor wafer inspection

NIR cameras using InGaAs FPAs are also proving useful for inspecting semiconductor wafers because the cameras deliver accurate images of wafer surface features, even though the images are taken looking at the backside of the wafer. The underside is opaque to visible light, but the silicon becomes transparent at wavelengths longer than 1100 nm. The transition from opacity to transparency is fairly gradual for some silicon wafers bearing CMOS circuits, occurring over a span of 100 nm in wavelength. Figure 2 shows three images of a silicon wafer with CMOS read-out ICs fabricated onto it. The images are taken through the wafer's backside. The InGaAs camera is fitted with one of three bandpass filters (20 nm FWHM), having center wavelengths of 1000 nm, 1050 nm and 1100 nm, respectively.

The black line in the 1000 nm image is an ink mark made on the wafer's surface. The circuitry is barely visible through the silicon at this wavelength. But at 1050 nm and 1100 nm, progressively deeper layers of circuitry are exposed. The selective use of bandpass filters, coupled with an optical system with small depths of field, helps to enable the construction of a 3D characterization of a wafer, which has potential applications in the wafer inspection field. Voids and cracks within the wafer's volume can be detected and their position in X, Y and Z co-ordinates can be determined.

Optical device characterization

Manufacturing 1300 and 1550 nm lasers requires precise measurements of the spatial distribution of the laser energy in order to efficiently couple that energy into a fiber,

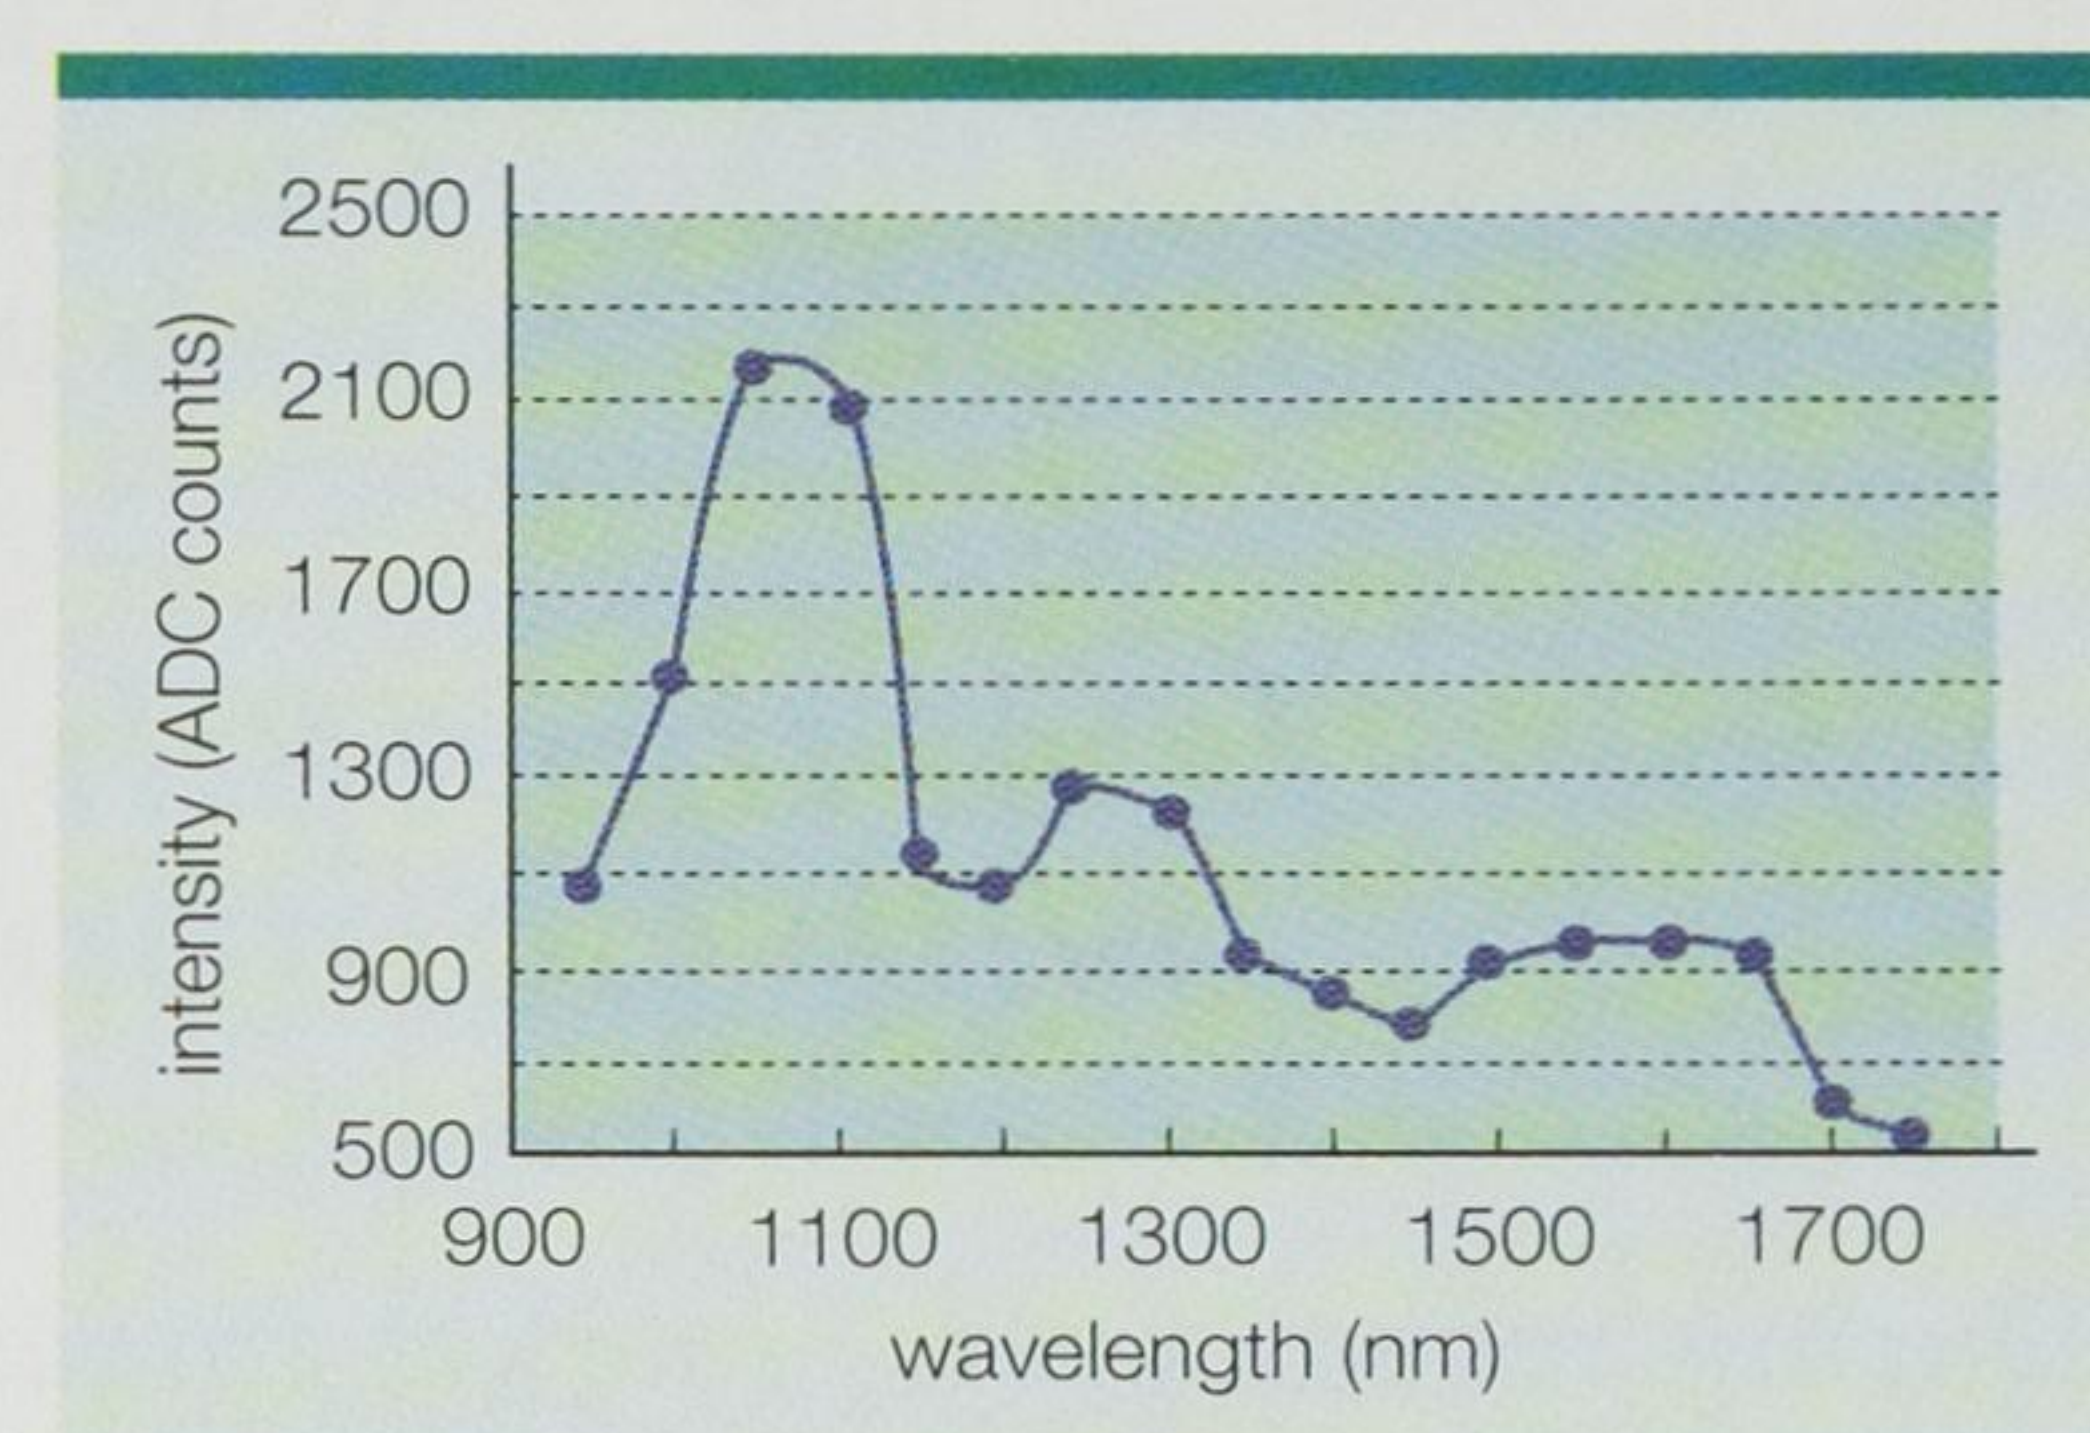
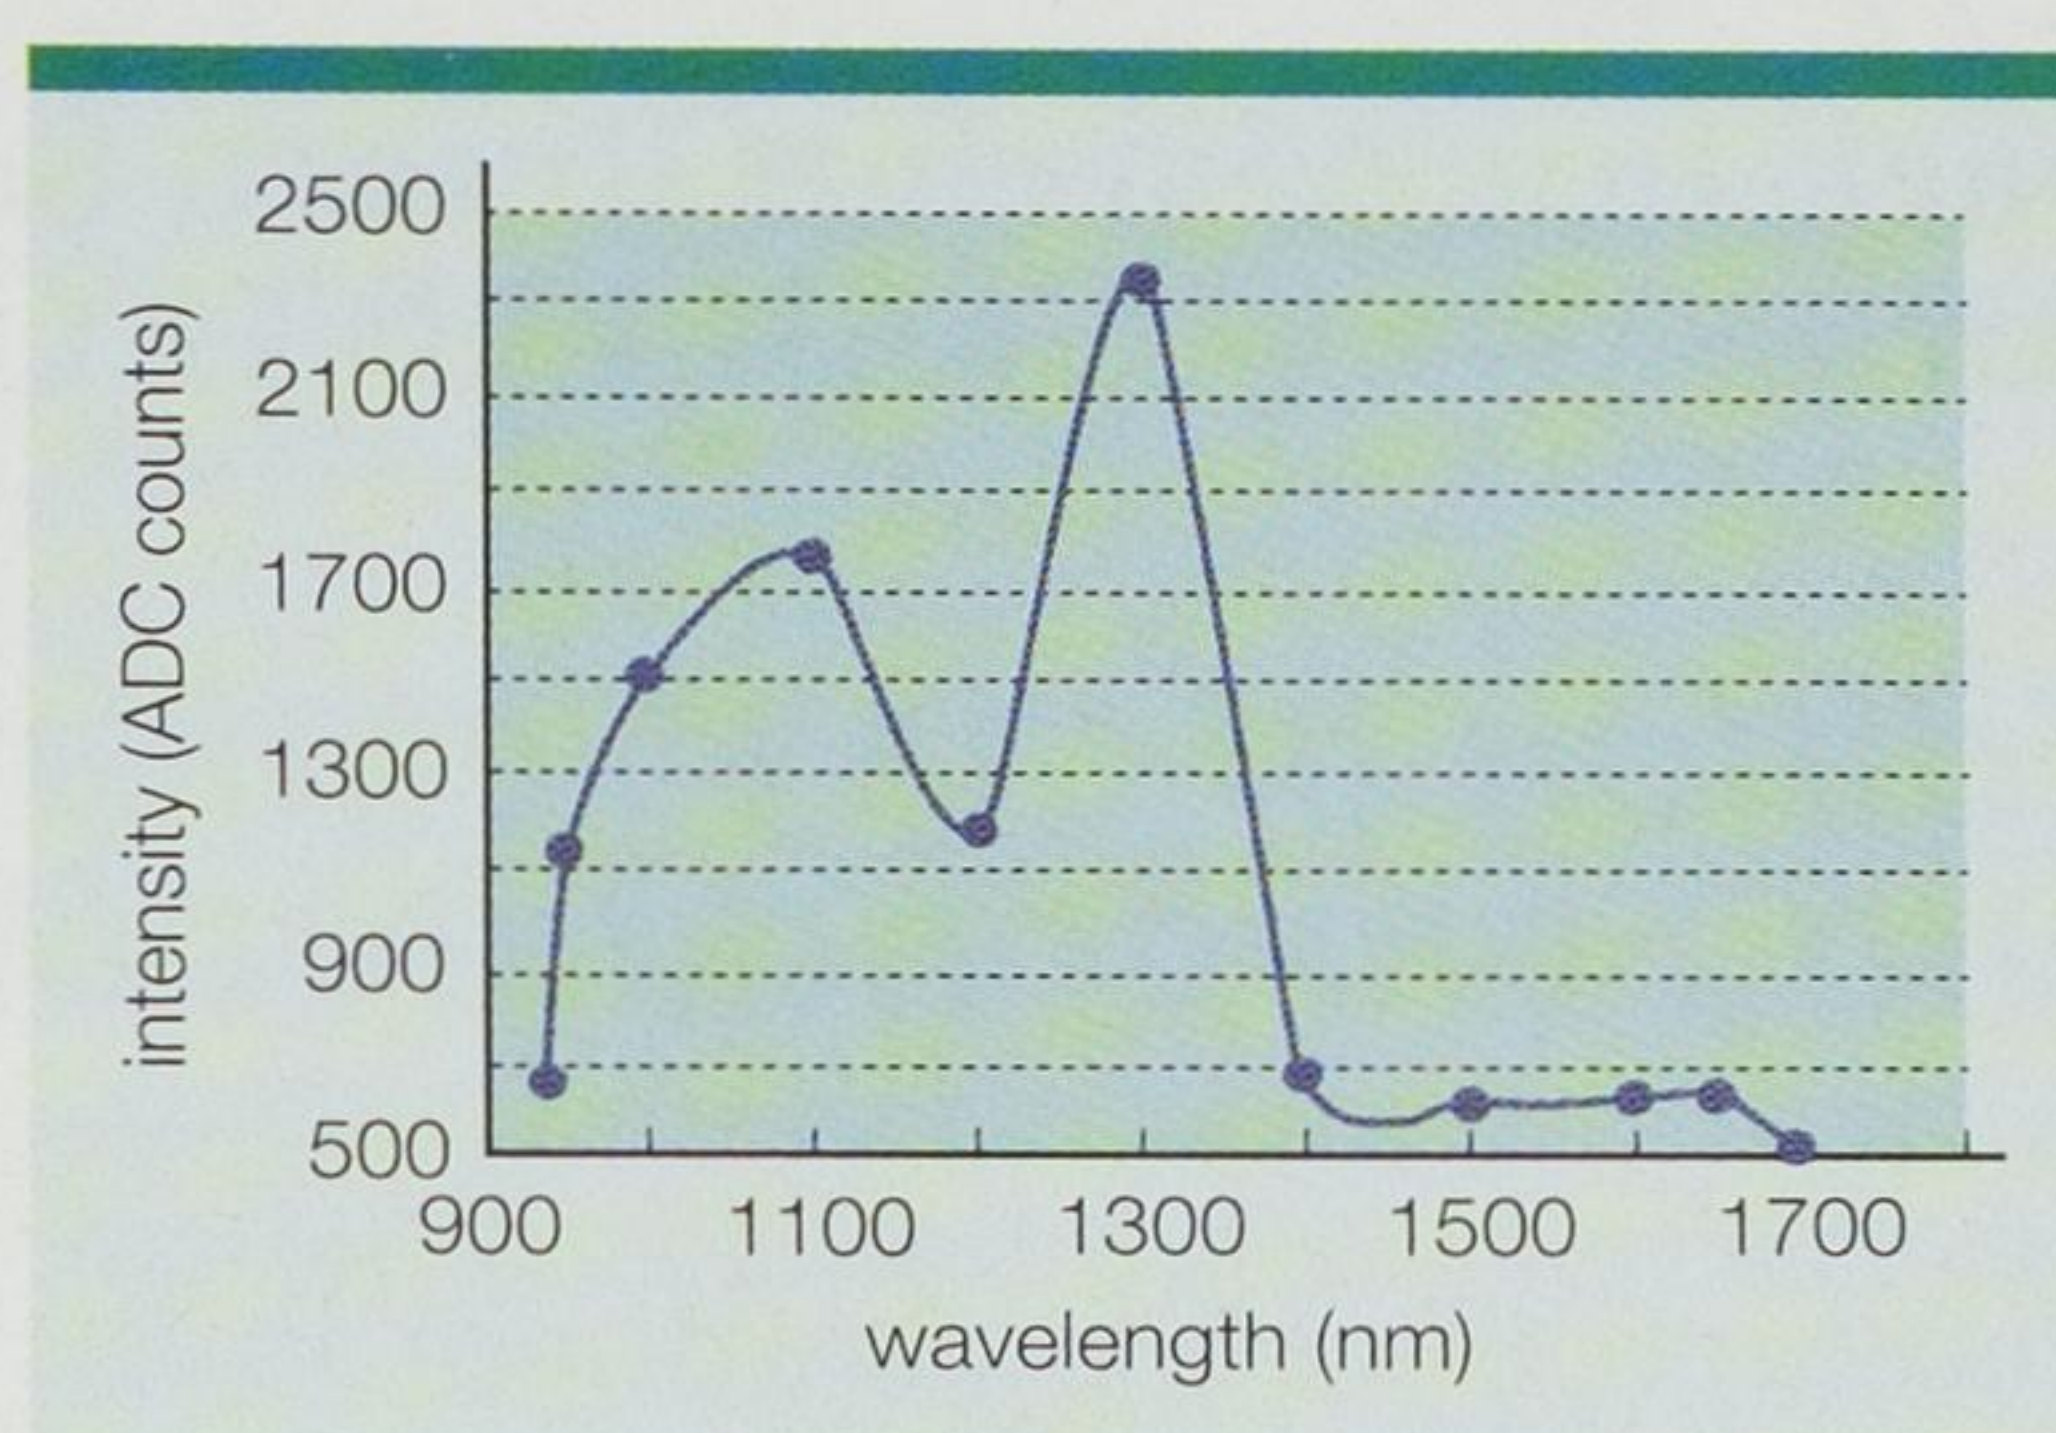


Fig. 5. Near-infrared transmission spectra of methanol (left) and water (right).

waveguide or other optical device.

InGaAs sensors outperform other materials in this so-called beam-profiling application, which is best done using a 2D detector array that is directly illuminated by the laser light. Uncoated silicon CCD detectors cannot be used for profiling 1300–1550 nm laser light, while lead-oxysulfide vidicon cameras suffer from various drawbacks, including high non-linearity, limited dynamic range, image retention and a low damage threshold. In contrast, InGaAs sensors offer high resistance to damage – typically 1 W/cm^2 – which is two orders of magnitude greater than is

possible with lead-oxysulfide, and do not suffer from image retention.

Related applications are in the area of laser designators used for targeting guided munitions that operate at 1064 and 1540 nm, and laser range-finders operating at 1570 nm. InGaAs cameras are used to image the laser designator or range-finder spot on a target at varying distances during system development and as a way of calibrating and focusing field systems.

The 14-bit dynamic range of the Phoenix camera enables laser beams to be characterized from the intense center region out

$$\int |\text{Process Gas}| + |\text{SAES Pure Gas}| = \text{Zero Defects}$$

SAES Purifier

Perfect Epi

SAES gas purifiers give you the solution for defect-free epi growth. Our wide selection of MonoTorr heated getter and MicroTorr ambient metal supported technologies use the most advanced chemical processes to remove oxygen and carbon species from hydrogen and nitrogen carrier gases in any epi process.

Our specialty gas purifiers for ammonia, arsine, phosphine, HCl and others are proven and tested with analytical and process data to be sure our formula gives you the right answer.

Complete your formula for growth with SAES.



SAES Pure Gas, Inc.
(805) 541-9299

www.PureGasTechnologies.com



2003 International Conference on Compound Semiconductor Manufacturing Technology

May 19-22, 2003

Camelback Inn, Marriott Resort, Scottsdale, AZ, USA

Web address: www.GaAsMANTECH.org

Join Us at the 18th Edition of the Premier Conference dealing with Compound Semiconductor Manufacturing

During recent years, market forces have produced a slowdown in the industries served by the compound semiconductor community. Looking forward to the coming turnaround, we must redouble our efforts to develop techniques and processes to drive our cost lower and reliability higher to meet the competitive challenge.



In our 18th year, the 2003 MANTECH conference will present:

❑ **Technical Sessions:** Over 80 papers addressing manufacturing, processing, reliability, device technologies, optical devices, materials (GaAs, InP, GaN, SiC, SiGe) and packaging. The plenary session includes talks by internationally-recognized technologists. Invited talks will also be presented on subjects including a review of the technology in Asia, the outlook for military technology, and a variety of other important topics.


❑ **Workshop:** GaAs MANTECH will again sponsor an intensive one-day workshop led by industry experts on May 19th. Subjects covered will be:

- Integrated Circuits Processing Tutorial
- Wireless Principles (for Dummies)
- Power Amps for Wireless Applications
- GaN
- SiGe
- MEMS
- Advanced Interconnect for Compound Semiconductors

❑ **Interactive Forum:** This popular session provides an opportunity for all conference attendees to engage in personal discussion and information exchange with the authors/presenters in an open and informal environment.

❑ **Rump Sessions:** Following on last year's success, a series of rump sessions are again planned as an opportunity for free-wheeling discussion of important issues.


❑ **Exhibits:** MANTECH is the premier venue bringing the world's leading compound semiconductor manufacturers together with their suppliers. In

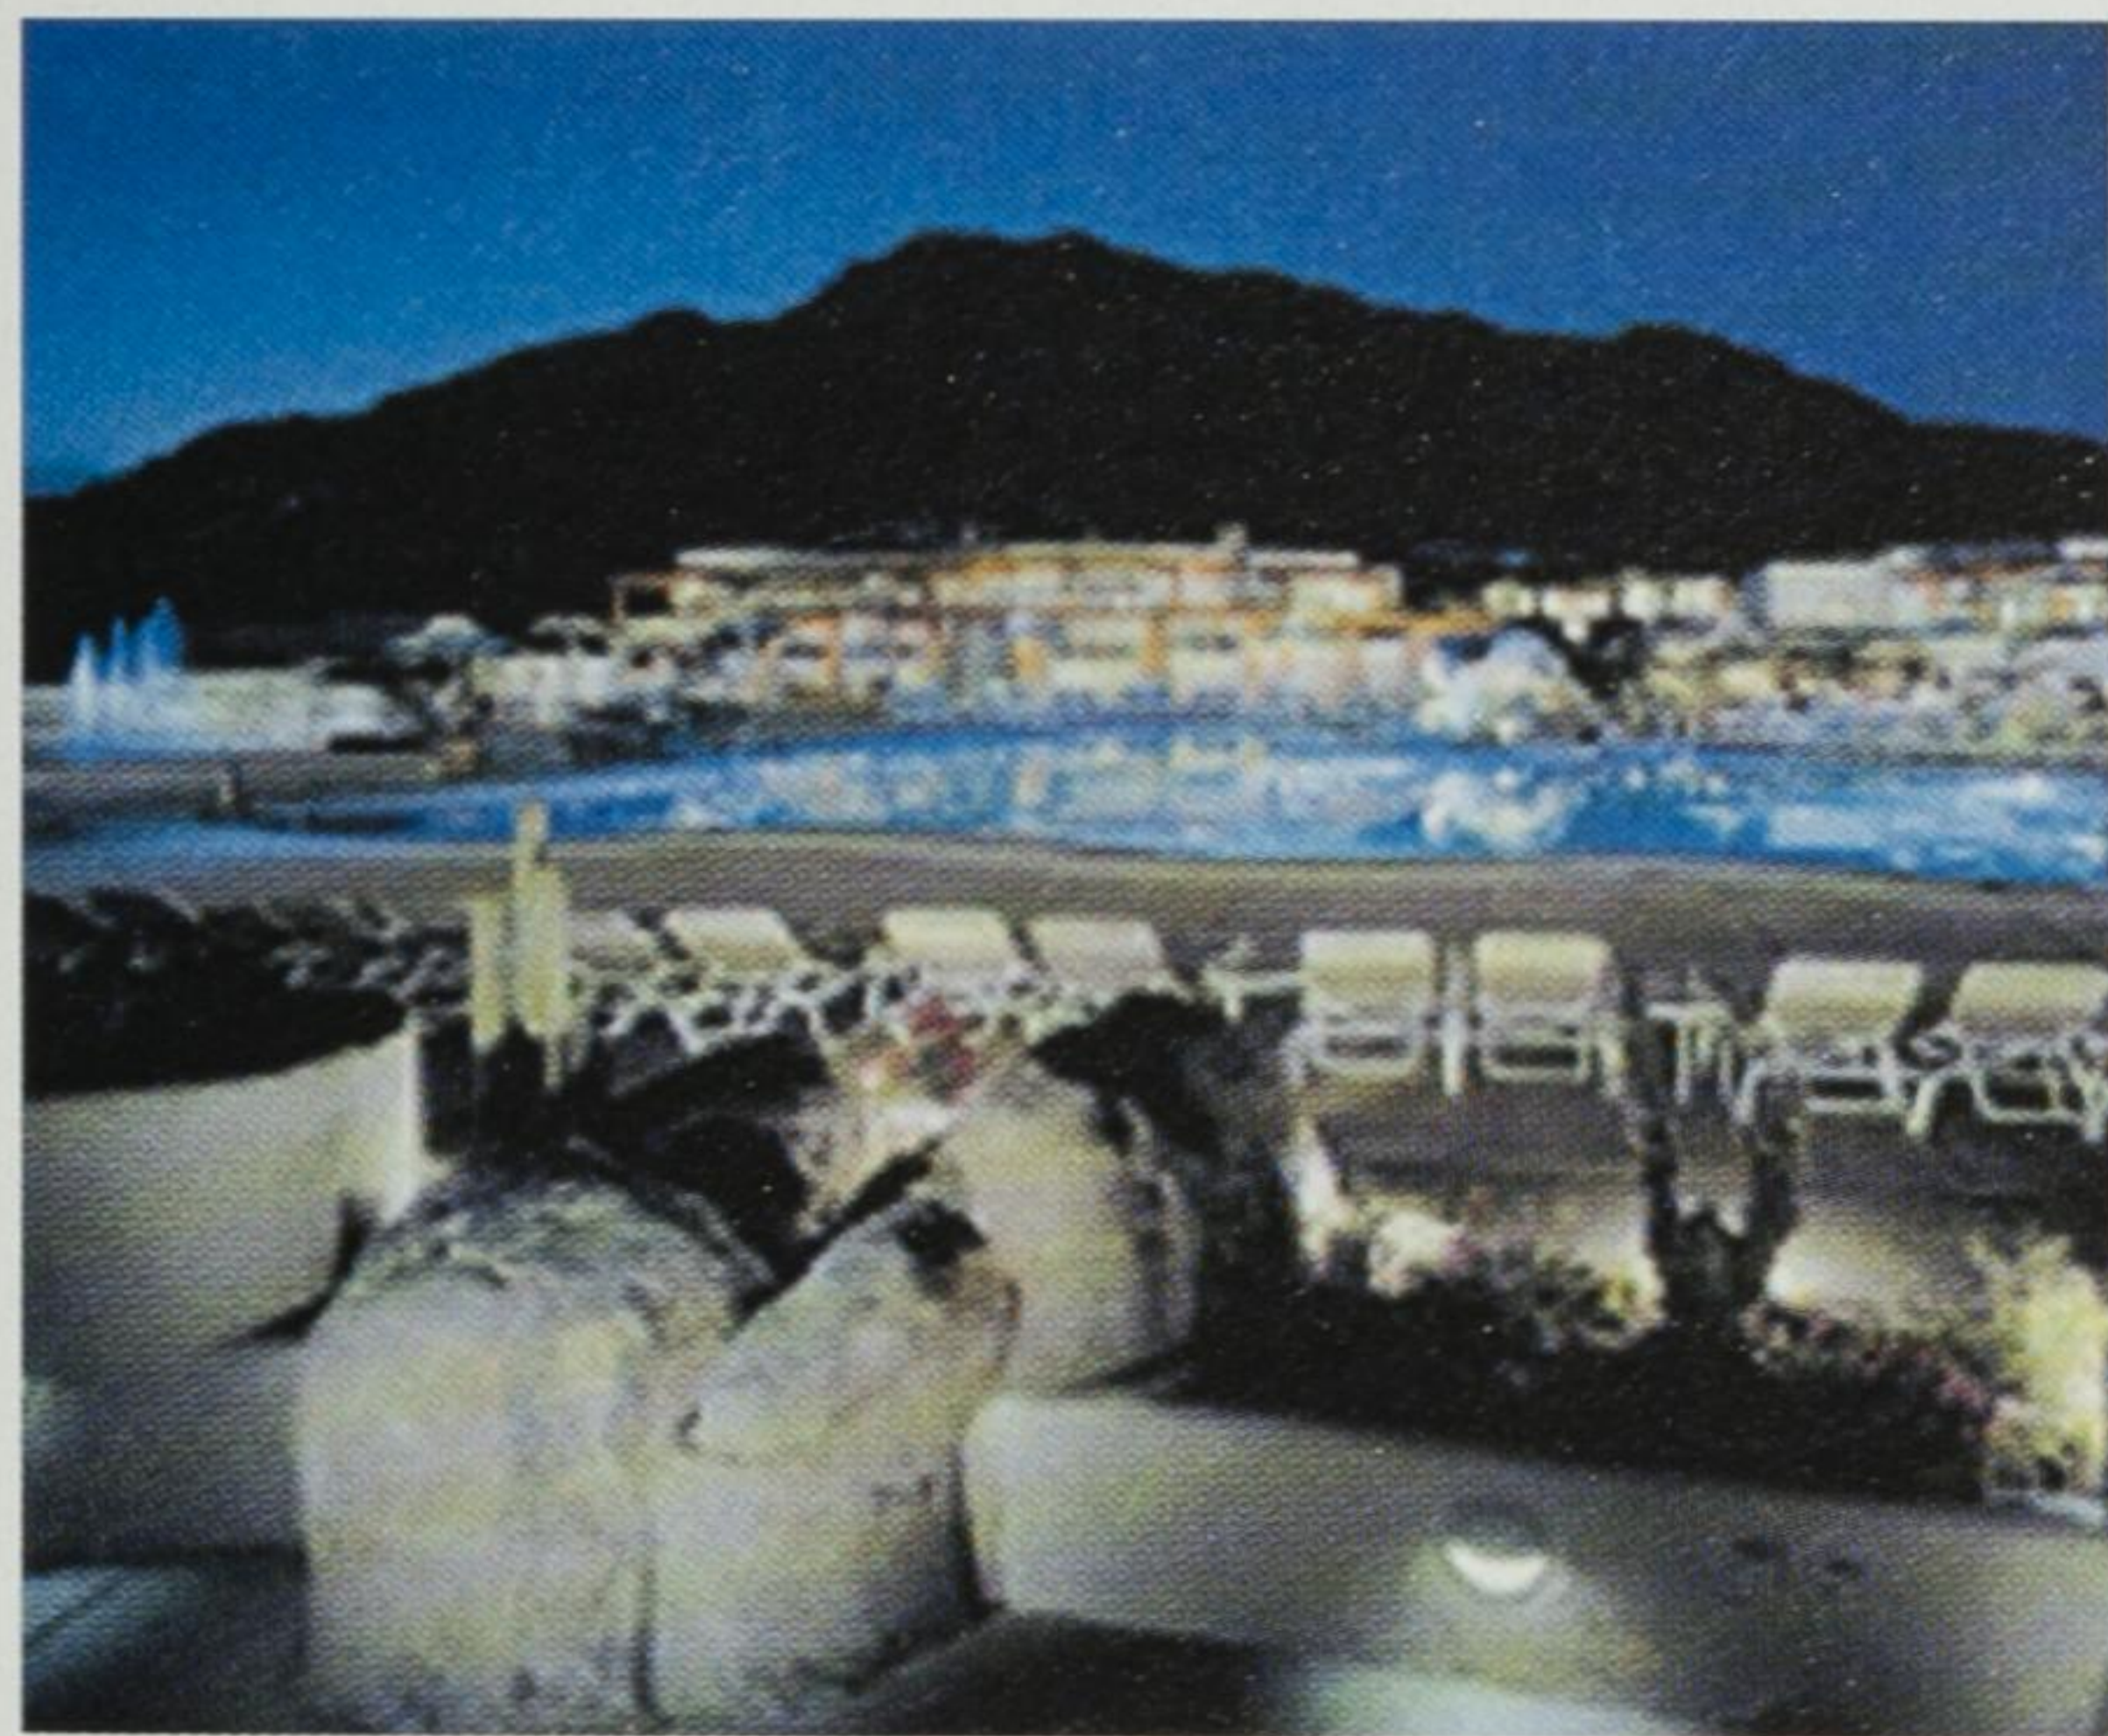

this one location you will get to see the latest equipment and manufacturing solutions. Over 100 equipment and materials exhibitors are expected to participate.

❑ **Ugly Picture Contest:** This is a very entertaining and informative contest. It gives everyone a chance to benefit from their problems by winning a prize for the most photogenic example of a manufacturing problem and its solution.

❑ **Social events:** The Exhibits Reception, the International Reception, and the Awards Luncheon provide opportunities for attendees to communicate with international colleagues and develop business contacts.

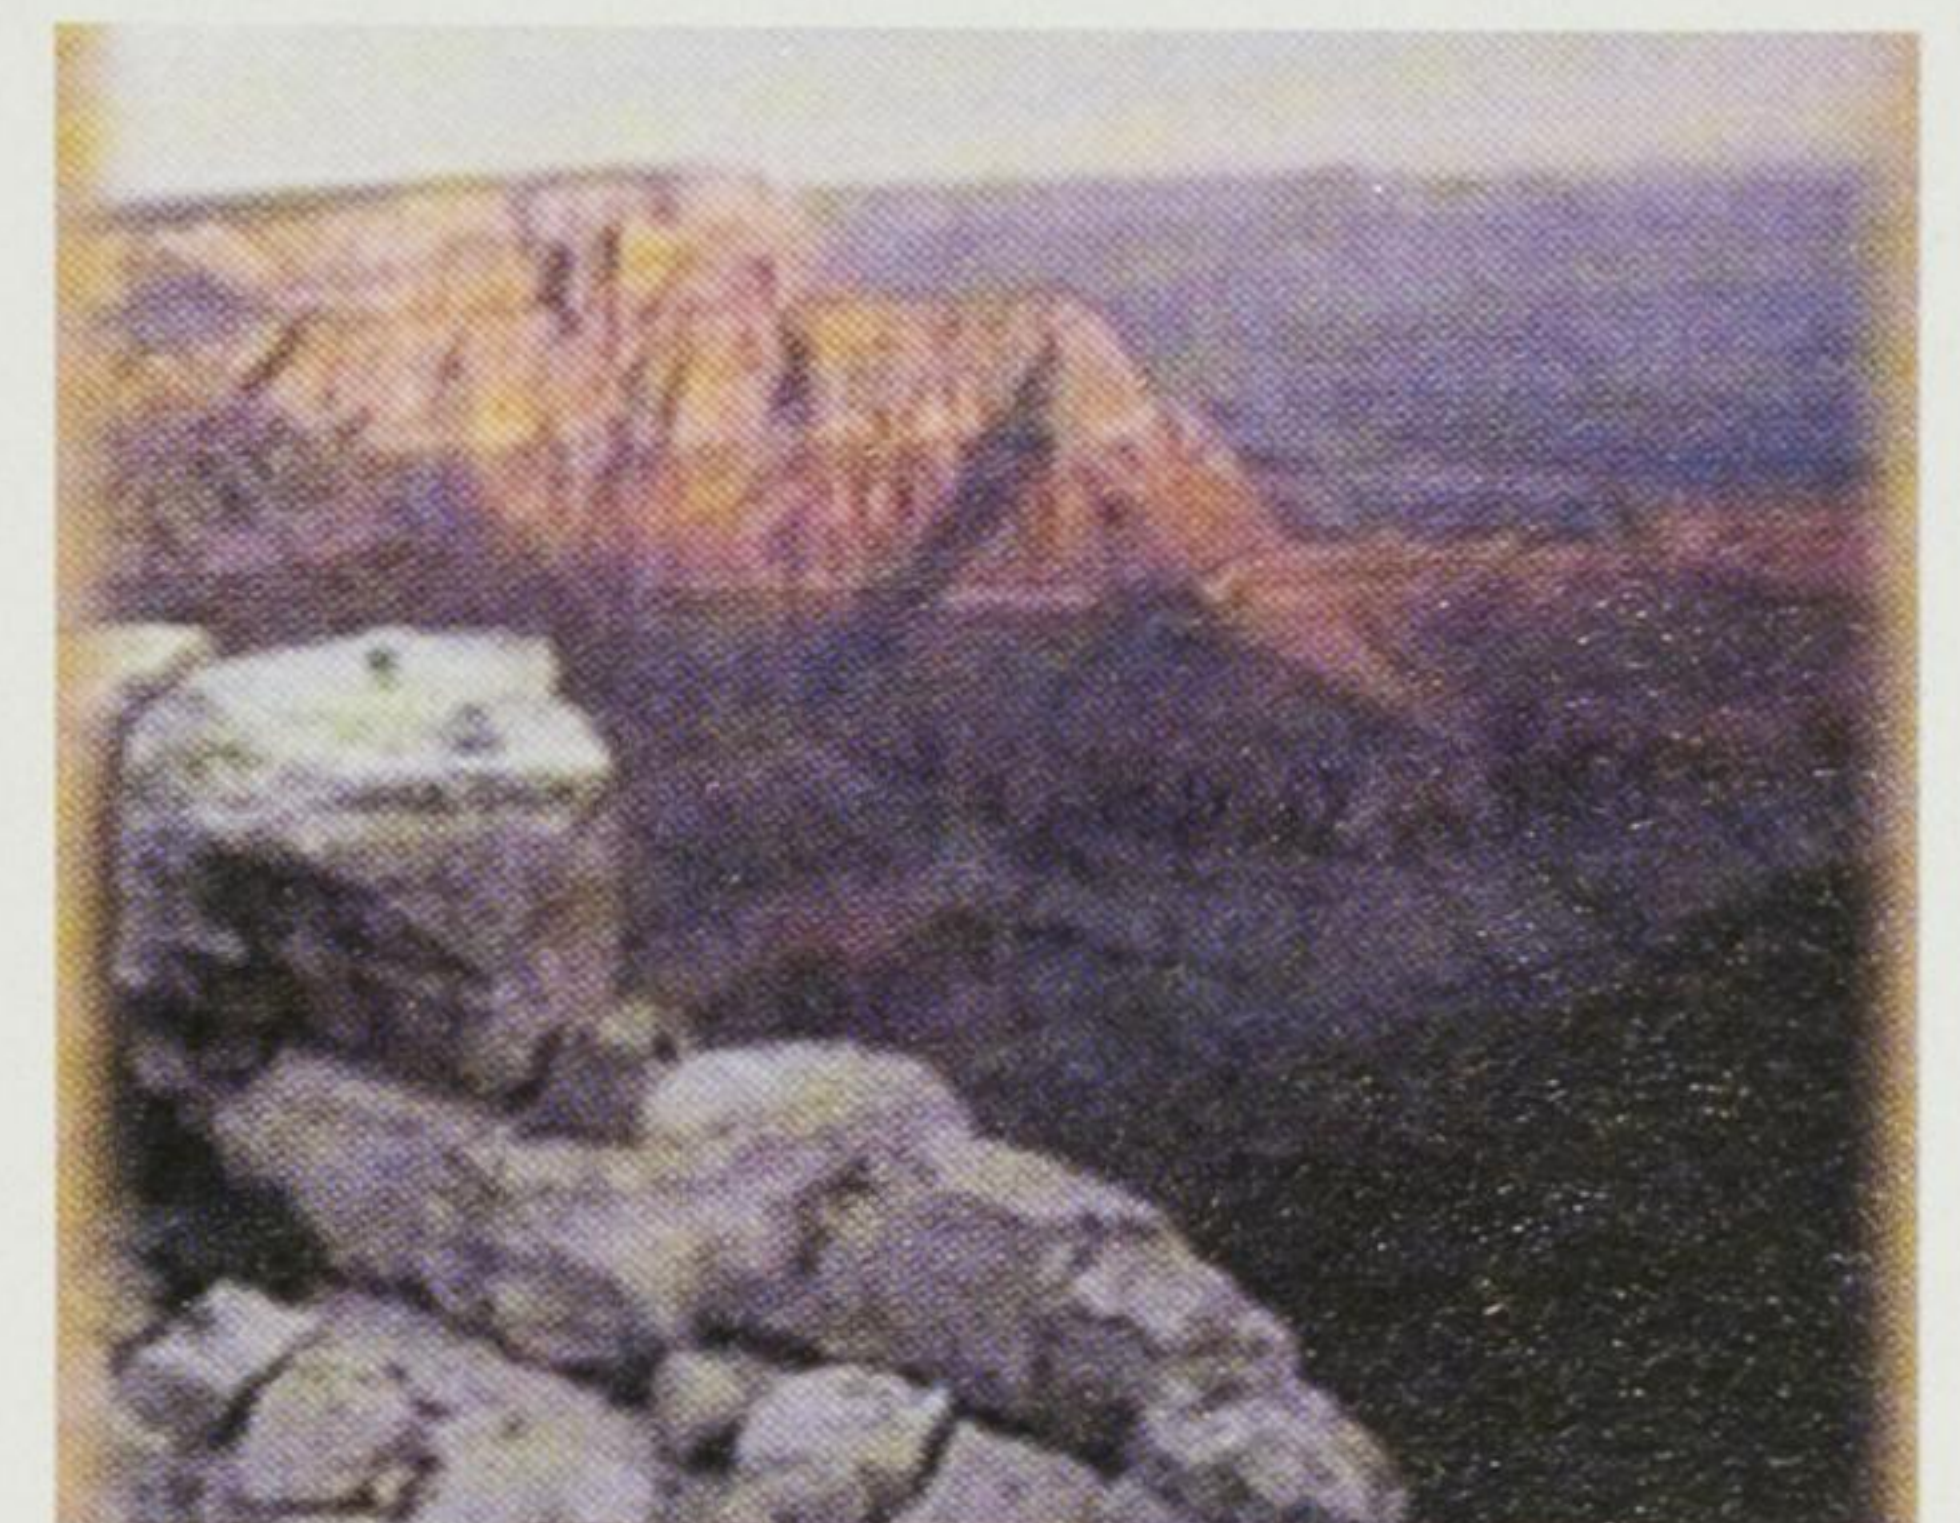

****For registration and Advance Program, please visit us at www.GaAsMANTECH.org**

to the much less intense edges of the power pattern. Figure 3 shows a 1550 nm laser-beam cross-sectional image and a line profile that corresponds to the diagonal line over the beam spot.

Water detection

Another application of NIR imaging uses the wavelength-dependent reflectance of materials containing water to detect the materials' presence in a scene. Water is strongly absorbing at and above 1350 nm, but not nearly as absorbing at shorter wavelengths. This behavior causes certain objects imaged at wavelengths around 1100 nm to be quite reflective, while the same objects imaged at 1350 nm or higher can appear quite dark.

Figure 4a shows a person imaged with an InGaAs camera through a filter that passes 900–1000 nm light. The skin is quite reflective. In 4b, which shows the same scene imaged through a filter that passes 1400–1600 nm light, the exposed skin appears quite dark. Figure 4c shows the difference between the other two images, false-colored in red and overlaid onto the 900–1000 nm image. Exposed skin is readily apparent because of its water content, as is

the background vegetation for the same reason. The difference in contrast between water-filled objects and "dry" objects can also be used to detect the absence of water in a scene.

NIR spectroscopy

NIR spectroscopy is often called the most rapid non-destructive method of analyzing the chemical composition of a material. It involves measuring the intensity of NIR light reflected or transmitted through a material as a function of wavelength. The resulting intensity versus wavelength curves are called NIR spectra, and the shapes of the curves convey information about the chemical species in the material.


An imaging spectrometer is an instrument that can generate NIR spectra for each pixel in the scene being imaged. The spectrometer uses a variable filter or diffractive optic for spectral selection. The dataset generated by an imaging spectrometer is known as an image cube because there are three dimensions to the data set: X and Y spatial co-ordinates and the center wavelength of the filter pass-band of the pixel along the Z axis. Imaging spectrometers are used in agricultural inspection, remote sensing, exhaust-gas analysis and

pharmaceutical formulation analysis. Figure 5 shows the NIR transmission spectra of two liquids, methanol and water, which have transmission curves with very different shapes. These shapes, known as signatures, can uniquely identify compounds within a scene. One possible application is the detection of spilled chemicals, such as gasoline, by an unmanned aerial vehicle with an InGaAs camera.

Summary

Commercially available InGaAs cameras are enabling many new applications in NIR imaging, making high-performance imaging in an important region of the electromagnetic spectrum possible at a cost that is lower than cooled sensor technology. The FPAs in these cameras are made with techniques developed for the semiconductor industry, which are inherently scalable to high-volume production and lend themselves to automation, enabling further cost reduction and the penetration of new markets with this imaging technology. ●

Austin Richards is a senior applications engineer with Indigo Systems Corporation of Goleta, CA. Web www.indigosystems.com.

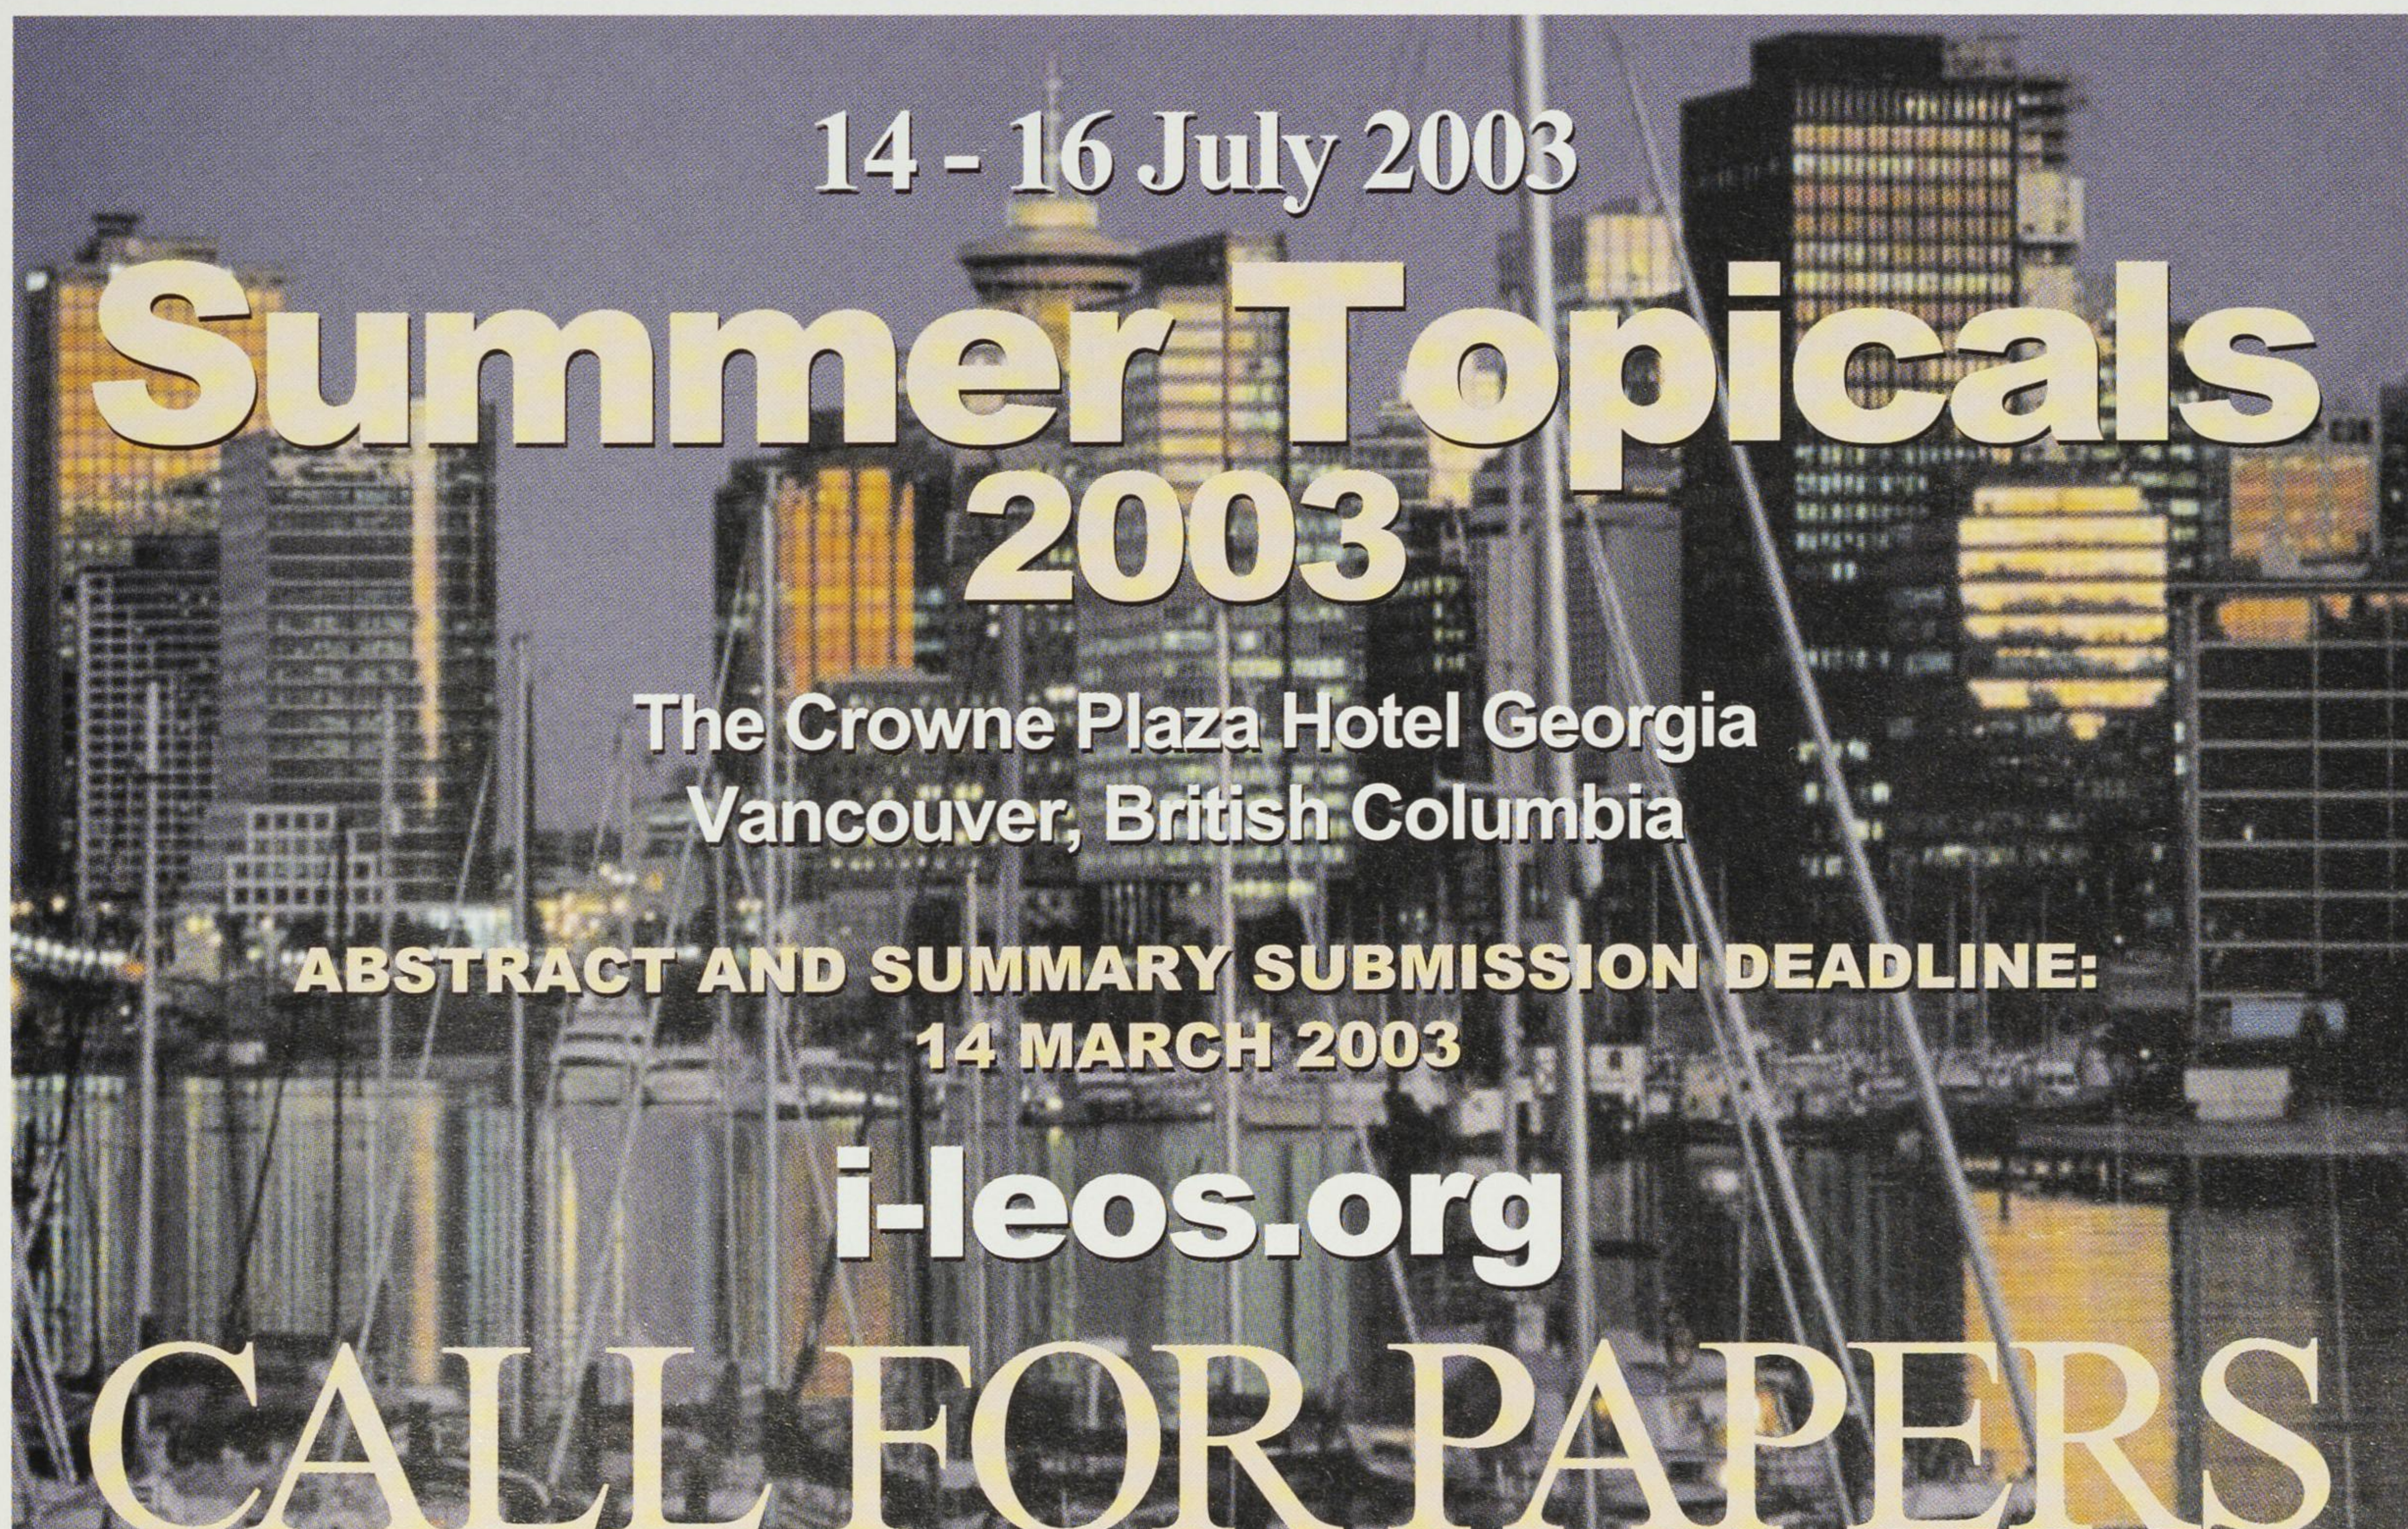

14 - 16 July 2003

Summer Topicals 2003

The Crowne Plaza Hotel Georgia
Vancouver, British Columbia

**ABSTRACT AND SUMMARY SUBMISSION DEADLINE:
14 MARCH 2003**

i-leos.org

CALL FOR PAPERS

To advertise your product in this section, contact Joanna Hook on tel: +44 117 930 1033, or e-mail: joanna.hook@iop.org.

White ammonia

Air Products

Air Products introduces White Ammonia™ product (99.99999+%), a new ultrahigh-purity ammonia that is the first commercially available product to achieve lower than one part per billion of moisture without needing the additional step of downstream purification. Produced at its Hometown, PA plant, Air Products then ships the product worldwide via its GASGUARD® Bulk Specialty Gas System (BSGS) ISO containers that can dispense ammonia at significantly higher flow rates.




Contact: John Caligiuri
Tel: +1 610 481 4339
Fax: +1 610 481 5900
E-mail: caligijg@apci.com
Web: www.airproducts.com/compound

SmartEBIC

Gatan

Gatan, a world leader in advanced electron microscopy instrumentation, is launching "SmartEBIC" – a new system for studying electrical properties of semiconductor materials and devices using the established technique of Electron Beam Induced Current. Based on Gatan's leading DigitalMicrograph™ software platform, and combining DigiScan beam control with intelligent amplifier control and signal sampling, SmartEBIC transforms the technique by introducing quantification with ease of use. The product is suitable for all types of scanning electron microscopes.

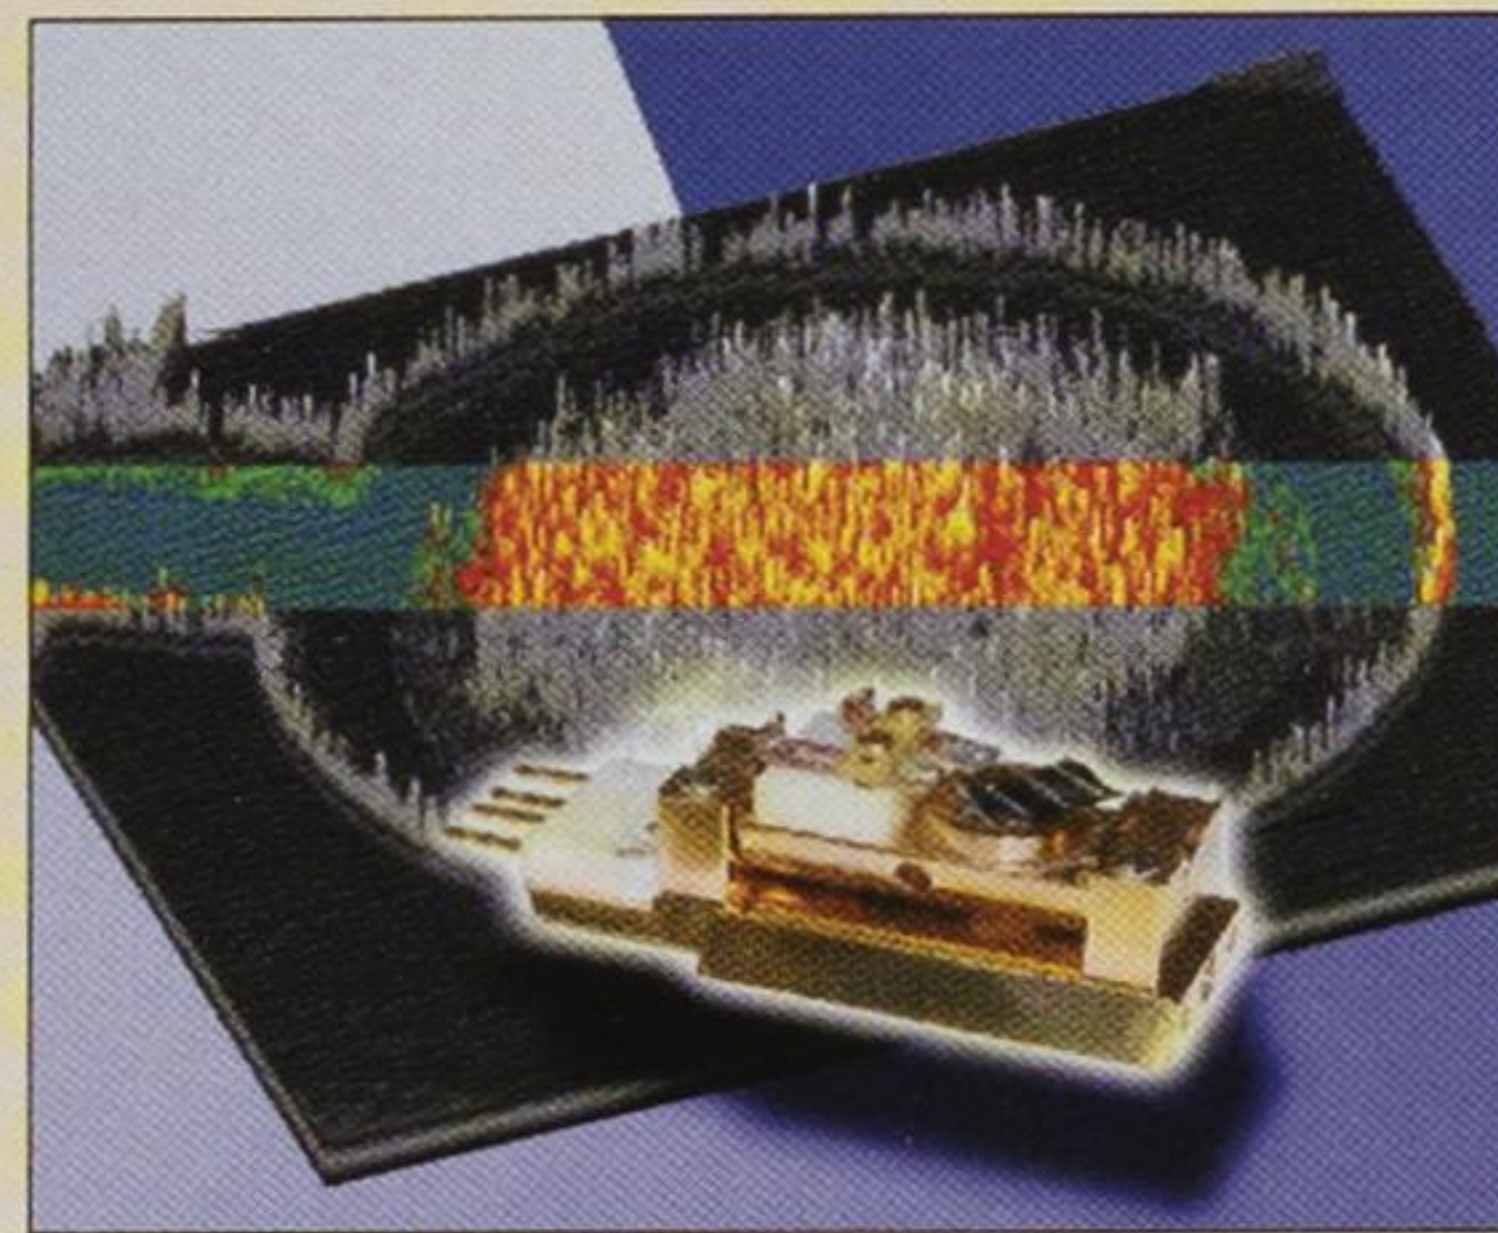

Contact: Andrew Searle
Tel: +44 1865 253630
E-mail: ukinfo@gatan.com
Web: http://www.gatan.com

Electronic Transport Measurements

Lake Shore Cryotronics Inc

The new Hall Effect systems characterize compound semiconductors, transparent oxides, dilute magnetic semiconductors, and semi-insulators. Measurements include resistivity, Hall coefficient, IV curves, carrier density, and mobility. Sample resistances from 0.04 mΩ to 250 GΩ can be measured in fields to 90 kG and temperatures from 2K to 800K. A four-sample configuration and 6 inch wafer holders are available, along with




QMSA software that extracts the mobility and concentration of each carrier species in multilayer materials.

Contact: Lake Shore Cryotronics Inc, 575 McCorkle Boulevard, Westerville, OH 43082, USA
Tel: +1 614 891 2244
E-mail: sales@lakeshore.com
Web: www.lakeshore.com

In situ monitor for GaN

LayTec GmbH

The combination of spectroscopic reflectance with emissivity corrected pyrometry measurements is the ideal combination for *in situ* monitoring of much more than just the growth rate. LayTec's EpiR DA TT system – applicable to any growth reactor via fiber-optical access – offers accurate surface temperature measurements (better than ±1K), precise growth rate analysis, and composition monitoring, as well as a unique, detailed analysis of the surface morphology. The

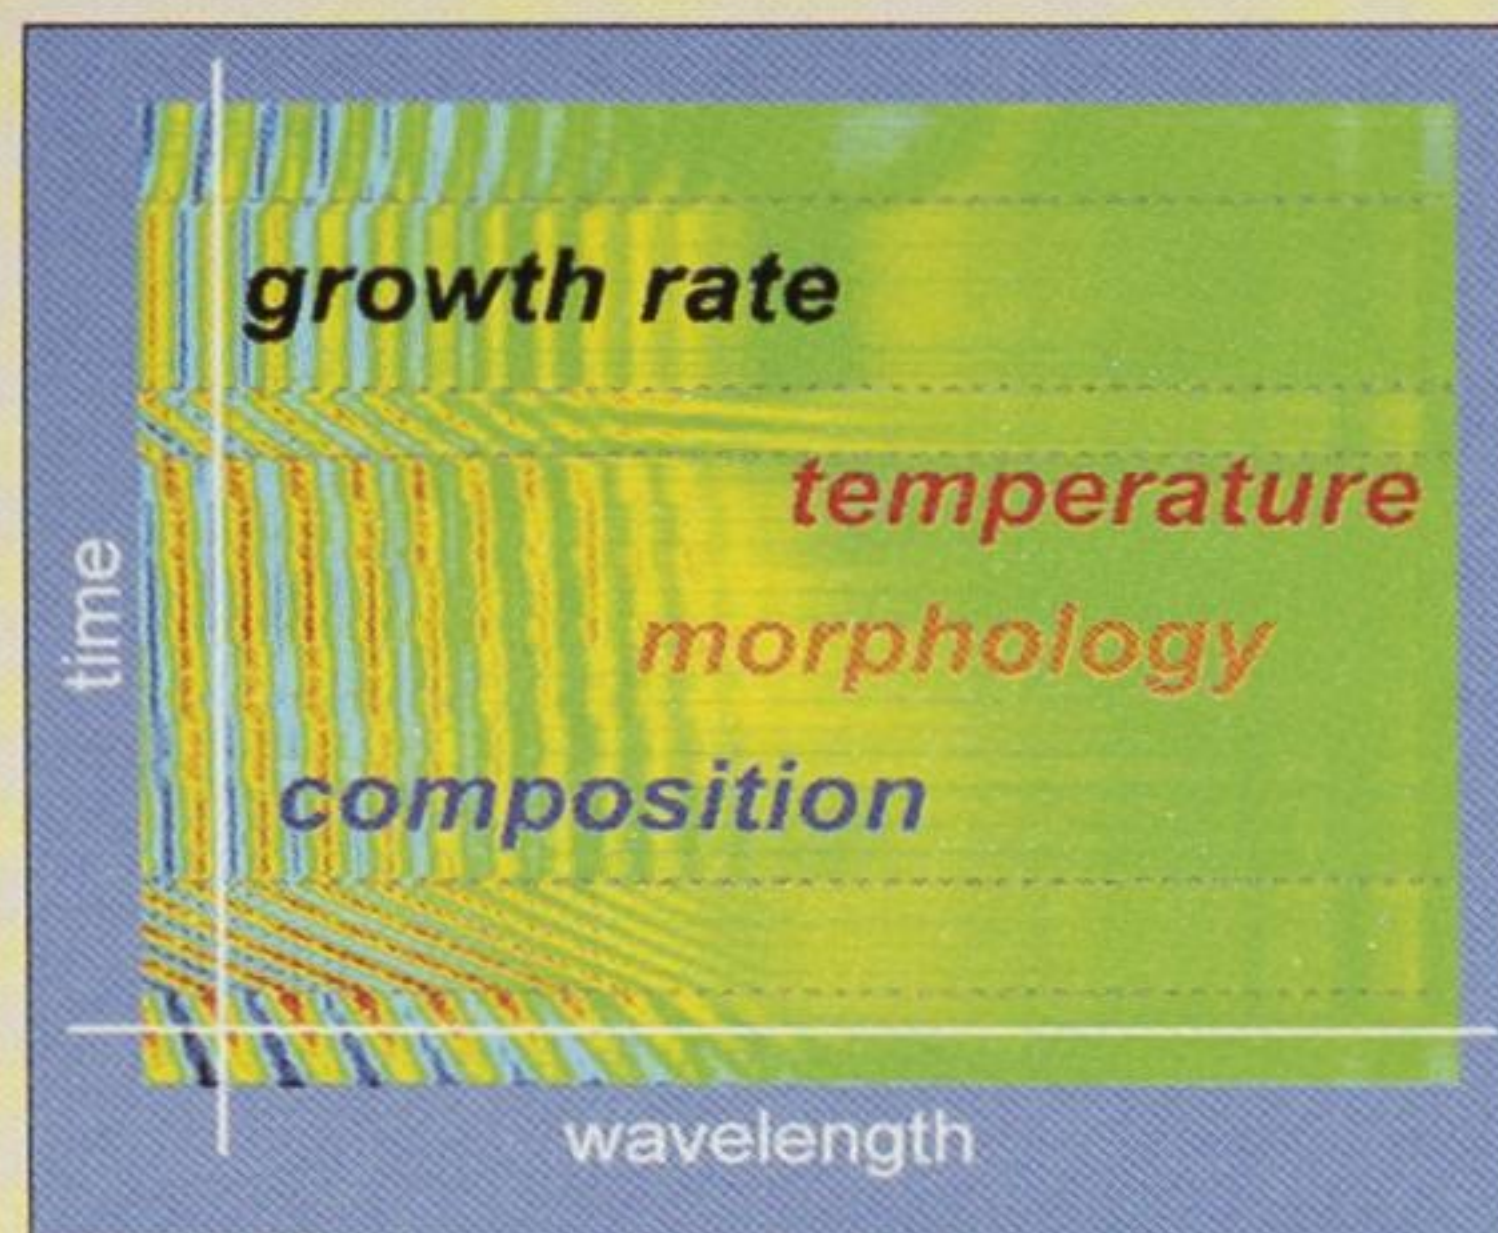

EpiR DA TT comes in a complete set with an easy-to-adjust optical head, a 19 inch electronic rack and a control computer.

Contact: LayTec GmbH, Helmholtzstr. 13-14, D-10587 Berlin, Germany
Tel: +49 30 31 80 82 36
Fax: +49 30 31 80 82 37
E-mail: info@laytec.de
Web: www.laytec.de

Chemical Delayering System

Logitech Ltd

Logitech Ltd (Semicon Europa, A2.122) announces the arrival of the CDP Chemical Delayering and Planarization System, for dedicated CMP and delayering applications (manual/automated control option). Uniquely versatile, CDP allows you to planarize silicon, III-V and II-VI compound semiconductor wafers up to Ø8". Optoelectronic wafers such as sapphire, or particularly hard materials such as silicon carbide, can also be planarized. Delayering applications include fault analysis/reverse engineering for MEMS devices, ICs and multiple/single die.




Contact: Logitech Limited, Erskine Ferry Road, Old Kilpatrick, Glasgow G60 5EU, Scotland, UK
Tel: +44 1389 875444
Fax: +44 1389 890956
E-mail: info@logitech.uk.com
Web: www.logitech.uk.com

OMIprobe Epiwafer Characterization

Optical Metrology Innovations Ltd

For HBT, HEMT, VCSEL, LED/RCLED, QWIP and SiGe epiwafer characterization, OMI offers the OMIprobe variable angle photorefectance spectrometer with 2" to 200 mm wafer mapping. Device-specific parameter extraction is performed by the OMIprobe proprietary lineshape software, including bandgap to a precision of 2 meV, surface and interfacial electric fields, and strain effects on epilayer band structure. OMIprobe is configurable for spectral ranges covering GaAs, InP, SiGe, and GaN based epiwafers.

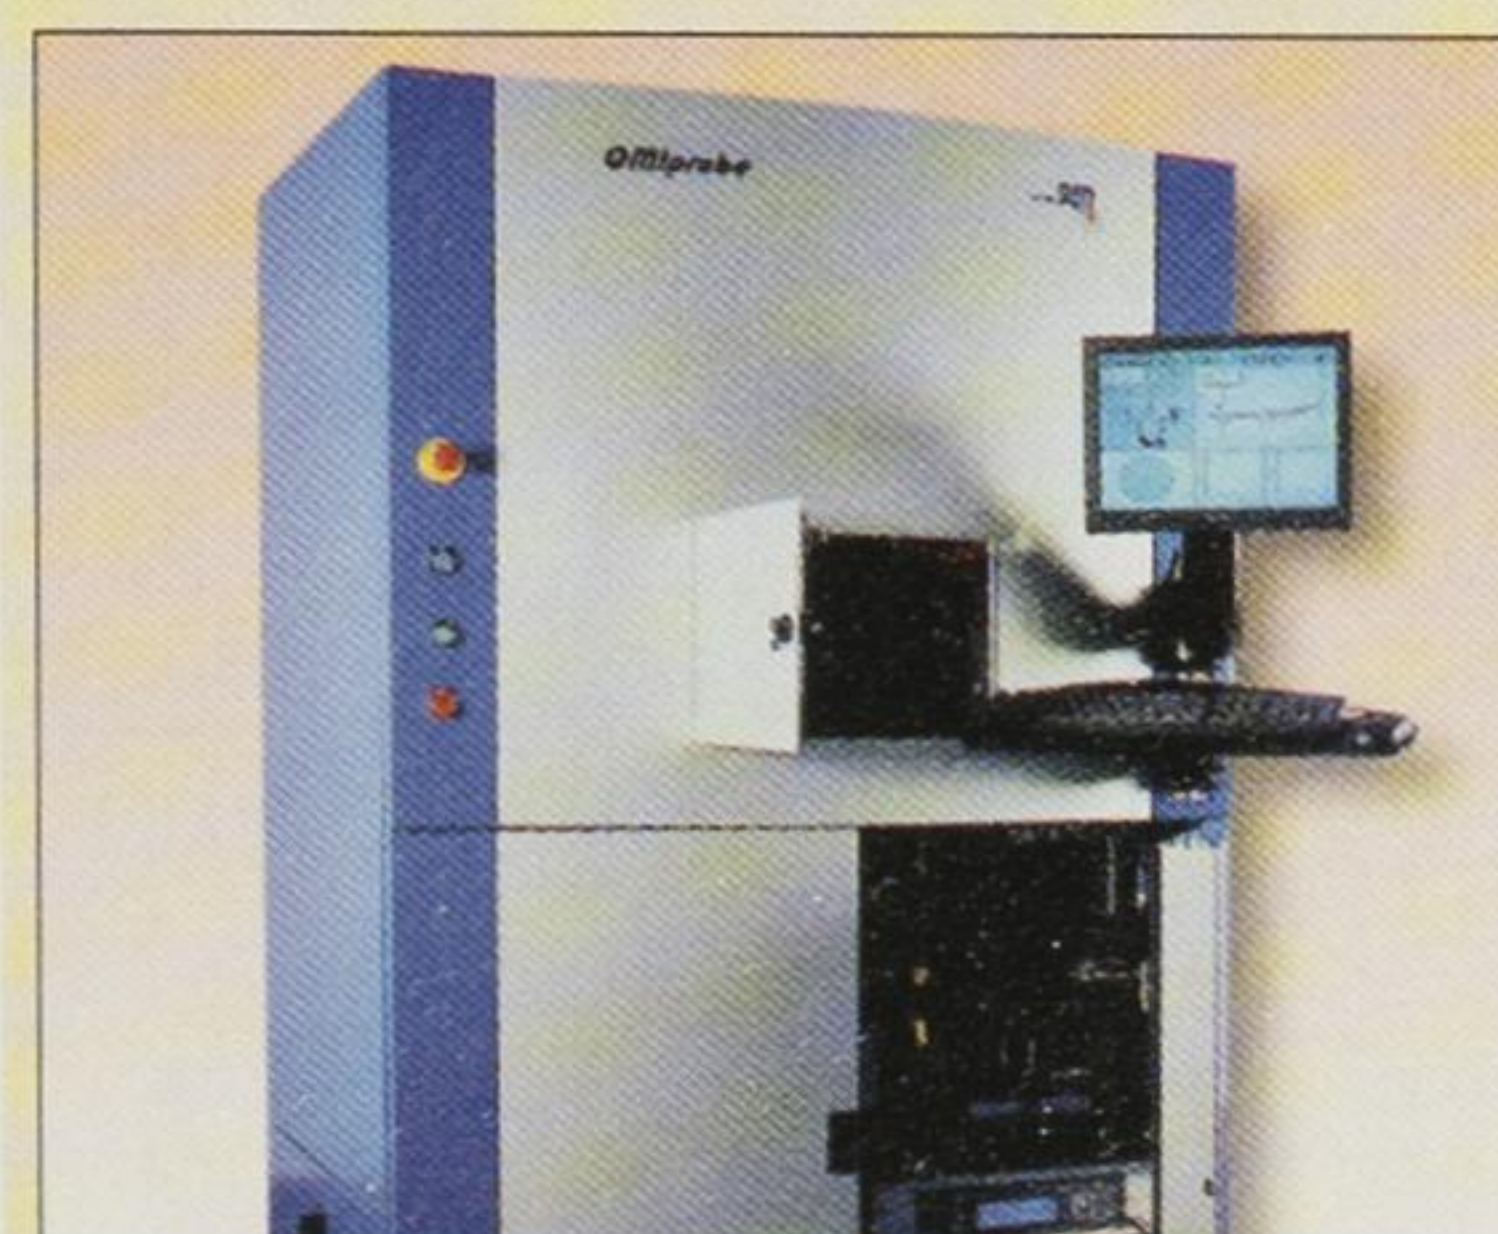


Contact: Dr Pat Kelly, Optical Metrology Innovations Ltd, 2200 Cork Airport Business Park, Cork Airport, Co. Cork, Ireland
Tel: +353 21 4316907
Fax: +353 21 4845238
E-mail: pat.kelly@omi.eu.com
Web: www.optical-metrology.com

Heatpulse 610 Software

Total Fab Solutions

Total Fab Solutions announces the release of an advanced process controller for the Heatpulse 610 Rapid Thermal Anneal system. The new GUI process controller replaces the PCAT and Rockwell control systems. New features included in the GUI process controller include: adaptive PID control, graphic time/temperature display, data logging and automated calibrations and troubleshooting. The new software also allows MFC control as an option.

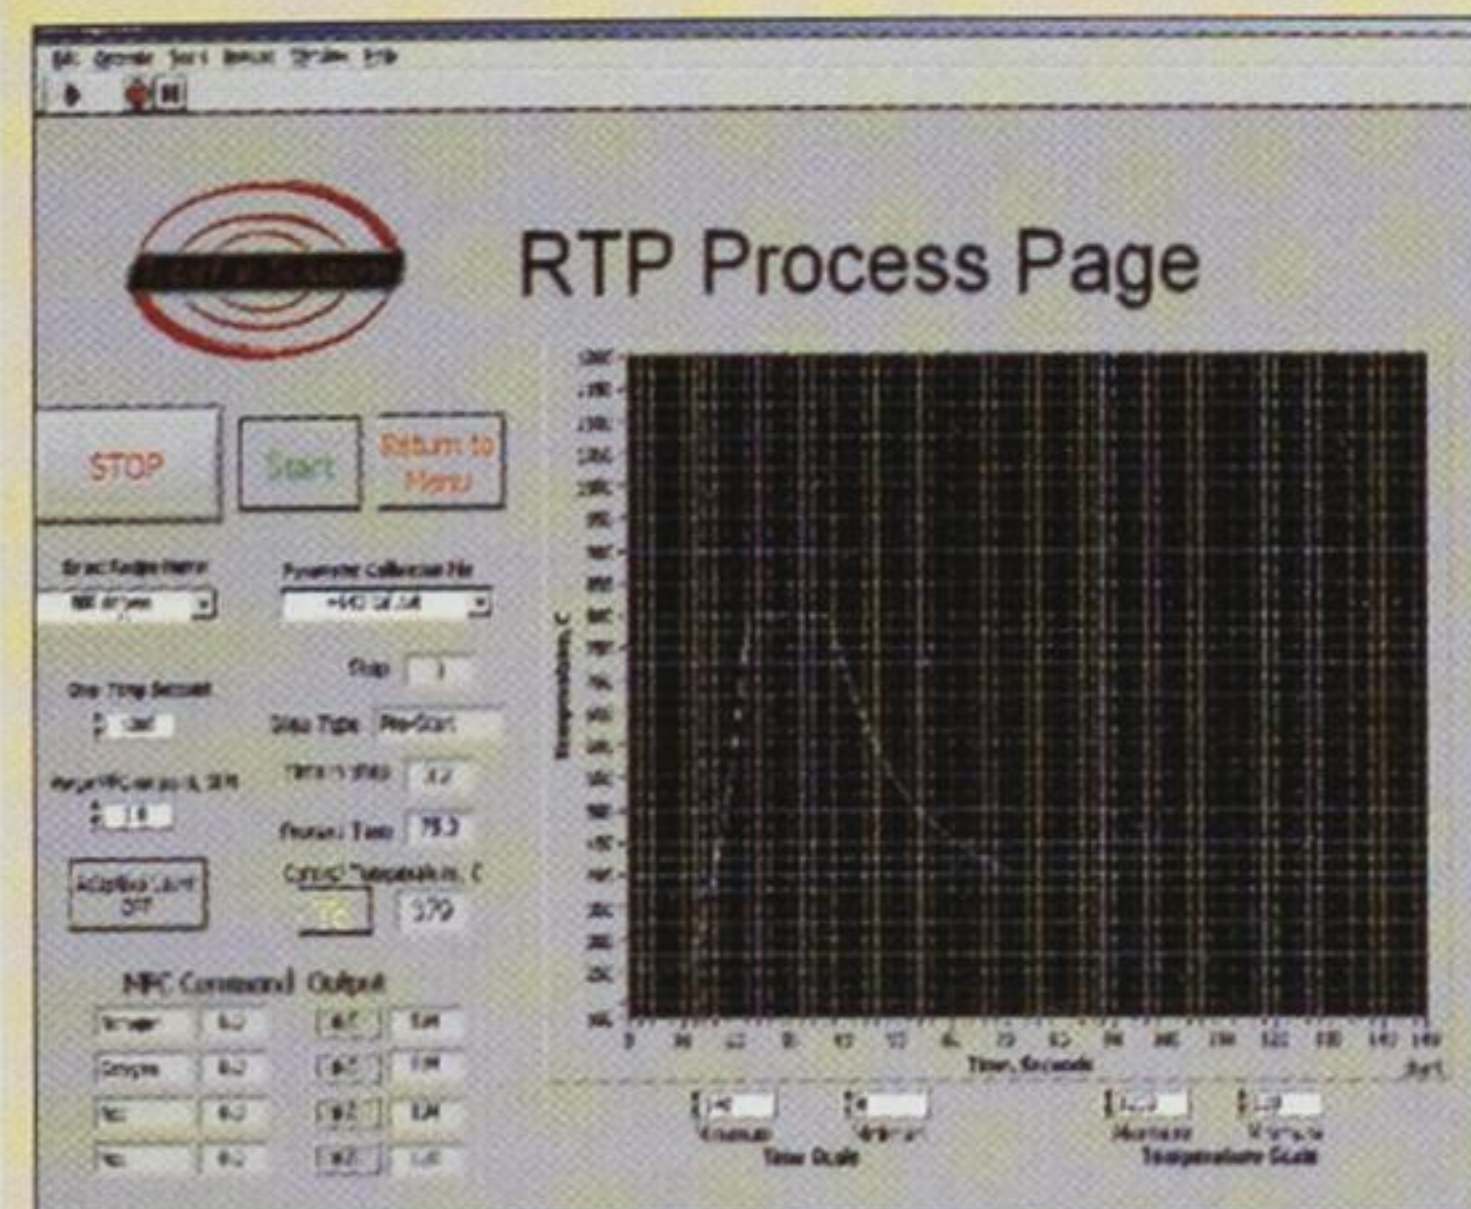


Contact: Total Fab Solutions
Tel: +1 602 426 8677
Fax: +1 602 426 8678
E-mail: info@totalfabsolutions.com
Web: www.totalfabsolutions.com

High-Speed Slicing Systems

GTI Technologies Inc

Use Takatori multiwire high-speed slicing systems to slice LED materials, ceramics, silicon carbide, quartz, gallium arsenide, ferrites, samarium cobalt, II-VI compounds, sapphire, and other hard and fragile materials. Slicing exotic materials with GTI Technology is just one great idea with a big pay-off. GTI multiwire low kerf saws reduce kerf loss by 50%. Slices per unit increase 40%. Get a nearly acceptable finished product at the beginning, reducing the need for

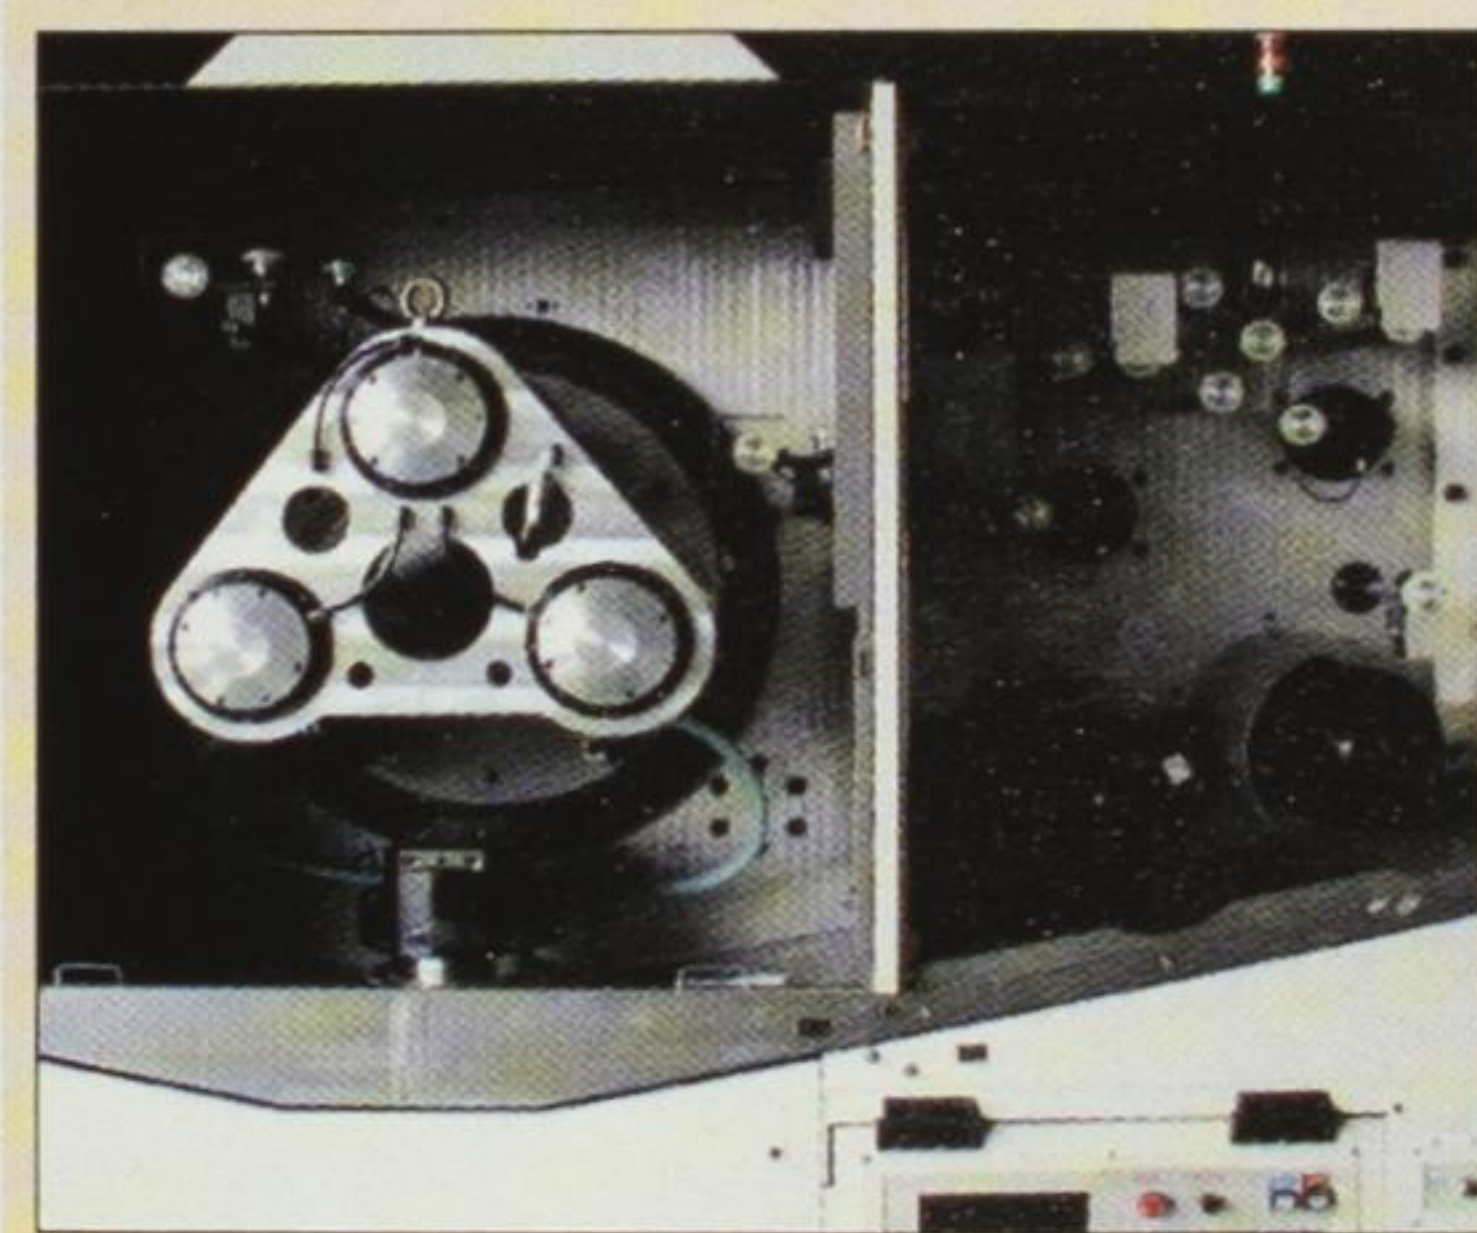

post processing. Microprocessor controlled system gently slices hard materials while maintaining sensitivity to the innate structure of the material. See us at Semicon Europa.

Contact: Bob Thron, GTI Technologies Inc, 6 Armstrong Road, Shelton, CT 06484, USA
Tel: +1 203 925 6318
Fax: +1 203 926 0074
E-mail: Bob@GTI-USA.com

Thin-Film Etching & Deposition

Unaxis Semiconductors

Unaxis Semiconductors is introducing an ideal platform for R&D and pilot production. The SHUTTLELINE™ merges the technology of four Unaxis systems, with the extensive experience of an installed base of more than 650 tools. Its multiprocess platform for thin-film etching and dielectric deposition, including ICP, RIE and PECVD, gives superior process solutions which can be applied to a number of markets and a large variety of device types such as



LED's, HBTs, HEMTs, SAW, Photonics and MEMS. The SHUTTLELINE™ process chambers come standard with vacuum loadlock and user-friendly software.

Contact: Notker Kling, Unaxis Semiconductors, 10050 16th St. N., St Petersburg, FL 33716, USA
Tel: +1 727 577 4999
E-mail: notker.kling@unaxis.com
Web: www.semiconductors.unaxis.com

RECRUITMENT



Providing Communication Solutions™

www.rfmd.com

Great People Great Products A Great Place To Grow

RF Micro Devices (RFMD) is a world leader in wireless communications components. Drawing from a diversified set of semiconductor and packaging technologies, we are providing the building blocks necessary to lead the revolution in wireless communications. If you are a highly motivated individual who is accustomed to leading the pack, we would like to hear from you.

If you have a Ph.D., M.S., B.S. or an A.S. in a technical area, RFMD has openings in the following:

Operations

- Senior MBE Engineer
- MBE Engineer
- MBE Technician

Development

- Senior MBE Engineer

Equipment

- MBE Equipment Maintenance Technician

RFMD's Molecular Beam Epitaxy Fabrication operation, located in **Greensboro, NC**, has immediate openings in our Operations, Development and Equipment groups. RFMD's MBE Fab is currently the largest MBE operation in the world and is continuing to expand well into the future. This operation provides epitaxial wafers to RFMD's integrated circuit fabrication facilities. These IC's are provided to all the major manufacturers of cell phones and wireless applications.

The facilities and equipment are state-of-the-art. No expense has been spared to ensure a world-class operation. RFMD is a public company, listed on the NASDAQ as RFMD, and is demonstrating strong growth in customer base and market share. In addition to state-of-the-art facilities, we offer competitive salaries and outstanding benefits. Please submit resume, including job code, to: **RF Micro Devices, Human Resources (Job Code: CS-3-03), 7628 Thorndike Road, Greensboro, NC 27409-9421; or e-mail: rfmd@rpc.webhire.com.**

A Great Start: **www.rfmd.com**

Employment Advertisements

Compound Semiconductor is the number one publication in the compound semiconductor field, with readers at virtually every fab and lab in the industry. If you are looking for managers, engineers and technicians with III-V experience, advertising in *Compound Semiconductor* is your most cost-effective option.

Specifications Please submit your advertisement as a 300 dpi, CMYK, Acrobat 3.0 compatible PDF file with all fonts embedded. If you do not have an advertisement, we can prepare one for you – simply e-mail us your text and a copy of your logo.

Deadlines May issue – April 8; June issue – May 15

Rates and sizes Please contact Dan Huckle or Joanna Hook, or download our media pack in PDF format from our website.

Contact Dan Huckle or Joanna Hook, Compound Semiconductor, Institute of Physics Publishing, Dirac House, Temple Back, Bristol BS1 6BE, UK. Tel: +44 (0)117 930 1033. Fax: +44 (0)117 930 1178. E-mail: dan.huckle@iop.org or joanna.hook@iop.org.

compoundsemiconductor.net

Got a new product?

Our Product Showcase section offers cost-effective advertising in print and electronic formats.

Purchase a Product Showcase classified ad in *Compound Semiconductor* magazine (75-word description, product photo and contact details) and the same ad will appear on the *CompoundSemiconductor.net* website for one month – at no extra charge!

Contact Joanna Hook on tel: +44 117 930 1032/1033 or e-mail: joanna.hook@iop.org

RFIC makers enjoy handset boom

While fiber-optic component makers and companies supplying materials and equipment continued to struggle, RFIC and LED manufacturers generally performed well in the final quarter of 2002.



After a blockbuster performance by Cree in the December 2002 quarter, when the LED maker recorded a 16% sequential increase in revenue, RF Micro Devices did even better. The RFIC supplier had quarterly sales of \$145.8 m, soaring past analysts' expectations of \$131.9 m. The revenue figure compared with \$119.7 m in the September 2002 quarter and \$100.6 m in the year-ago period. The company attributed its success to strong growth in PA sales in response to demand from handset manufacturers. RFMD expects to see sequential revenue growth throughout 2003, combined with pressure on its gross margins due to a decline in average selling prices and a continued shift from MMICs

to modules (modules now account for 62% of RFMD's revenue). Plans to mitigate against this decline include converting RFMD's second fab to 6 inch operation.

Skyworks and TriQuint

Skyworks Solutions reported \$160.2 m in revenue together with an operating profit of \$6.4 m and a net loss after deductions of \$1.93 m. The December period marked Skyworks' sixth consecutive quarter of revenue growth with improving operating results. The company expects sequential revenue growth in the seasonally weak March quarter, driven by the ramp-up of recent design wins and increasing market share.

TriQuint's revenue grew slightly in the December 2002 quarter to \$72.7 m, but the company took several charges and adjustments that contributed to a large loss of \$149.6 m. The charges included \$49 m relating to excess capacity and facility space in TriQuint's Oregon operation; \$15.7 m relating to investments in non-public companies, which are continuing to struggle with the downturn in the technology sector; and \$39.9 m for certain intangible assets and goodwill associated with acquisitions. Without the charges and adjustments, TriQuint would have reported a loss of \$2 m. TriQuint's annual revenue for 2002 was \$267.3 m, a drop of 20% compared with \$335 m in fiscal 2001. The company believes that its revenue in 2003 could be in the \$340 m to \$375 m range, helped by growth in the wireless market and \$50 m to \$75 m in revenue from the former Agere optoelectronics business.

Celeritek and Sirenza

Celeritek's revenue was \$10.5 m, down 32% compared with \$15.5 m in the previous quarter. The company expects sales of \$8 m to \$9 m in the March quarter. Celeritek's semiconductor revenue was \$5.5 m compared with \$11.4 m in the previous quarter. This drop reflects the previously announced decision of Motorola, a primary buyer of Celeritek's PA modules, to discontinue its strategy of dual-sourcing PA modules. Subsystem revenue in the December 2002 quarter grew to \$5.0 m compared with \$4.1 m in the previous quarter, and was all from defense customers.

Sirenza Microdevices reported December quarter revenue of \$5.8 m, along with a net loss of \$5.1 m after charges relating to a 7% reduction in force and consolidation of its facilities. Sirenza also recorded an impairment charge of \$2.9 m to reduce the fair market value of its investment in GaAs and InP foundry Global Communication Semiconductors.

Market overview

Company	Symbol	Closing price on Feb 18	52-week low-high	Market cap*
GaAs IC companies				
Anadigics	ANAD	1.88	1.59-14.09	57.5 m
Celeritek	CLTK	6.95	5.01-11.16	85.8 m
Endwave	ENWV	1.02	0.32-4.60	9.1 m
RF Micro Devices	RFMD	6.45	5.159-22.19	1.181 bn
Sirenza Microdevices	SMDI	1.45	1.10-6.55	43.2 m
Skyworks Solutions	SWKS	6.55	2.89-21.60	904.4 m
TriQuint	TQNT	3.00	2.55-13.09	397.5 m
Vitesse	VTSS	2.02	0.62-10.47	409.4 m
Opto companies				
Agilent	A	12.49	10.50-37.99	5.833 bn
Alcatel Optronics	ALAO	7.35	1.50-7.55	121.3 m
Cree	CREE	16.14	8.989-25.42	1.182 bn
JDS Uniphase	JDSU	2.81	1.58-6.90	3.977 bn
Semiconductor materials and equipment companies				
ATMI	ATMI	18.55	11.75-37.10	568.4 m
AXT	AXTI	1.08	0.94-12.00	24.3 m
Emcore	EMKR	2.24	0.98-10.48	82.5 m
Kopin	KOPN	4.5	1.93-10.93	312.2 m
Tegal	TGAL	0.55	0.13-1.53	8.4 m
Trikon	TRKN	4.73	3.25-15.90	66.3 m
Veeco	VECO	13.88	9.14-38.80	404.5 m
European companies (currency data in €)				
Aixtron	AIXG.F	3.17	3.15-23.53	199 m
Bede	BED.L	0.29	0.23-3.19	8.2 m
Bookham	BHM.L	1.23	0.60-2.76	252.7 m
Filtron	FTCL	1.33	0.39-6.73	94.76 m
IQE	IQE.L	0.04	0.01-2.93	8.64 m
Picogiga	PGIG.LN	0.35	0.3-5.62	2.3 m
Riber	RIBE.LN	0.8	0.55-5.66	15.1 m
STS	SRTS.L	0.13	0.07-2.58	4.17 m

*Market capitalization = # shares × current share price.

EQUIPMENT

Global Phosphorus Solutions

■ **Innovative Reactors**

In 1982, Riber develops the industry's first phosphorus-dedicated MBE research system.

■ **Patented Phosphorus Sources**

In 1992, Riber introduces the zero-burst valved phosphorus cracker cell design that is now used by all major component manufacturers.

■ **Full-Service Application Lab**

In 2002, Riber inaugurates the industry's first indium phosphide application lab to accompany you from start up through full production of phosphorus-containing compound semiconductor materials.

If you want to visit our application laboratory and find out more about our global phosphorus solutions for growth, characterization and maintenance, please contact us today at:

RIBER

133, bd National


92503 Rueil-Malmaison Cedex / France

Tel: +33 (0) 1 47 08 84 35

Fax: +33 (0) 1 47 08 32 39

e-mail: info@riber.com

Web site: www.riber.com

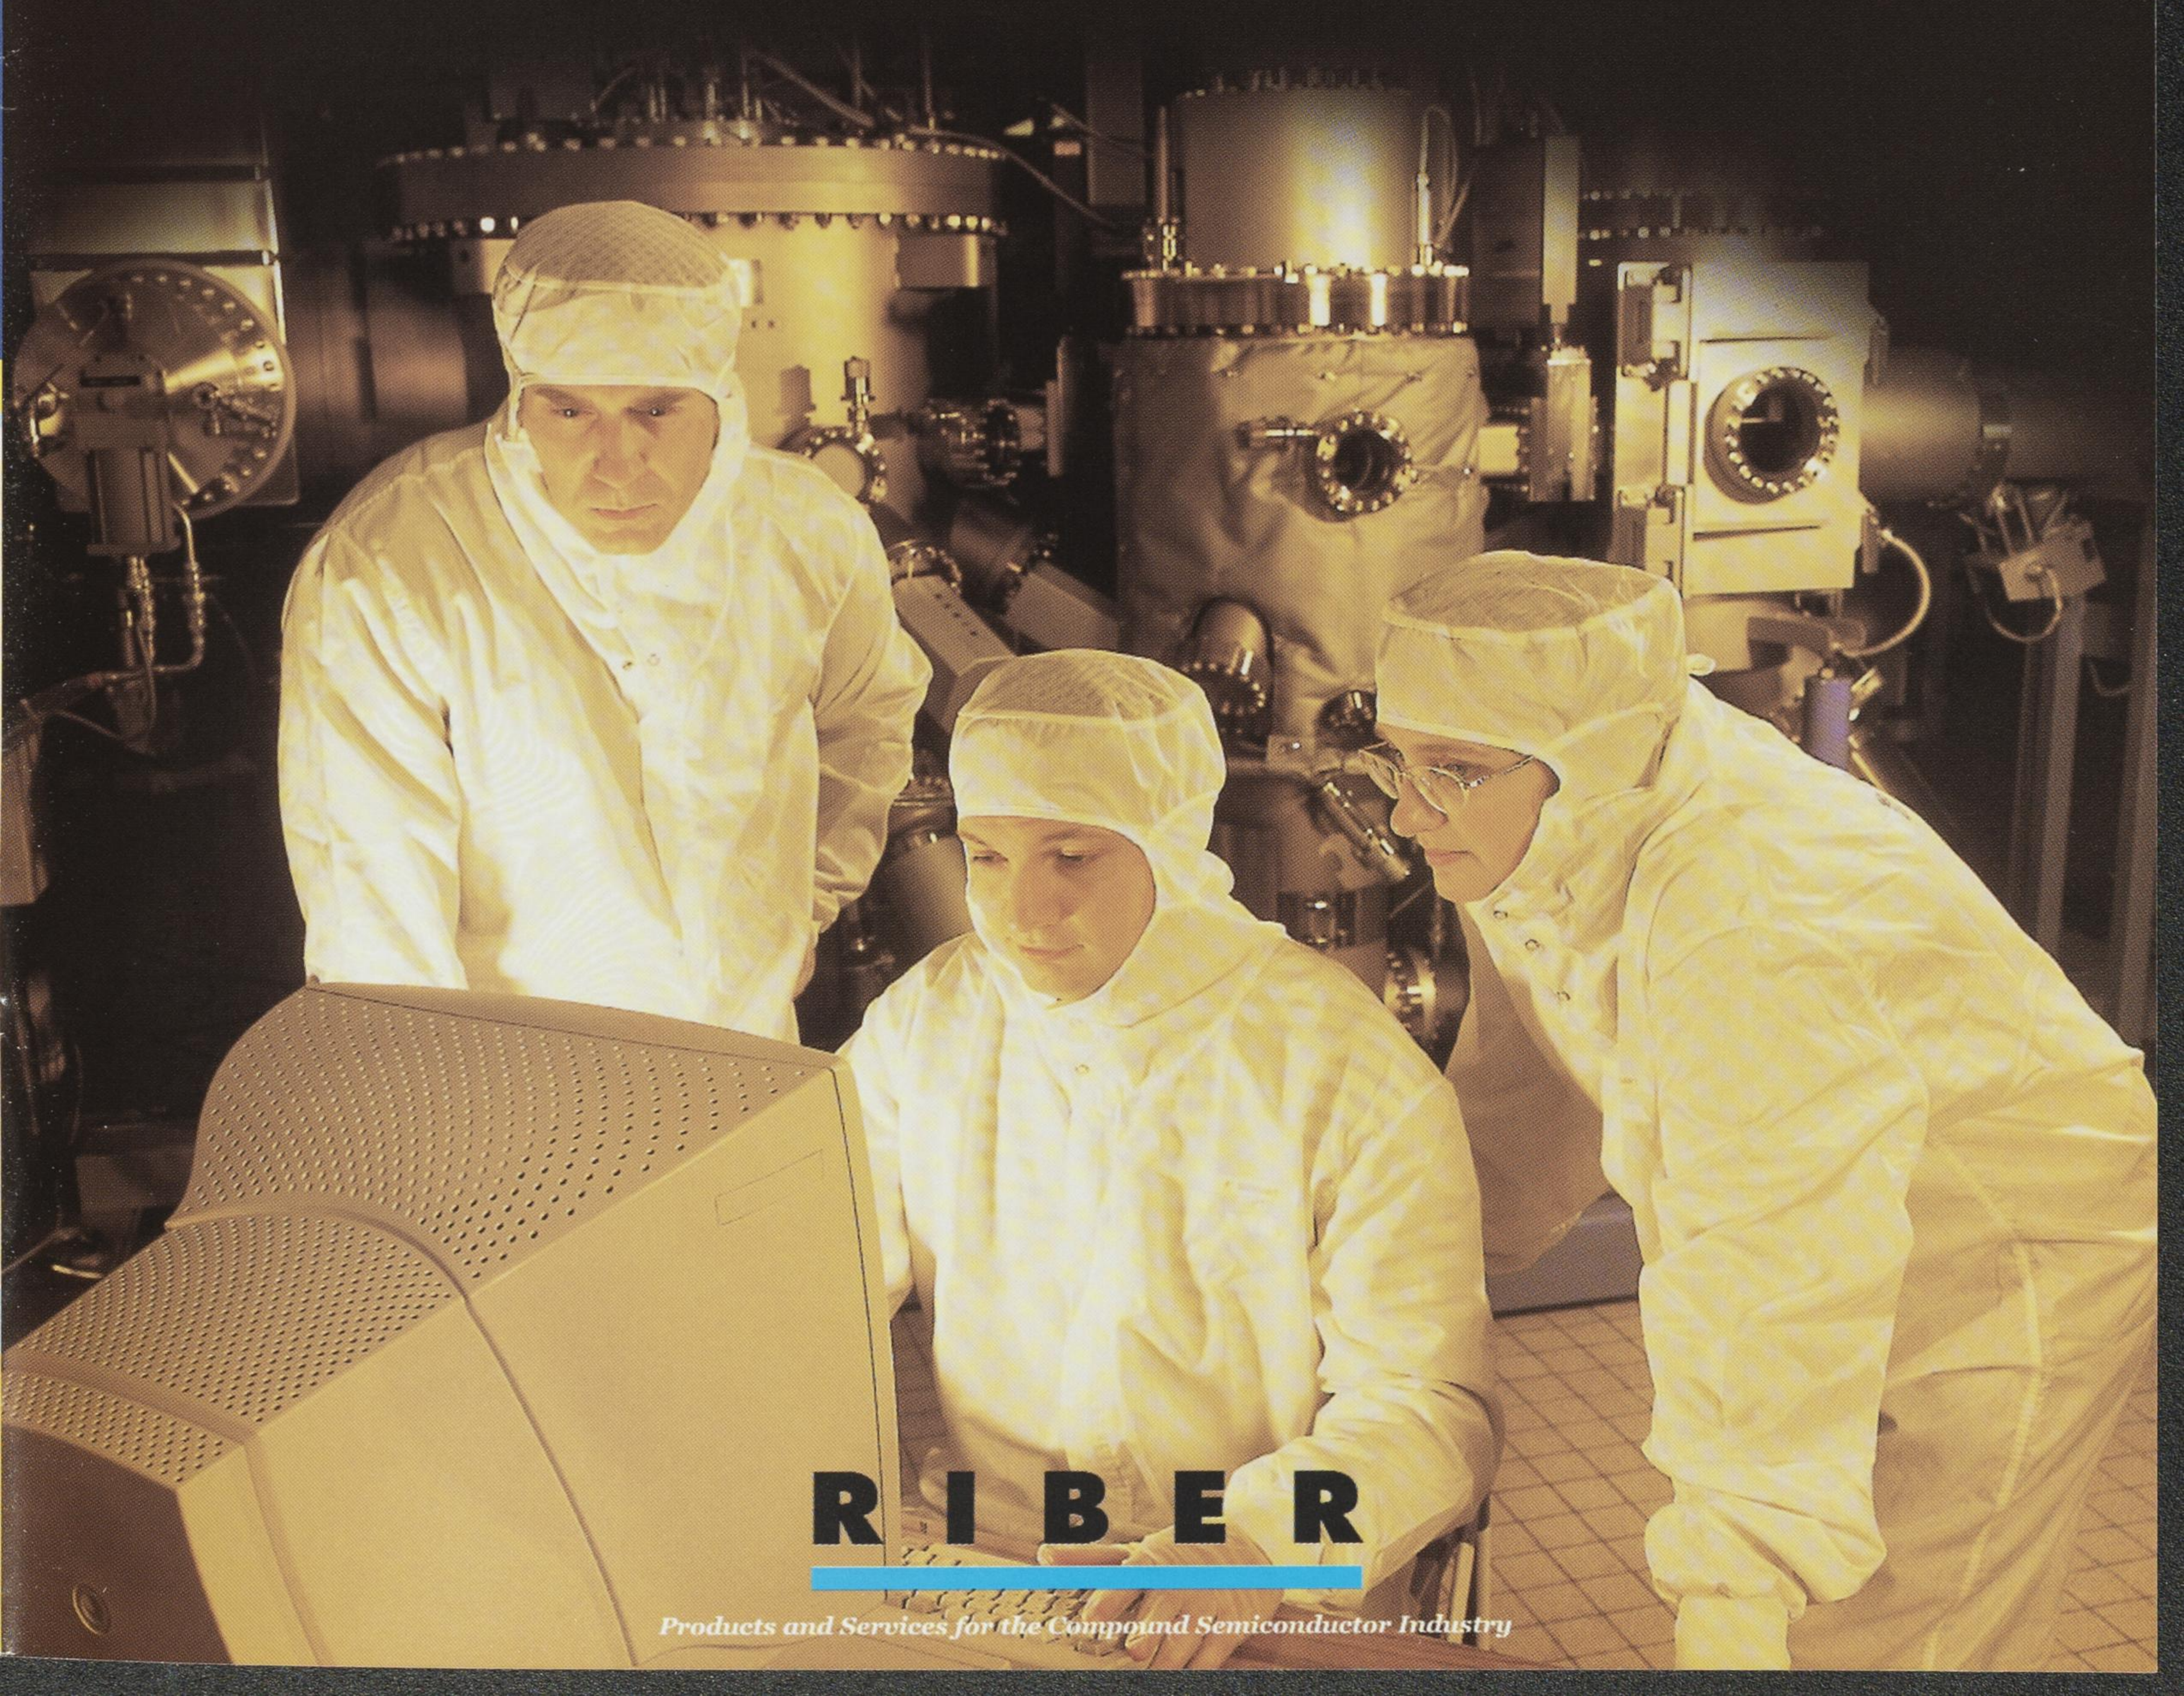


RIBER

Products and Services for the Compound Semiconductor Industry

2000 Expanded lead in R&D/components
2001 Redefined production MBE
2002 Established MBE leadership
2003 Applied Epi is now Veeco

21st century MBE has arrived.

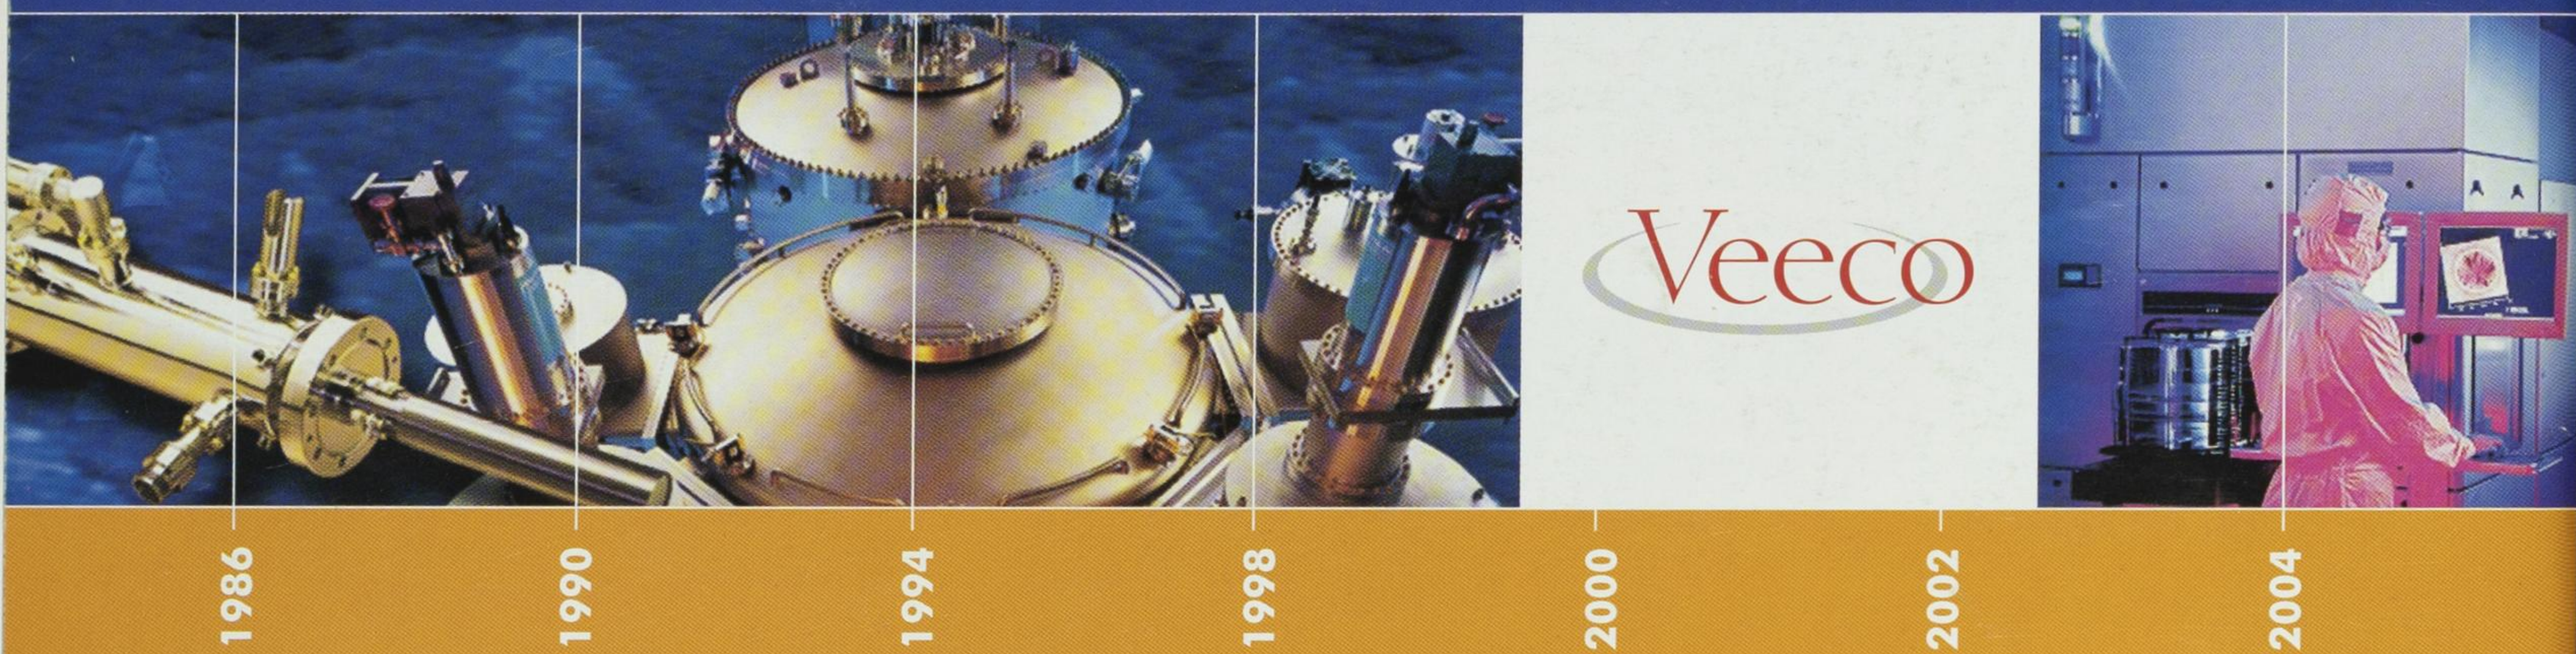

Applied Epi has long been the leader in molecular beam epitaxy (MBE) components. The rapid adoption of our R&D and "silicon-style" production tools has now made us the world's largest MBE equipment supplier.

Now, as Veeco, we're more rapidly advancing MBE from a lab to fab technology for today's emerging devices. With 2X the investment in our MBE product R&D. The launch of our Process Integration Center. And an unmatched global service organization.

Plus we're championing the convergence of MBE with the broader semiconductor world. By aligning MBE with our other process and metrology solutions. And by working with you to develop next generation processes. It's the 21st century, and 21st century MBE is here: Veeco MBE.

www.veeco.com/mbe
1.651.482.0800